

[Manuals.plus](#) /

› [Medeli](#) /

› Medeli SP4200 Digital Piano Stand User Manual

Medeli MESSP4200

Medeli SP4200 Digital Piano Stand User Manual

Model: MESSP4200 | Brand: Medeli

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Medeli SP4200 Digital Piano Stand. This stand is specifically designed for the Medeli SP4200 digital piano and includes an integrated bottom rail with three piano-style pedals. Please read this manual thoroughly before assembly and use to ensure proper setup and longevity of your product.

SAFETY INFORMATION

- Always assemble the stand on a flat, stable surface to prevent tipping.
- Ensure all screws and fasteners are securely tightened before placing the digital piano on the stand.
- Do not exceed the recommended weight capacity of the stand. This stand is designed for the Medeli SP4200 digital piano.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid placing the stand in areas with extreme temperatures, high humidity, or direct sunlight.
- Do not attempt to modify the stand. Any modifications may compromise its stability and void the warranty.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Left Side Panel (1)
- Right Side Panel (1)
- Bottom Rail with Integrated 3-Pedal Unit (1)
- Assembly Hardware (Screws, Washers, Allen Wrench)
- User Manual (This document)

SETUP AND ASSEMBLY

Assembly of the Medeli SP4200 Digital Piano Stand is required. Follow these steps carefully:

Step 1: Prepare Components

Unpack all components and lay them out on a soft, clean surface to prevent scratches. Identify the Left Side Panel, Right Side Panel, and the Bottom Rail with the integrated 3-pedal unit.

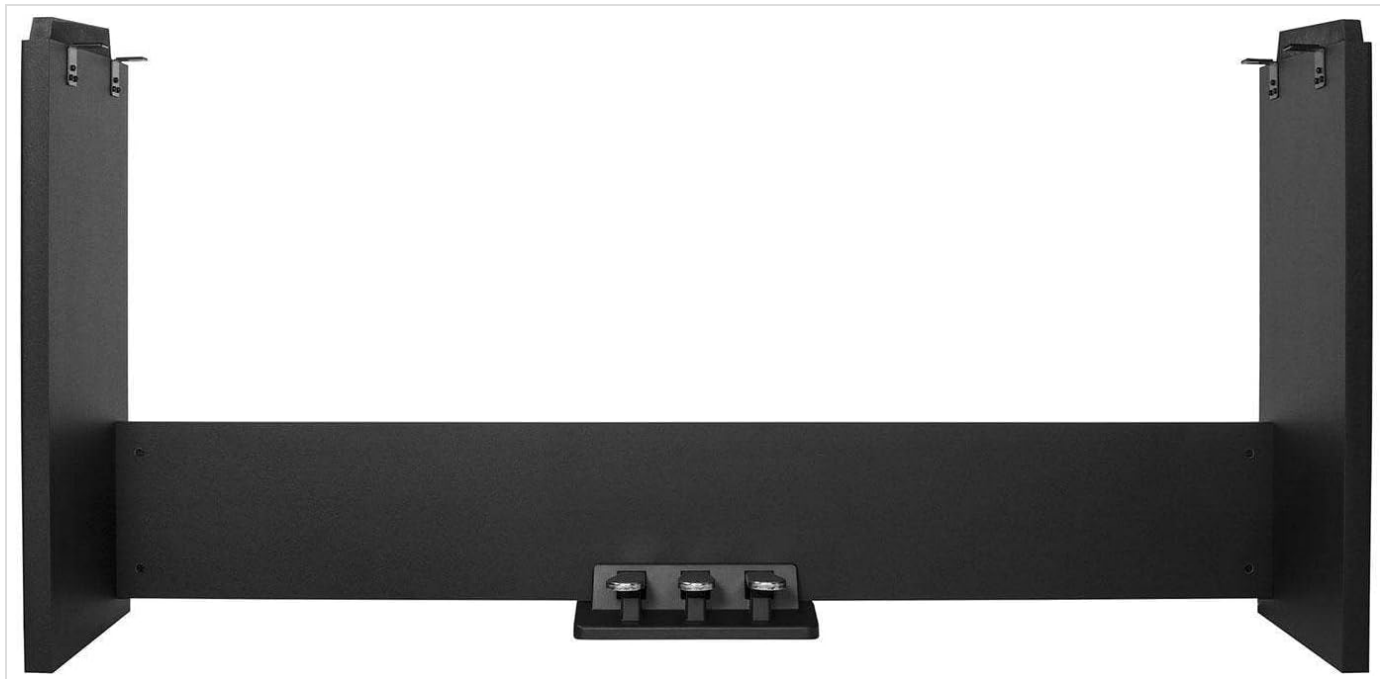


Figure 1: Rear view of the stand components, highlighting the side panels and the pedal unit.

Step 2: Attach Side Panels to Bottom Rail

Align one of the side panels with the corresponding mounting points on the Bottom Rail. Secure it using the provided screws and the Allen wrench. Do not overtighten initially. Repeat this process for the other side panel.



Figure 2: Detail of the integrated 3-pedal unit on the bottom rail.

Step 3: Final Tightening and Placement

Once both side panels are attached, gently stand the assembled frame upright. Ensure it is stable and level. Now, fully tighten all screws. Place the Medeli SP4200 digital piano securely onto the top of the assembled stand, ensuring it sits flush and is stable.



Figure 3: Fully assembled Medeli SP4200 Digital Piano and Stand.



Figure 4: Angled view of the assembled piano and stand.

OPERATING THE PEDALS

The Medeli SP4200 Digital Piano Stand features a three-pedal unit that connects directly to your Medeli SP4200 digital piano. These pedals replicate the functionality of acoustic piano pedals:

- **Right Pedal (Sustain/Damper Pedal):** This is the most commonly used pedal. Pressing it sustains the notes played, allowing them to ring out even after the keys are released. Releasing the pedal stops the sustain.
- **Middle Pedal (Sostenuto Pedal):** This pedal sustains only the notes that are held down at the moment the pedal is pressed. Subsequent notes played after the pedal is pressed will not be sustained.
- **Left Pedal (Soft/Una Corda Pedal):** This pedal reduces the volume and slightly alters the timbre of the notes played, creating a softer sound.

Ensure the pedal unit's cable is securely connected to the appropriate input on your Medeli SP4200 digital piano for proper functionality.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Medeli SP4200 Digital Piano Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents, as they may damage the black finish.
- **Pedals:** Keep the pedal area free of dust and debris. If the pedals become stiff or noisy, a small amount of silicone-based

lubricant can be applied to the pivot points, but avoid over-lubrication.

- **Stability:** Periodically check all assembly screws to ensure they remain tight. Loose screws can lead to instability.
- **Environment:** Store and use the stand in a stable environment, away from direct sunlight, extreme temperatures, and high humidity, which can affect the wood and finish.

TROUBLESHOOTING

If you encounter issues with your Medeli SP4200 Digital Piano Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Screws are loose; uneven assembly; uneven floor.	Ensure all assembly screws are fully tightened. Re-assemble if necessary, ensuring components are aligned. Move to a level surface.
Pedals are not functioning.	Cable not connected; cable damaged; piano settings.	Verify the pedal unit cable is securely plugged into the correct port on your Medeli SP4200 digital piano. Check the cable for visible damage. Consult your piano's manual for pedal settings.
Pedals feel stiff or noisy.	Dust/debris; lack of lubrication.	Clean the pedal mechanism. Apply a small amount of silicone-based lubricant to the pedal pivot points if needed.

SPECIFICATIONS

Model Name	MESSP4200 Digital
Brand	Medeli
Color	Black
Item Weight	35.5 pounds (approx. 16.1 kg)
Product Dimensions (L x W x H)	55 x 15.5 x 8.5 inches (approx. 139.7 x 39.4 x 21.6 cm)
Connectivity Technology	Auxiliary (for pedal connection to piano)
Compatible Instrument	Medeli SP4200 Digital Piano

WARRANTY AND SUPPORT

Medeli products are manufactured to high quality standards. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your original purchase or visit the official Medeli website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Medeli customer support through their official channels.