

[Manuals.plus](#) /

› [CACAZI](#) /

› CACAZI Wireless Doorbell K01 Instruction Manual

CACAZI K01

CACAZI Wireless Doorbell K01 Instruction Manual

Model: K01

1. INTRODUCTION

Thank you for choosing the CACAZI Wireless Doorbell K01. This kit provides a convenient and reliable solution for your home or office, featuring a waterproof push button and a plug-in receiver with multiple chime options and adjustable volume. Please read this manual carefully before installation and use to ensure proper operation and longevity of your device.

2. PRODUCT OVERVIEW

Key Features:

- Wireless operation with a range of up to 600 feet (200 meters) in open space.
- 36 selectable chimes.
- 4 adjustable volume levels, up to 85dB.
- Waterproof (IP44 rated) transmitter push button.
- Easy installation with no wiring required.

Package Contents:

- 1 x Wireless Doorbell Transmitter (Push Button)
- 1 x Plug-in Doorbell Receiver
- 1 x 12V23A Alkaline Battery (pre-installed in transmitter)
- 1 x Double-sided Adhesive Tape
- 1 x Screw Kit (screws and anchors)



Image: The CACAZI Wireless Doorbell kit, showing the silver plug-in receiver and the matching silver push button transmitter.

STRONG SIGNAL
Wireless range up to 300 m



Image: Detailed view of the doorbell receiver, highlighting the chime selection button, volume adjustment button, LED light indicator, and high-quality speaker. The receiver plugs directly into a wall outlet and does not require batteries.



Launcher waterproof design

Meet the IP44 standard

Image: Close-up of the doorbell transmitter, illustrating its waterproof design, which meets the IP44 standard for outdoor use.



Image: Diagram illustrating the wireless signal range of the doorbell system, showing coverage up to 300 meters (approximately 984 feet). The product description specifies an operating range of 600 feet (200 meters) in open space.

3. SETUP AND INSTALLATION

The CACAZI Wireless Doorbell is designed for easy, wire-free installation. Follow these steps to set up your doorbell system.

Step 1: Install the Receiver

1. Plug the receiver into a standard electrical outlet (110-220V) in a central location within your home or office.
2. Ensure the outlet is easily accessible and not obstructed.

Step 2: Install the Transmitter (Push Button)

The transmitter comes with a pre-installed 12V23A alkaline battery. Do not place the push button on an iron door or metal surface, as this can interfere with the wireless signal.



Image: Visual guide for installing the doorbell transmitter. Solution A shows mounting with double-sided tape. Solution B shows mounting with screws and anchors after opening the transmitter casing to access mounting holes.

Option A: Using Double-Sided Adhesive Tape

1. Clean the desired mounting surface thoroughly to ensure it is dry and free of dust or grease.
2. Peel off one side of the protective film from the double-sided adhesive tape and apply it firmly to the back of the transmitter.
3. Peel off the other side of the protective film and press the transmitter firmly onto the cleaned surface for at least 30 seconds.

Option B: Using Screws and Anchors

1. Carefully open the back casing of the transmitter to expose the mounting holes.
2. Mark the desired drilling spots on the wall using the transmitter's mounting holes as a guide.
3. Drill pilot holes if necessary and insert the wall anchors.
4. Secure the transmitter's back casing to the wall using the provided screws.

5. Snap the front part of the transmitter back onto the secured casing.

4. OPERATING INSTRUCTIONS

Changing Chimes:

To select a different melody, press the chime selection button located on the side of the receiver. Each press will cycle through the 36 available chimes. Stop pressing when you hear your preferred melody.

Adjusting Volume:

To adjust the volume level, press the volume button on the side of the receiver. There are 4 volume levels to choose from. Each press will cycle through the volume settings (low, medium, high, mute).

Pairing (if needed):

Your doorbell kit is pre-paired at the factory. If re-pairing is necessary (e.g., after a power outage or adding another transmitter/receiver), follow these steps:

1. Plug in the receiver.
2. Press and hold the volume button on the receiver for approximately 5 seconds until you hear a 'ding' sound and the LED indicator flashes rapidly. The receiver is now in pairing mode.
3. Immediately press the push button on the transmitter. The receiver will chime, indicating successful pairing.
4. Test the doorbell by pressing the transmitter button.

5. MAINTENANCE

Cleaning:

Wipe the doorbell receiver and transmitter with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

Transmitter Battery Replacement:

The transmitter is powered by a 12V23A alkaline battery, which typically lasts about 2 years. When the doorbell's range decreases or the transmitter stops working, it's time to replace the battery.

1. Carefully open the back casing of the transmitter (you may need a small screwdriver).
2. Remove the old 12V23A battery.
3. Insert a new 12V23A alkaline battery, ensuring the correct polarity (+/-).
4. Close the back casing securely.

Note: The receiver plugs into a wall circuit and does not require batteries.

6. TROUBLESHOOTING

- **No sound from receiver:**

- Ensure the receiver is properly plugged into a live electrical outlet.
- Check if the volume is set to mute. Press the volume button to increase the volume.
- Replace the battery in the transmitter if it's old or depleted.
- Re-pair the transmitter and receiver (refer to Section 4: Operating Instructions - Pairing).

- **Short operating range or intermittent signal:**

- Ensure the transmitter is not mounted on an iron door or a large metal surface, as this can block the signal.
 - Relocate the receiver to a more central position, away from large metal objects, thick walls, or other electronic devices that may cause interference.
 - Replace the transmitter battery.
- **Transmitter not working:**
 - Check and replace the 12V23A battery in the transmitter.
 - Ensure the transmitter and receiver are paired correctly.

7. SPECIFICATIONS

Model Number	K01
Working Range	Up to 600 feet (200 meters) in open space
Melodies	36 Chimes
Volume Levels	4 levels (up to 85dB)
Transmitter Battery	1 x 12V23A Alkaline Battery (included)
Receiver Power Source	AC 110-220V (US Plug)
Transmitter Dimensions	80 x 45 mm
Receiver Dimensions	90 x 62 mm
Waterproof Rating	IP44 (Transmitter)
Average Battery Life (Transmitter)	2 years

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question