

[Manuals.plus](#) /

› [SOS ACCESSOIRE](#) /

› SOS ACCESSOIRE Bosch 00611472 Dishwasher Lower Basket Clips (8 Pieces) Instruction Manual

SOS ACCESSOIRE 00611472

Instruction Manual for SOS ACCESSOIRE Dishwasher Lower Basket Clips

MODEL: 00611472

1. Product Overview

The SOS ACCESSOIRE 00611472 lower basket clips are replacement parts designed to secure the lower rack in various dishwasher models. This set includes 8 clips, essential for maintaining the stability and correct positioning of your dishwasher's lower basket, ensuring efficient dishwashing.

These clips are compatible with a wide range of dishwasher brands, including but not limited to: **BOSCH, NEFF, SIEMENS, GAGGENAU, BALAY, BLAUPUNKT, KUEPPERSBUSCH, PITSOS, THERMADOR**, and **GOENJE**.



Image 1.1: The SOS ACCESSOIRE 00611472 lower basket clips. The set contains 8 clips, including two larger clips (54 x 13 x 10 mm) and six smaller clips (30 x 13 x 10 mm).

2. Installation Instructions

Follow these steps to install the lower basket clips:

1. **Identify the damaged clips:** Carefully remove the lower dishwasher basket and inspect the existing clips that hold the rack in place. Note their positions and the type of clip (larger or smaller) used in each location.
2. **Remove old clips:** Gently detach any broken or worn-out clips from the dishwasher rack.
3. **Select appropriate clips:** The set includes 8 clips: two clips measuring 54 x 13 x 10 mm and six clips measuring 30 x 13 x 10 mm. Choose the correct size clip for each specific attachment point on your dishwasher basket.
4. **Install new clips:** Position the new clip over the designated attachment point on the lower basket. Apply firm, simple pressure until the clip snaps securely into place. Ensure it is fully seated and stable.
5. **Verify stability:** After installing all necessary clips, gently test the stability of the lower basket. The clips should hold

the basket firmly, preventing it from dislodging during operation.

Note: Ensure the dishwasher is unplugged from the power supply before attempting any installation or maintenance.

3. Usage and Function

These clips are designed to securely hold the dishwasher's lower basket in its correct position. They prevent the basket from moving excessively or falling out of its runners, which is crucial for the proper functioning of the spray arms and overall washing performance. By keeping the basket stable, the clips ensure that dishes are properly exposed to water and detergent.

4. Maintenance

The SOS ACCESSOIRE 00611472 clips are replacement parts and generally require no specific maintenance. However, it is recommended to periodically inspect them for signs of wear, cracking, or damage. If a clip appears loose or broken, replace it promptly to maintain the stability of your dishwasher's lower basket. Clean the clips as part of your regular dishwasher cleaning routine to prevent residue buildup.

5. Troubleshooting

- Basket not secure or clips detaching:**

Ensure that the correct size clip has been used for each attachment point. Apply firm and even pressure during installation to ensure the clip is fully seated and locked into place. If the clip still detaches, inspect the attachment point on the basket for any damage that might prevent a secure fit. Consider replacing the clip if it appears faulty.
- Difficulty installing clips:**

Verify that you are using the correct clip for the specific location. Some clips may require a bit more force to snap into place. Ensure proper alignment before applying pressure. Do not force clips if they do not align, as this may cause damage.

6. Specifications

Model Number	00611472
Brand	SOS ACCESSOIRE
Quantity	8 pieces
Clip Dimensions (Large)	2 clips, 54 x 13 x 10 mm (Length x Width x Height)
Clip Dimensions (Small)	6 clips, 30 x 13 x 10 mm (Length x Width x Height)
Material	Stainless Steel (as listed in product specifications)
Total Item Weight	20 g
Compatibility	BOSCH, NEFF, SIEMENS, GAGGENAU, BALAY, BLAUPUNKT, KUEPPERSBUSCH, PITSOS, THERMADOR, GORENJE

7. Warranty and Support

For specific warranty information regarding the SOS ACCESSOIRE 00611472 lower basket clips, please refer to the purchase documentation or contact the seller directly.

For technical support or further assistance, please contact the manufacturer or the seller, SOS-Accessoire, through their official channels.

This manual provides general instructions for the SOS ACCESSOIRE 00611472 clips. Always refer to your dishwasher's specific manual for model-specific instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question