Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Huayu /
- > Huayu RM-L1370 Remote Control for Sony LCD/LED/3D TVs User Manual

Huayu RM-L1370

Huayu RM-L1370 Remote Control for Sony LCD/LED/3D TVs User Manual

Model: RM-L1370

INTRODUCTION

This manual provides instructions for the Huayu RM-L1370 remote control, designed for use with a wide range of Sony LCD, LED, and 3D televisions. This remote offers direct access to popular streaming services like YouTube and Netflix and operates without requiring any complex setup or programming.

SETUP

Battery Installation

The Huayu RM-L1370 remote control requires two AA batteries (not included) for operation.

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover downwards or press the latch to open it.
- 3. Insert two AA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Replace the battery compartment cover, pushing it until it clicks securely into place.



Figure 1: Back view of the remote control with the battery compartment. Insert two AA batteries as shown, observing polarity.

First Use

The Huayu RM-L1370 remote control is pre-programmed for Sony LCD/LED/3D televisions. No additional configuration or pairing is required. Once batteries are installed, the remote control is ready for immediate use with your compatible television.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:



Figure 2: Front view of the Huayu RM-L1370 remote control, highlighting all functional buttons.

- Power Button (•): Turns the television on or off.
- TV/RADIO: Switches between TV and Radio modes.
- **DIGITAL/ANALOG ANT**: Toggles between digital and analog antenna inputs.
- EXIT: Exits the current menu or function.
- 3D: Activates or deactivates 3D mode (if supported by TV).
- SYNC MENU: Accesses the BRAVIA Sync menu for connected devices.
- Number Pad (0-9): Used for direct channel selection or inputting numbers.
- . (Dot): Used for decimal points in channel numbers or other inputs.
- - (Dash): Used for sub-channels or other specific functions.
- YouTube Button: Provides direct access to the YouTube application.

- **Netflix Button**: Provides direct access to the Netflix application.
- SLEEP: Sets the sleep timer for the television.
- **GUIDE**: Displays the electronic program guide (EPG).
- OPTIONS: Displays context-sensitive options for the current screen.
- RETURN: Returns to the previous screen or menu.
- HOME: Accesses the TV's main home menu.
- Directional Pad (Up, Down, Left, Right): Navigates through menus and options.
- Center Button: Confirms selections.
- CH/PROG (+/-): Changes television channels up or down.
- AUDIO: Selects audio tracks or modes.
- CC (Closed Caption): Toggles closed captions on or off.
- Volume (+/-): Adjusts the television's volume level.
- Mute: Mutes or unmutes the television's audio.
- Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Skip): Controls playback of media content.

COMPATIBILITY

The Huayu RM-L1370 remote control is compatible with a wide range of Sony LCD, LED, and 3D television models. It replaces numerous original Sony remote controls, including but not limited to:

RM-1028, RM-YD018, RM-940, RM-Z5401, RM-EA002, RM-YD021, RM-943, RM-ED016, RM-EA006, RM-YD025, RM-945, RM-ED016W, RM-ED007, RM-YD026, RM-946, RM-ED018, RM-ED009, RM-YD028, RM-952, RM-ED019, RM-ED011, RM-YD035, RM-953, RM-ED032, RM-ED011W, RM-857, RM-954, RM-ED034, RM-ED012, RM-857A, RM-955, RM-ED035, RM-ED013, RM-858, RM-956, RM-ED036, RM-ED014, RM-859, RM-961, RM-ED037, RM-ED033, RM-861, RM-963, RM-ED038, RM-GA005, RM-862, RM-969, RM-ED040, RM-GA008, RM-869, RM-972, RM-ED041, RM-GA009, RM-870, RM-991, RM-ED044, RM-GA019, RM-871, RM-992, RM-ED045, RM-SA007, RM-873, RM-993, RM-ED046, RM-W102, RM-878, RM-GA002, RM-ED047, RM-W105, RM-881, RM-W101, RM-ED050, RM-W109, RM-883, RM-W103, RM-ED052, RM-Y1109, RM-887, RM-W103, RM-ED053, RM-Y135A, RM-889, RM-W104, RM-ED054, RM-Y136, RM-890, RM-Y101, RM-ED060, RM-Y139, RM-891, RM-Y116, RM-GA015, RM-Y167, RM-892, RM-Y145, RM-GA016, RM-Y169, RM-893, RM-Y145A, RM-GA018, RM-Y181, RM-916, RM-Y146A, RM-GD022, RM-Y916, RM-921, RM-Y172, RM-YD047, RM-YD006, RM-933, RM-Y173, RM-YD079, RM-YD005, RM-936, RM-Y183, RM-YD017, RM-938, RM-Y194.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote control's electronics.

TROUBLESHOOTING

If you experience issues with your Huayu RM-L1370 remote control, consider the following:

• Remote Not Responding:

- Ensure the batteries are correctly inserted and are not depleted. Replace them with fresh AA batteries if necessary.
- Verify there are no obstructions between the remote control and the television's infrared receiver.
- Point the remote control directly at the television's infrared sensor.
- o Confirm that your television is a compatible Sony LCD, LED, or 3D model.

• Buttons Not Functioning Correctly:

- Check for any physical damage or debris lodged under the buttons.
- If specific buttons are unresponsive, try replacing the batteries.

SPECIFICATIONS

Brand:

Huayu

Model:

RM-L1370

Compatible Devices:

Sony LCD/LED/3D Televisions

Connectivity Technology:

Infrared

Power Source:

2 x AA batteries (not included)

Product Dimensions:

19.9 x 4.8 x 1.9 cm

Product Weight:

100 g

Maximum Range:

10 Meters

Special Features:

Direct access to YouTube and Netflix, no setup required

Related Documents - RM-L1370



Οδηγός Χρήσης Universal Τηλεχειριστηρίου HUAYU RM-L1385

Οδηγίες για τη ρύθμιση και χρήση του universal τηλεχειριστηρίου HUAYU RM-L1385, με χειροκίνητη και αυτόματη αναζήτηση κωδικού.



HUAYU RM-L1785 Universal Remote Control for VESTEL TVs - Compatible Models

Discover the HUAYU RM-L1785 universal remote control, designed for VESTEL LCD/LED TVs. This document lists compatible remote models and their characteristics, ensuring seamless TV operation.



HUAYU RM-L1508 Universal LCD TCL Remote Control

User guide for the HUAYU RM-L1508 Universal LCD TCL Remote Control, including specifications, compatible TV models, and automatic code searching instructions.



HUAYU RM-L1772 Universal Remote Control for VESTEL TVs - Compatibility List

Detailed information about the HUAYU RM-L1772 universal remote control, designed for VESTEL LCD/LED TVs. Includes characteristics and a comprehensive list of compatible remote control models.



HUAYU RM-L1195+X Universal Remote Control Compatibility Guide

Explore the HUAYU RM-L1195+X universal remote control, a comprehensive solution compatible with a vast array of TV brands and models. This guide details its features and compatibility.



HUAYU RM-L1195+ Universal LCD/LED TV Remote Controller Setup Guide

Comprehensive guide to setting up the HUAYU RM-L1195+ universal LCD/LED TV remote controller. Learn how to program your remote using code input, manual search, automatic search, and brand-specific search methods. Includes battery installation and troubleshooting tips.