

## Philips EP5330/10

# Philips 5000 Series EP5330/10 Fully Automatic Coffee Machine User Manual

Your guide to enjoying perfect coffee with ease.

## 1. INTRODUCTION

Welcome to the Philips 5000 Series EP5330/10 fully automatic coffee machine. This appliance is designed to deliver a variety of fresh bean coffee specialties, including espresso, cappuccino, and latte macchiato, with the convenience of the LatteGo milk system. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your machine.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent personal injury or damage. Keep this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, mains plug, or power cord in water or any other liquid.
- Keep the appliance out of reach of children.
- Only use fresh water in the water tank.
- Do not use damaged power cords or plugs. Contact authorized service for repairs.
- Always unplug the appliance before cleaning or if it will be left unattended for a long period.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Philips EP5330/10 coffee machine.



Figure 1: The Philips 5000 Series EP5330/10 fully automatic coffee machine, featuring the LatteGo milk system and control panel.

### Key Components:

- **Control Panel:** Intuitive interface for selecting beverages and adjusting settings.
- **LatteGo Milk System:** Two-part, tube-free milk container for easy cleaning and frothing.
- **Bean Hopper:** For fresh coffee beans.
- **Water Tank:** Removable tank for water supply, compatible with AquaClean filter.
- **Drip Tray:** Collects excess water and coffee.
- **Brewing Group:** The heart of the machine, responsible for brewing coffee.
- **Ceramic Grinder:** Durable grinder with 5 adjustable settings.

## 4. SETUP AND FIRST USE

### 4.1 Unpacking and Placement

1. Remove all packaging materials.

2. Place the machine on a stable, level surface.
3. Ensure adequate ventilation around the machine.

## 4.2 Filling the Water Tank

1. Remove the water tank from the machine.
2. Rinse the tank under running water.
3. Fill the tank with fresh tap water up to the MAX indication.
4. Place the water tank back into the machine.



**Figure 2:** Installing the AquaClean filter into the water tank. This filter helps reduce limescale and improves water quality.

## 4.3 Filling the Bean Hopper

1. Open the lid of the bean hopper.
2. Pour fresh coffee beans into the hopper. Do not use ground coffee in the bean hopper.
3. Close the lid.



**Figure 3:** Fresh coffee beans in the hopper. The grinder adjustment knob is visible, allowing customization of grind fineness.

#### **4.4 Initial Rinse Cycle**

After plugging in the machine and turning it on, the machine will perform an automatic rinse cycle. Place a cup under the coffee spout during this process.

### **5. OPERATING THE MACHINE**

#### **5.1 Making Coffee (Espresso, Coffee, Americano)**

1. Place a cup under the coffee spout.
2. Select your desired coffee beverage (e.g., Espresso, Coffee) from the control panel.
3. Adjust the aroma strength and quantity if desired using the dedicated buttons or menu.
4. Press the start button to begin brewing.



**Figure 4:** A user selecting "Espresso" on the machine's control panel, demonstrating the ease of beverage selection.

## 5.2 Making Milk-Based Drinks (Cappuccino, Latte Macchiato, Café au Lait)

1. Fill the LatteGo milk container with fresh milk up to the indicated level.
2. Attach the LatteGo system to the machine.
3. Place a cup under the milk spout and coffee spout.
4. Select your desired milk beverage (e.g., Cappuccino, Latte Macchiato).
5. Adjust milk and coffee quantity if desired.
6. Press the start button. The machine will first dispense frothed milk, then coffee.



**Figure 5:** The LatteGo system actively frothing milk into a glass, showcasing its efficient milk preparation.



**Figure 6:** The Philips EP5330/10 machine preparing a layered latte macchiato, demonstrating its capability for specialty milk drinks.

### 5.3 Adjusting Settings

- **Aroma Strength:** Select from various strengths for your coffee.
- **Coffee Quantity:** Customize the volume of your coffee.
- **Temperature:** Adjust the brewing temperature (Low, Medium, High).
- **Grind Fineness:** Use the knob inside the bean hopper to adjust the ceramic grinder (5 settings). Adjust only when the grinder is operating.

## 6. MAINTENANCE AND CLEANING

### 6.1 Cleaning the LatteGo System

The LatteGo system is designed for easy cleaning due to its two-part, tube-free construction.

1. After each use, detach the LatteGo system.
2. Rinse both parts under running water or wash in a dishwasher.
3. For storage, the LatteGo can be placed in the refrigerator with milk.



**Figure 7:** Demonstrating the easy cleaning of the LatteGo milk system by rinsing it under running water.



**Figure 8:** The LatteGo milk system can be conveniently stored in the refrigerator with milk, ready for the next use.

## 6.2 Cleaning the Brewing Group

1. Turn off the machine and unplug it.
2. Open the service door and remove the brewing group by pressing the 'PUSH' button and pulling it out.
3. Rinse the brewing group thoroughly under running water.
4. Allow it to air dry completely before reinserting.
5. Clean the inside of the machine with a damp cloth.

## 6.3 Descaling with AquaClean Filter

The patented AquaClean technology allows you to prepare up to 5,000 cups without descaling, provided the filter is changed regularly as indicated by the machine.

- Replace the AquaClean filter when prompted by the machine.
- Follow the on-screen instructions for filter replacement and activation.

## 6.4 General Cleaning

- Empty and clean the drip tray and coffee grounds container daily.
- Wipe the exterior of the machine with a soft, damp cloth.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, brewing group clogged, or air in the system.	Fill water tank, clean brewing group, or dispense hot water to prime the system.
Milk is not frothed properly.	LatteGo system dirty, milk type unsuitable, or milk too warm.	Clean LatteGo system, use cold, fresh milk (preferably semi-skimmed), ensure LatteGo is correctly assembled.
Machine displays descaling alert.	Descaling is required or AquaClean filter needs replacement.	Perform descaling procedure or replace AquaClean filter as per instructions.
Coffee is too weak or too strong.	Grind fineness, aroma strength, or coffee quantity settings are incorrect.	Adjust grind fineness (finer for stronger, coarser for weaker), increase/decrease aroma strength, or adjust coffee volume.

## 8. SPECIFICATIONS

- **Model Number:** EP5330/10
- **Brand:** Philips
- **Dimensions (L x W x H):** 22.1 x 34 x 43 cm
- **Weight:** 7.2 Kilograms
- **Water Tank Capacity:** 1.8 Liters
- **Voltage:** 230V
- **Material:** Stainless Steel, Plastic
- **Special Features:** AquaClean, 2-cup function, Hot water function, Removable brewing group, Milk frother, User profiles, Integrated milk system, Silent grinder, Display.
- **Coffee Type:** Espresso Machine
- **Grinder:** 100% Ceramic, 5 grind settings
- **Milk System:** LatteGo (2 parts, no tubes)

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Philips customer service through their official support channels.