

[manuals.plus](#) /› [TOSHIBA](#) /› [Toshiba CT-RC2US-17 Remote Control Instruction Manual](#)**TOSHIBA CT-RC2US-17**

Toshiba CT-RC2US-17 Remote Control Instruction Manual

Model: CT-RC2US-17

1. INTRODUCTION

This manual provides instructions for the Toshiba CT-RC2US-17 remote control. This remote is designed to operate various Toshiba LCD TV models, offering direct control without the need for complex programming. Simply insert batteries, and the remote is ready for use.

Compatible TV Models: 32L221U, 43L621U, 49L621U, 55L421U, 55L621U, 65L621U (This list may not be exhaustive.)

2. PRODUCT OVERVIEW

The Toshiba CT-RC2US-17 remote control features a standard layout for intuitive operation of your television. Below are images illustrating the front and back of the remote, followed by a description of its primary buttons.



Image 2.1: Front View of Toshiba CT-RC2US-17 Remote Control

This image displays the front of the Toshiba CT-RC2US-17 remote control. It is black with gray buttons. Key buttons visible include Power (red), Input, Sleep, CCD, Sound, Picture, directional arrows, OK, Volume Up/Down, Channel Up/Down, Mute, Info, Menu, Exit, and Game. The Toshiba brand and model number CT-RC2US-17 are printed at the bottom.

Button Functions:

- **Power (Power button)**: Turns the TV on or off.
- **INPUT**: Selects the video input source (e.g., HDMI 1, AV, Component).
- **SLEEP**: Sets the TV to turn off automatically after a specified period.
- **CCD**: Activates or deactivates Closed Captioning.
- **Sound**: Accesses sound settings or sound modes.
- **Picture**: Accesses picture settings or picture modes.
- **INFO**: Displays information about the current program or input.
- **MENU**: Opens the TV's main menu for settings and adjustments.
- **EXIT**: Closes the current menu or on-screen display.
- **MUTE**: Toggles the TV sound on or off.
- **VOL+/-**: Adjusts the volume level.
- **CH+/-**: Changes the TV channel.
- **Directional Arrows (◀ ▲ ▼ ▶)**: Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **GAME**: Activates Game Mode for optimized gaming experience.
- **Play/Pause (▶▶)**: Used for media playback control.

For product support
Go to:
www.tv.toshiba.com
Or call:
US & Canada Market 855.527.2411

Made in China

RRC
ReplacementRemoteControls.com

Image 2.2: Back View of Toshiba CT-RC2US-17 Remote Control

This image shows the back of the Toshiba CT-RC2US-17 remote control. It is plain black with a sticker near the top providing product support information, including a website (www.tv.toshiba.com) and a phone number for the US & Canada Market (855.527.2411). The text 'Made in China' is also visible.

3. SETUP

The Toshiba CT-RC2US-17 remote control is pre-programmed and does not require any setup or coding. To begin using your remote, simply install the batteries.

Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready to operate your compatible Toshiba TV.

4. OPERATING INSTRUCTIONS

This section outlines the basic functions of your Toshiba CT-RC2US-17 remote control.

- **Power On/Off:** Press the red **Power** button once to turn the TV on or off.
- **Changing Channels:** Use the **CH+** button to go to the next channel and **CH-** to go to the previous channel.
- **Adjusting Volume:** Press **VOL+** to increase the volume and **VOL-** to decrease it.
- **Muting Sound:** Press the **MUTE** button to temporarily turn off the sound. Press it again to restore sound.
- **Selecting Input Source:** Press the **INPUT** button to cycle through available input sources (e.g., HDMI, AV). Use the directional arrows and **OK** to select.
- **Accessing Menus:** Press the **MENU** button to open the TV's main settings menu. Use the directional arrows to navigate and **OK** to select options. Press **EXIT** to close the menu.
- **Information Display:** Press the **INFO** button to view details about the current program or input.

5. MAINTENANCE

Proper care of your remote control will ensure its longevity and reliable performance.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote not responding.	Obstruction between remote and TV.	Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.
Remote works intermittently.	Weak batteries.	Replace batteries with new ones.
Specific buttons do not work.	Dirt or debris under the button.	Gently clean around the button. If the issue persists, the remote may require replacement.

7. SPECIFICATIONS

- Model Number:** CT-RC2US-17
- Compatible Devices:** Toshiba Televisions (LCD TV models: 32L221U, 43L621U, 49L621U, 55L421U, 55L621U, 65L621U)
- Power Source:** 2 x AAA Batteries (not included)
- Color:** Black
- Special Feature:** Ergonomic design
- Dimensions (Approx.):** 6.61 x 1.85 x 0.71 inches (16.8 x 4.7 x 1.8 cm)
- Weight (Approx.):** 1.28 ounces (36 grams) without batteries
- Manufacturer:** USARMT

8. WARRANTY AND SUPPORT

This product is typically covered by a 30-day hassle-free return policy from the point of purchase. For specific warranty details, please refer to your retailer's policy.

Product Support:

For additional product support or inquiries, please visit:

- Website:** www.tv.toshiba.com
- US & Canada Market Phone:** 855-527-2411