

[Manuals.plus](#) /

> [Anmck](#) /

> Anmck Wireless Rechargeable Mouse Instruction Manual

Anmck B0CQ2XNV5Z

Anmck Wireless Rechargeable Mouse User Manual

Model: B0CQ2XNV5Z

1. INTRODUCTION

Thank you for choosing the Anmck Wireless Rechargeable Mouse. This manual provides essential information for setting up, operating, and maintaining your new mouse. Designed for convenience and efficiency, this mouse features a built-in rechargeable battery, silent click buttons, and adjustable DPI settings, making it ideal for various computing environments.



Image: The Anmck Wireless Rechargeable Mouse in black, shown with its accompanying USB receiver.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Anmck Wireless Rechargeable Mouse
- USB Receiver (stored in the mouse's battery compartment)
- USB Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Key Features:

- **Rechargeable and Cordless:** Built-in 700mAh battery provides up to 30 days of use on a 2-hour charge.
- **Battery Level Indicator:** LED lights display current battery status (3 lights >60%, 2 lights 30-60%, 1 light 10-30%). A reminder sound indicates low battery.
- **Silent Operation:** Buttons produce noise below 30dB, suitable for quiet environments.
- **Stable Wireless Connection:** Utilizes 2.4G USB transmission technology for a stable signal up to 10 meters.
- **Slim and Portable:** Ergonomic, ultra-slim design for comfortable use and easy portability.
- **Adjustable DPI:** Four adjustable DPI levels (800/1000/1200/1600) for precise control.

Components:

1. Left Click Button
2. Right Click Button
3. Scroll Wheel
4. DPI Adjustment Button
5. LED Battery Indicator Lights
6. USB Charging Port (front of mouse)
7. Power ON/OFF Switch (bottom of mouse)
8. USB Receiver Storage Slot (bottom of mouse)

4. SETUP INSTRUCTIONS

Follow these steps to connect your Anmck Wireless Rechargeable Mouse to your computer:

1. **Locate the USB Receiver:** The USB receiver is stored in a slot on the bottom of the mouse. Gently slide it out.



Image: Illustration showing how to remove the USB receiver from its storage slot on the mouse's underside.

2. **Insert the USB Receiver:** Plug the USB receiver into an available USB Type-A port on your laptop or desktop computer.



Image: Illustration showing the USB receiver being plugged into a laptop's USB port.

3. **Turn On the Mouse:** Flip the power switch on the bottom of the mouse to the 'ON' position. The mouse will automatically connect to the receiver.



Image: Illustration showing the power switch on the bottom of the mouse in the 'ON' position.

Important Note: This is a 2.4G wireless mouse and requires a device with a USB Type-A port. It is not a Bluetooth mouse and cannot be used directly with devices that lack a USB Type-A port (e.g., some Mac models) without an external USB-C HUB with a USB Type-A port.



Image: A compatibility chart indicating that the mouse requires a USB Type-A port and is not compatible with Bluetooth-only devices.

5. OPERATING INSTRUCTIONS

Basic Use:

- Move the mouse on a flat surface to control the cursor.
- Click the left button for primary actions.
- Click the right button for secondary actions (context menus).
- Use the scroll wheel to navigate documents and web pages vertically.

DPI Adjustment:

The mouse features a DPI button located behind the scroll wheel, allowing you to adjust cursor sensitivity. Press the DPI button to cycle through the following settings:

- **Single Click:** 800 DPI
- **Double Click:** 1000 DPI
- **Triple Click:** 1200 DPI
- **Four Clicks:** 1600 DPI

Rechargeable Wireless Mouse



 Charge 2 hours


 Work for 30 days

Image: A diagram illustrating the DPI button and how multiple clicks adjust the mouse sensitivity (800, 1000, 1200, 1600 DPI).

Silent Click Feature:

The mouse is designed with silent click buttons, ensuring minimal noise during use. This feature is beneficial in quiet environments such as libraries, offices, or during late-night work sessions.

 Super Silent Solid Click

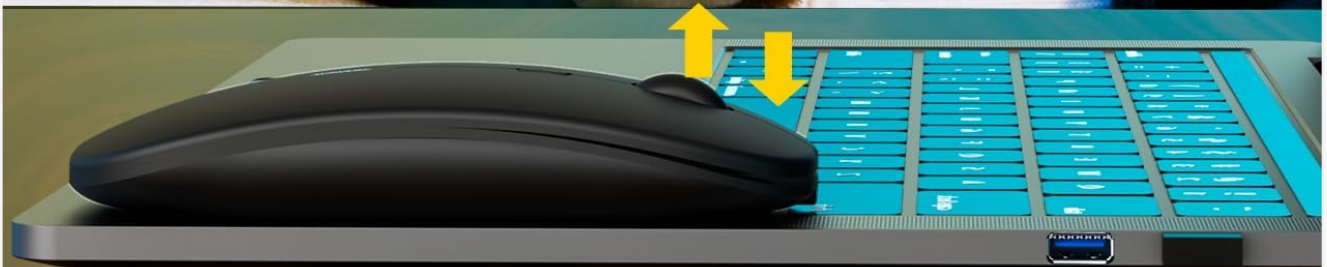

**500000 +
Solid Key**



Silent Click

Image: An illustration highlighting the silent click feature, showing the mouse in use next to a sleeping child, emphasizing its quiet operation.

6. CHARGING INSTRUCTIONS

The Anmck Wireless Rechargeable Mouse features a built-in 700mAh rechargeable battery. To charge your mouse:

1. Connect the provided USB charging cable to the charging port located at the front of the mouse.
2. Plug the other end of the USB charging cable into a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator lights will show charging status. A full charge typically takes about 2 hours.

A full charge provides approximately 30 days of wireless use, depending on usage patterns.

Battery Level Indicator:

The mouse is equipped with LED indicators to help you monitor the battery level:

- **3 LED Lights:** Battery level above 60%.
- **2 LED Lights:** Battery level between 30% and 60%.
- **1 LED Light:** Battery level between 10% and 30%.

 
When the battery is running low (below 10%), the mouse will emit a reminder sound to prevent unexpected power loss.

REMAINING BATTERY CAPACITY VISIBLE


**No longer to worry about the embarrassment
caused by sudden power outages**



100% power

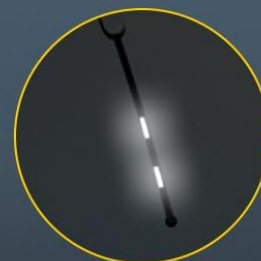

60%-30% power

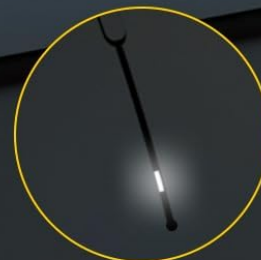 

10% power

Image: A diagram illustrating the LED lights on the mouse indicating different battery charge levels (100%, 60-30%, 10%).

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals.
- **Storage:** When not in use for extended periods, turn off the mouse to conserve battery life. Store it in a cool, dry place.
- **USB Receiver:** Keep the USB receiver stored in its designated slot on the mouse's underside when traveling to prevent loss.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding / Cursor not moving	<ul style="list-style-type: none">• Mouse is off• Low battery• USB receiver not properly connected• Driver issue	<ul style="list-style-type: none">• Ensure the power switch on the mouse is ON.• Charge the mouse for at least 15 minutes.• Reconnect the USB receiver to a different USB port.• Restart your computer.
Erratic cursor movement or scroll wheel issues	<ul style="list-style-type: none">• Dirty optical sensor• Interference• Defective scroll wheel	<ul style="list-style-type: none">• Clean the optical sensor on the bottom of the mouse.• Ensure no other 2.4G devices are causing interference.• If issues persist, contact customer support.
Mouse not charging	<ul style="list-style-type: none">• Charging cable not connected properly• Faulty charging cable or port	<ul style="list-style-type: none">• Ensure the charging cable is securely connected to both the mouse and the power source.• Try a different USB charging cable or USB port.
Mouse disconnects frequently	<ul style="list-style-type: none">• Distance from receiver• Interference• Low battery	<ul style="list-style-type: none">• Ensure the mouse is within 10 meters of the USB receiver.• Move the receiver to a front USB port if possible.• Charge the mouse.

9. SPECIFICATIONS

Feature	Detail
Brand	Anmck
Model	B0CQ2XNV5Z

Feature	Detail
Connectivity Technology	2.4G Wireless (USB Receiver)
Movement Detection Technology	Optical
DPI Levels	800 / 1000 / 1200 / 1600 (Adjustable)
Battery Capacity	700mAh Rechargeable
Charging Time	Approx. 2 hours
Battery Life	Up to 30 days (typical use)
Silent Click	Yes (<30dB)
Wireless Range	Up to 10 meters (33 feet)
Item Weight	2.89 ounces (82 grams)
Package Dimensions	4.76 x 3.07 x 1.3 inches (12.09 x 7.8 x 3.3 cm)
Color	LED-Black
Date First Available	December 12, 2023

10. WARRANTY AND SUPPORT

Anmck provides after-sales support for products purchased. If you encounter any issues with your Anmck Wireless Rechargeable Mouse within one year of purchase, please contact us. We are committed to providing assistance within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official Anmck website.

11. SAFETY INFORMATION

- Do not expose the mouse to extreme temperatures or humidity.
- Avoid dropping or subjecting the mouse to strong impacts.
- Do not attempt to disassemble or repair the mouse yourself. This will void the warranty.
- Keep the mouse and its components out of reach of children.
- Dispose of the mouse and its battery responsibly according to local regulations.