



Manuals.plus /

› ICOOKPOT /

› ICOOKPOT Multi-Use Electric Kettle: Borosilicate Glass Tea Maker and Programmable Control Panel User Manual

ICOOKPOT YSH20(07)

ICOOKPOT Multi-Use Electric Kettle

Model: YSH20(07)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your ICOOKPOT Multi-Use Electric Kettle. Designed for versatility, this appliance features a borosilicate glass body, a 304 stainless steel heating plate, and 16 smart programs for various culinary tasks, including tea making, egg cooking, and yogurt preparation. Please read this manual thoroughly before first use and retain it for future reference.



Image 1: ICOOKPOT Multi-Use Electric Kettle, showcasing the glass kettle, control panel base, and tea infuser.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed, including:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Your ICOOKPOT Electric Kettle comes with the following components:

- Kettle Body (Borosilicate Glass)
- Lid
- Stainless Steel Tea Strainer
- Base (with Control Panel)
- Yogurt Box
- Steamer Egg Holder
- User Guide (this document)



Image 2: Exploded view illustrating the Kettle Lid, Stainless Steel Tea Strainer, Handle, Steamer Egg Holder, Yogurt Box, and MENU knob on the base.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the kettle body, lid, tea strainer, yogurt box, and egg holder with warm, soapy water. Rinse thoroughly and dry. Wipe the base with a damp cloth. Do not immerse the base in water.
3. **Placement:** Place the kettle base on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a standard 120V~ 60Hz electrical outlet.

OPERATING INSTRUCTIONS

Your ICookPOT Electric Kettle features 16 smart programs and an intuitive control panel for ease of use.

Control Panel Overview



16 FUNCTIONS

24 HOURS DELAY TIME

INTELLIGENT KNOB OPERATION

Image 3: Detailed view of the control panel, highlighting the MENU knob and various function indicators. The control panel includes a central MENU knob, function indicators, and temperature settings. The MENU knob allows you to select desired programs, while specific temperature buttons are available for precise control.

General Operation

1. **Fill the Kettle:** Open the lid and fill the borosilicate glass kettle body with the desired ingredients and/or water. Ensure the water level is between the MIN and MAX marks.
2. **Place on Base:** Securely place the kettle body onto the power base.
3. **Select Program:** Rotate the **MENU** knob clockwise or anti-clockwise to cycle through the 16 available functions. The selected function will illuminate.

4. **Start:** Once a program is selected, the kettle will typically begin operation automatically or require a press of the MENU knob to confirm. Refer to specific program details below.
5. **Completion:** The kettle will automatically shut off or switch to a "Keep Warm" function upon program completion, depending on the selected program.

Specific Programs and Temperature Settings

The kettle offers 16 built-in programs for diverse uses:

- **Boil:** For rapid boiling of water.
- **Baby Drink:** Heats water to an ideal temperature for baby formula.
- **Milk:** Warms milk to a suitable temperature.
- **Yogurt:** Maintains a consistent temperature for yogurt fermentation (use with the provided Yogurt Box).
- **Soup:** For simmering soups.
- **Slow Cooker:** Low-temperature cooking for extended periods.
- **Oatmeal:** Prepares oatmeal.
- **Noodles:** Boils water for noodles.
- **Disinfection:** Boils water for sterilization purposes.
- **Egg:** Boils eggs (use with the provided Steamer Egg Holder).
- **Keep Warm:** Maintains a set temperature for a period.
- **Temperature Presets for Tea:**
 - 160°F (71°C): Ideal for Scented Tea.
 - 175°F (79°C): Ideal for Green Tea.
 - 185°F (85°C): Ideal for White Tea.
 - 190°F (88°C): Ideal for Oolong Tea.
 - 200°F (93°C): Ideal for Black Tea or Coffee.

To use the tea temperature presets, select the desired temperature directly from the control panel. For other programs, rotate the MENU knob to select.



Image 4: The ICookPOT Electric Kettle in operation, brewing tea with the tea strainer inserted.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your kettle.

1. **Always Unplug:** Before cleaning, ensure the kettle is unplugged from the power outlet and has completely cooled down.
2. **Kettle Body, Lid, and Accessories:** Wash the borosilicate glass kettle body, lid, tea strainer, yogurt box, and egg holder with warm, soapy water. Use a soft sponge or cloth. Rinse thoroughly and dry completely. These parts are generally safe for hand washing.
3. **Power Base:** Wipe the power base with a soft, damp cloth. Do not immerse the power base in water or any other liquid. Ensure no water enters the electrical components.
4. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts water and white vinegar (or a commercial descaling solution). Bring to a boil and let it soak for 15-30 minutes, or as directed by the

descaling solution. Empty the kettle and rinse several times with fresh water.

5. **Storage:** When not in use, store the kettle and its accessories in a clean, dry place.

TROUBLESHOOTING

If you encounter issues with your ICOOKPOT Electric Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outlet not working; kettle not properly seated on base.	Ensure the power cord is securely plugged into a working outlet. Check if the kettle is correctly placed on its base.
Water is not heating.	Program not selected; insufficient water; kettle automatically shut off.	Select a program using the MENU knob. Ensure water level is above MIN mark. If recently boiled, allow to cool before restarting.
Kettle leaks.	Lid not properly closed; overfilled.	Ensure the lid is securely closed. Do not fill above the MAX fill line.
Excessive scale buildup.	Hard water deposits.	Perform descaling procedure as described in the Maintenance section.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** YSH20(07)
- **Brand:** ICOOKPOT
- **Power Supply:** 120V~ 60Hz
- **Rated Power:** 800W
- **Capacity:** 2 Liters
- **Material:** Borosilicate Glass, 304 Stainless Steel
- **Product Dimensions:** 9 x 8.8 x 10 inches
- **Item Weight:** 3.59 pounds
- **Special Features:** Programmable, Multi-Use, Keep Warm Function

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official ICOOKPOT website. Please have your model number (YSH20(07)) and purchase date available when contacting support.

Contact Information:

- **Website:** ICOOKPOT Official Store (for general product information)
- **Email:** [Manufacturer Support Email - not provided]
- **Phone:** [Manufacturer Support Phone - not provided]

