

T&G TG117

T&G117 Portable Bluetooth Speaker User Manual

Model: TG117

1. INTRODUCTION

Thank you for purchasing the T&G117 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

Product Features:

- Portable and lightweight design for easy transport.
- Bluetooth wireless connectivity for seamless audio streaming.
- IPX6 Class Waterproof and Dust-proof for outdoor use.
- Built-in TF card slot and FM Radio function.
- Compatible with a wide range of Bluetooth-enabled devices, including iPhone and Android smartphones.
- Integrated control buttons for easy operation.

2. PACKAGE CONTENTS

Please check the package for the following items:

- T&G117 Portable Bluetooth Speaker
- USB Charging Cable
- Auxiliary Audio Cable (if included)
- User Manual

3. PRODUCT OVERVIEW



Figure 3.1: Front view of the T&G117 Portable Bluetooth Speaker, showcasing its black mesh exterior and T&G logo.



Figure 3.2: Side view of the speaker, highlighting the control panel with power, volume, and mode buttons.



Figure 3.3: The speaker submerged in water, illustrating its IPX6 waterproof capability, suitable for outdoor environments.

Control Panel:

The control panel is located on the side of the speaker and includes the following buttons:

- **Power Button** (): Press and hold to turn the speaker On/Off. Short press to play/pause in Bluetooth mode.
- **Volume Up Button** (+): Short press to increase volume. Long press for next track.
- **Volume Down Button** (-): Short press to decrease volume. Long press for previous track.
- **Mode Button** (M): Short press to switch between Bluetooth, TF Card, and FM Radio modes.

Underneath a protective flap on the side, you will find the charging port, TF card slot, and auxiliary input port.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power Button () for approximately 3 seconds until you hear an audible prompt.
- **To Power Off:** Press and hold the Power Button () for approximately 3 seconds until the speaker powers down.

4.3 Bluetooth Pairing

After powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED light. To connect:

1. Ensure your device (smartphone, tablet, etc.) has Bluetooth enabled.
2. Search for Bluetooth devices on your device.
3. Select "TG117" from the list of available devices.
4. Once connected, the speaker will provide an audible confirmation, and the LED light will stop flashing.

The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device is within

range and has Bluetooth enabled.

5. OPERATING INSTRUCTIONS

5.1 Playing Audio

- **Bluetooth Mode:** After successful pairing, play audio from your connected device. Short press the Power Button (⏻) to play or pause.
- **TF Card Mode:** Insert a TF (MicroSD) card with audio files into the designated slot. The speaker will automatically switch to TF Card mode and begin playback. Use the Mode Button (M) to switch if needed.
- **FM Radio Mode:** Short press the Mode Button (M) to switch to FM Radio mode. Long press the Power Button (⏻) to auto-scan and save available stations. Use the Volume Up/Down buttons (long press) to navigate between saved stations.

5.2 Volume Control

- **Increase Volume:** Short press the Volume Up Button (⏮).
- **Decrease Volume:** Short press the Volume Down Button (⏭).

5.3 Track Navigation (Bluetooth/TF Card Mode)

- **Next Track:** Long press the Volume Up Button (⏮).
- **Previous Track:** Long press the Volume Down Button (⏭).

6. MAINTENANCE

To ensure the longevity and optimal performance of your T&G117 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.
- **Water Resistance:** While the speaker is IPX6 waterproof, avoid prolonged submersion in water. Ensure the protective flap covering the ports is securely closed before exposing the speaker to water or dust.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its health.
- **Handling:** Avoid dropping the speaker or subjecting it to strong impacts, which can damage internal components.

7. TROUBLESHOOTING

If you encounter issues with your speaker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
No sound.	Volume is too low; device not connected; incorrect mode.	Increase volume; ensure Bluetooth is connected; switch to correct mode (Bluetooth/TF/FM).

Problem	Possible Cause	Solution
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; device is out of range; interference.	Ensure speaker is in pairing mode (flashing LED); move device closer; turn off other Bluetooth devices.
Poor FM radio reception.	Weak signal; environmental interference.	Move to an open area; try auto-scanning again.


8. SPECIFICATIONS

Feature	Detail
Model Name	TG117
Speaker Type	Outdoor
Special Feature	Portable
Connectivity Technology	Bluetooth
Wireless Communication	Bluetooth
Bluetooth Range	10 Meters
Speaker Maximum Output Power	10 Watts
Audio Output Mode	Stereo or Surround (2.0)
Power Source	Battery Powered
Water Resistance Level	Waterproof (IPX6 Class)
Product Dimensions	2.72 x 2.72 x 6.3 inches
Item Weight	14 ounces
Manufacturer	T&G

9. WARRANTY AND SUPPORT

The T&G117 Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the manufacturer or your point of purchase.

Please retain your proof of purchase for warranty purposes.

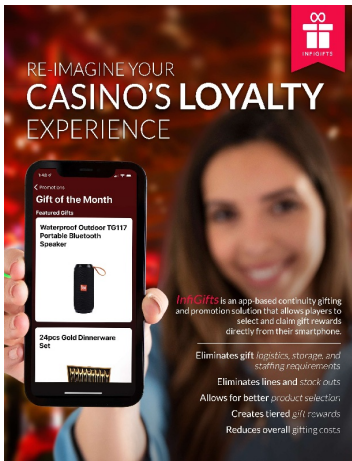


[pdf] Borchure

InfGifts Brochure Untitled Waterproof Outdoor TG117 Portable Bluetooth Speaker T G 24pcs Gold Dinnerware Set is an app based continuity gifting and promotion solution that InfGiftsBrochure pub mediabox storage rxweb prd exhibitor document exh 157af266 db16 42d6 8b6a d75225faf148 1195fef6 f2bd 4eda a82a 88555c6da2b7 |||

...

lang: score:8 filesize: 2.95 M page_count: 6 document date: 2023-09-12

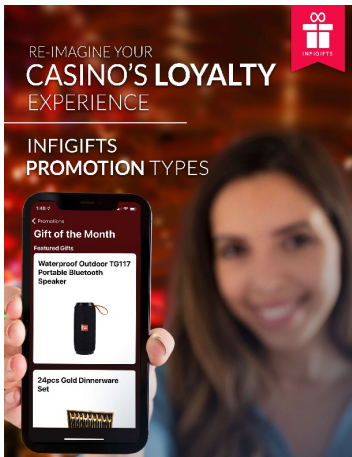

[pdf]

InfGifts Promotion Types Untitled Waterproof Outdoor TG117 Portable Bluetooth Speaker T G 24pcs

Gold Dinnerware Set Page 2 4 CASINO VIP PARTIES Casino parties are used to thank

InfGiftsPromotionTypes pub mediabox storage rxweb prd exhibitor document exh 157af266 db16 42d6 8b6a d75225faf148 d9090f10 656a 4bdc a0fd 7c6d67550555 |||

...

lang: score:8 filesize: 2.75 M page_count: 6 document date: 2022-10-21