



[Manuals.plus](#) /

› [EUREKA ERGONOMIC](#) /

› EUREKA ERGONOMIC 60-inch Gaming Desk (Model: ERK-GIP-P60B-ZXV1) Instruction Manual

## EUREKA ERGONOMIC ERK-GIP-P60B-ZXV1

# EUREKA ERGONOMIC 60-inch Gaming Desk Instruction Manual

Model: ERK-GIP-P60B-ZXV1

## 1. INTRODUCTION

Thank you for choosing the EUREKA ERGONOMIC 60-inch Gaming Desk. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new desk. Please read these instructions thoroughly before assembly and retain them for future reference.

## 2. IMPORTANT SAFETY INFORMATION

- **Anchoring:** Ensure the desk is properly anchored to the wall for stability to prevent tipping and potential injury.
- **Assembly:** Follow the assembly instructions carefully. Incorrect assembly can lead to instability and damage.
- **Weight Capacity:** Do not exceed the maximum weight load of 200 lbs (90.7 kg) for the desktop. Overloading can cause structural failure.
- **Electrical Safety:** When using the built-in USB ports and power outlets, ensure all devices are compatible and cables are managed to prevent tripping hazards or electrical damage. Do not expose electrical components to moisture.
- **Placement:** Place the desk on a level surface. Adjustable leg pads are provided to maintain stability on uneven floors.
- **Children and Pets:** Keep children and pets away from the desk during assembly. Small parts can be a choking hazard.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop Panels (Engineered Wood with Laminated Carbon Fiber Finish)
- Metal Frame Components (T-Shape Legs, Support Beams)
- Full-Covered Mouse Pad
- Shelf with 4 Charging USB Ports
- Cup Holder
- Headphone Hook
- Socket Bracket
- Cable Management Hole Grommets
- Fabric Drawers (3 units)
- Adjustable Leg Pads
- Assembly Hardware (Screws, Allen Key, Screwdriver)
- Instruction Manual

## 4. ASSEMBLY INSTRUCTIONS

---

Assembly typically takes 1-2 hours. It is recommended to have a second person for assistance during certain steps. All necessary tools (Allen key, screwdriver) are included.

### Step 1: Unpack and Organize

Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Verify all parts against the package contents list.

### Step 2: Assemble the Main Frame

Begin by assembling the main metal frame of the desk. Connect the T-shaped legs and horizontal support beams using the provided screws and Allen key. Ensure all connections are secure but do not overtighten until the entire frame is assembled.



*Image: Partially assembled metal frame of the EUREKA ERGONOMIC Gaming Desk.*

### **Step 3: Attach the Side Storage Unit (Drawers and Tower Space)**

Assemble the frame for the side storage unit, which includes space for fabric drawers and a tower. Attach this unit to the main desk frame. Insert the fabric drawers into their designated slots. The base plate for the tower space is secured with four screws for durability.



*Image: Fully assembled EUREKA ERGONOMIC Gaming Desk, showcasing the side storage unit with drawers and tower space.*

#### **Step 4: Install the Desktop Panels**

Carefully place the desktop panels onto the assembled frame. Secure them using the provided screws. Ensure the carbon fiber textured surface is facing upwards. The desk measures 60" (L) x 27.56" (W) x 30.25" (H).

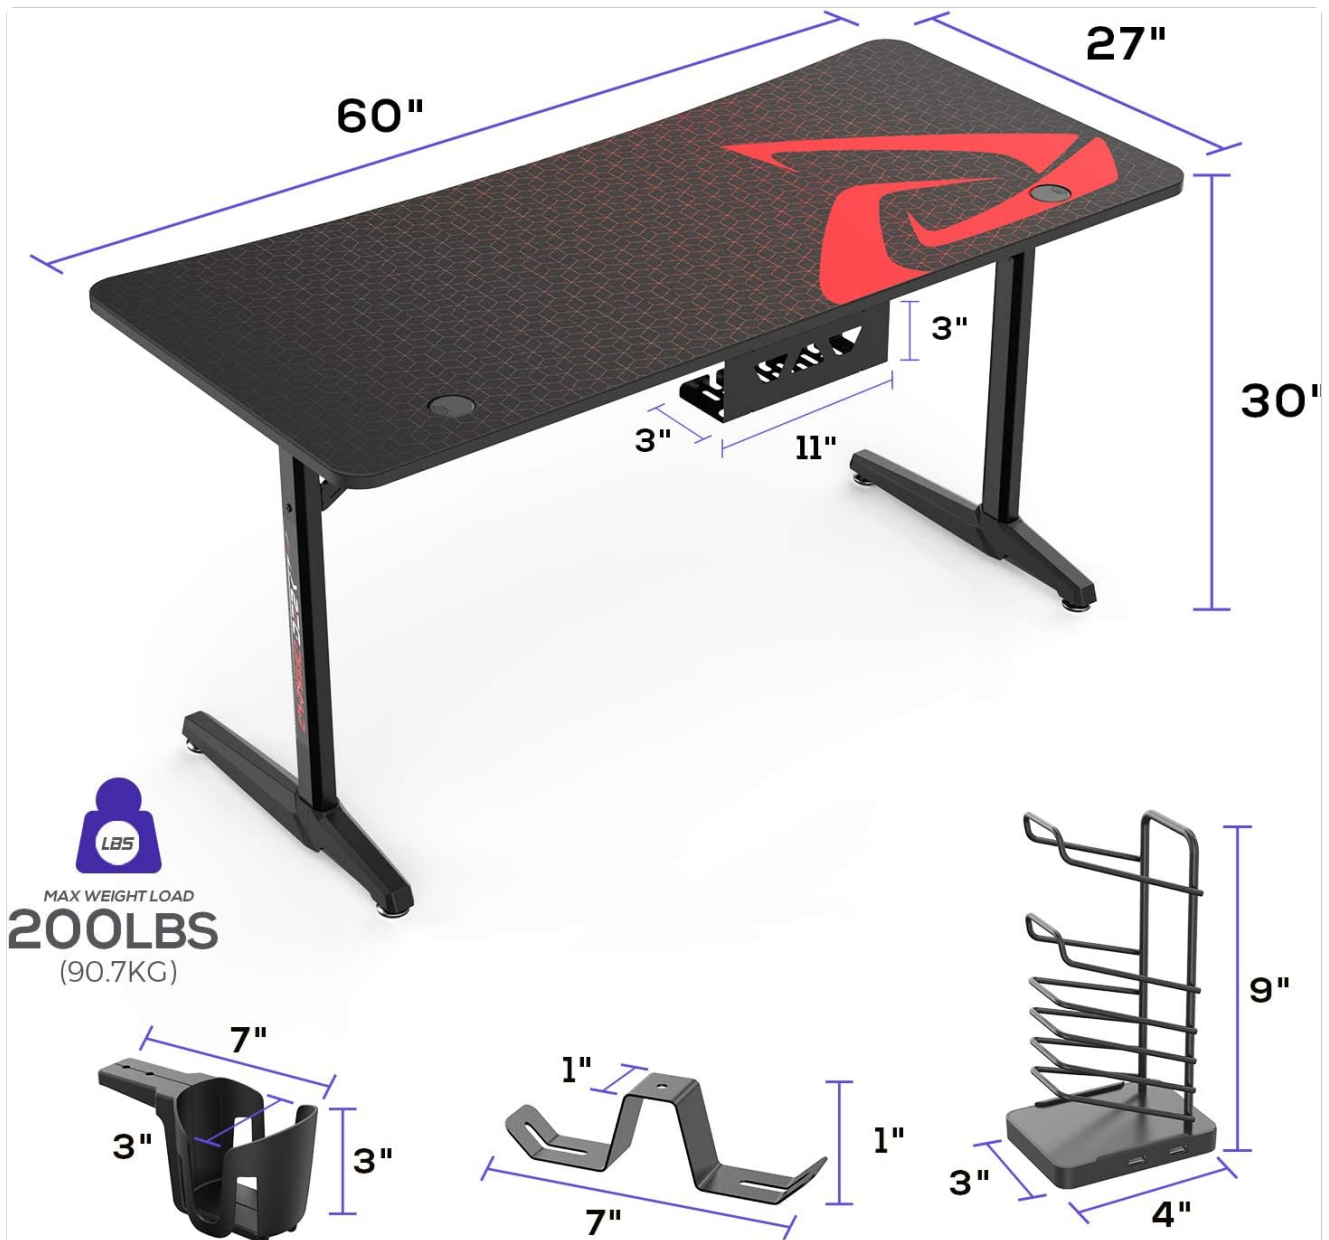


Image: Detailed dimensions of the EUREKA ERGONOMIC Gaming Desk, including the desktop, cup holder, headphone hook, and handle rack.

### Step 5: Attach Accessories

Install the cup holder and headphone hook. These can be mounted on either the left or right side of the desk to suit your preference. Attach the shelf with 4 charging USB ports to the designated area. Utilize the socket bracket and cable manager holes to organize your cables for a neat desktop setup.



*Image: Close-up view of the desk's cable management features, including cable holes and a cable management tray, designed to keep wires organized.*



*Image: The EUREKA ERGONOMIC Gaming Desk set up with a monitor, keyboard, mouse, and showing the convenient placement of the headphone hook and cup holder.*

### **Step 6: Apply Full-Covered Mouse Pad**

Unroll the full-covered mouse pad and place it over the desktop. This pad is designed to be crease-free, thick, smooth, and high-precision for optimal use.

# SPECIAL FULL COVERED MOUSE PAD

RUBBER BASE ANTI-SLIP ● ○ ●

KNITTED EDGE ● ○ ●



*Image: Detailed view of the full-covered mouse pad, emphasizing its anti-slip rubber base and durable knitted edge for enhanced performance.*

## 5. OPERATING INSTRUCTIONS

### 5.1. Using the Built-in USB Ports

The desk features a shelf with 4 charging USB ports. Connect your USB-powered devices (e.g., phone, tablet, gaming accessories) to these ports for convenient charging. Ensure the desk's power cable is connected to a wall outlet for the USB ports to function.

# KEEP CABLES ORGANIZED



*Image: The integrated USB ports are located on the monitor stand, providing easy access for charging devices.*

## 5.2. Utilizing the Cup Holder and Headphone Hook

The cup holder and headphone hook are designed for convenience and can be installed on either side of the desk. Use the cup holder to keep your beverages secure and prevent spills. The headphone hook provides a dedicated spot to hang your headphones, keeping them within reach and off the desktop.

## 5.3. Cable Management

The desk includes a socket bracket and cable manager holes to help organize your power strips and cables. Route your cables through these designated areas to maintain a tidy and clutter-free workspace, reducing potential hazards.

## 6. MAINTENANCE

- **Cleaning:** Wipe the desktop surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the carbon fiber laminate.
- **Frame Care:** The metal legs are corrosion-resistant. Clean with a damp cloth as needed.
- **Mouse Pad:** The full-covered mouse pad can be wiped clean with a damp cloth. For deeper cleaning, follow

the care instructions provided with the mouse pad.

- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain desk stability.

## 7. TROUBLESHOOTING

- **Desk Wobbles:**
  - Ensure all assembly screws are securely tightened.
  - Adjust the leg pads at the bottom of the desk to stabilize it on uneven surfaces.
- **USB Ports Not Functioning:**
  - Verify that the desk's main power cable is securely plugged into a working wall outlet.
  - Check the connection of the USB hub to the desk's power source.
- **Missing Parts or Damage:**
  - Refer to the "Package Contents" section. If parts are missing or damaged upon arrival, contact EUREKA ERGONOMIC customer support immediately.

## 8. SPECIFICATIONS

<b>Brand</b>	EUREKA ERGONOMIC
<b>Model Number</b>	ERK-GIP-P60B-ZXV1
<b>Shape</b>	T-Shape
<b>Product Dimensions (L x W x H)</b>	60" x 27.56" x 30.25" (152.4 cm x 70 cm x 76.8 cm)
<b>Desktop Material</b>	Engineered Wood (P2 Particle Board) with Laminated Carbon Fiber Finish
<b>Base Material</b>	Metal
<b>Color</b>	Black
<b>Item Weight</b>	55.6 Pounds (25.2 kg)
<b>Maximum Weight Load</b>	200 lbs (90.7 kg)
<b>Special Features</b>	Built-In USB Outlet (4 ports), Ergonomic Design, Monitor Stand, Cup Holder, Headphone Hook, Cable Management Tray
<b>Required Assembly</b>	Yes

## 9. WARRANTY & SUPPORT

### Warranty Information

This EUREKA ERGONOMIC Gaming Desk comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects and material flaws under normal use.

## Customer Support

For any questions, assistance with assembly, missing parts, or warranty claims, please contact EUREKA ERGONOMIC Customer Support. Contact details can typically be found on the product packaging or on the official EUREKA ERGONOMIC website.

**Online Support:** [Visit the EUREKA ERGONOMIC Store on Amazon](#)