

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for LG LCD LED HDTV TVs (Models: 50PQ3000, 37LV570S, 42LV570S, 47LV570S, 37LV5500, 42LV5500, 47LV5500, 26LD320, 22LD320)

Easytry123 Easytry0325

Easytry123 Replacement Remote Control User Manual

Model: Easytry0325

INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, model Easytry0325. This remote is designed as a replacement for various LG LCD LED HDTV models, including 50PQ3000, 37LV570S, 42LV570S, 47LV570S, 37LV5500, 42LV5500, 47LV5500, 26LD320, and 22LD320. Please note that as a replacement unit, some advanced functions of your original remote may not be supported.

For optimal performance, ensure your television model is listed as compatible. This remote control is designed for ease of use and requires no complex programming.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment open, illustrating where to insert AAA batteries.





Figure 2: Back of the remote control with the battery compartment closed.

2. First Use

After installing the batteries, the remote control is ready for use. Point the remote directly at your LG TV and press the desired function button.

OPERATING INSTRUCTIONS

This replacement remote control operates similarly to your original LG TV remote. Simply point the remote control towards your television and press the corresponding button for the desired function.

- **Power Button:** Turns the TV on or off.
- **Channel Buttons (CH+/CH-):** Changes TV channels.
- **Volume Buttons (VOL+/VOL-):** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Number Buttons (0-9):** Directly selects channels.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Navigates through TV menus and selections.
- *Note: Specific button layouts and functions may vary slightly depending on the exact LG TV model.*

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are installed correctly with the correct polarity. • Replace old batteries with new AAA batteries. • Make sure there are no obstructions between the remote control and the TV's infrared sensor. • Point the remote directly at the TV.
Some functions are not working.	• As a replacement remote, certain advanced or specific functions of your original TV remote may not be supported. • Refer to your TV's original manual for specific function details.
Remote control range is reduced.	• Replace batteries with new ones. • Ensure the remote's infrared emitter is clean and unobstructed.

SPECIFICATIONS

Feature	Detail
Model Number	Easytry0325
Brand	Easytry123
Compatible Devices	LG LCD LED HDTVs (Models: 50PQ3000, 37LV570S, 42LV570S, 47LV570S, 37LV5500, 42LV5500, 47LV5500, 26LD320, 22LD320)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Batteries Required	2 x AAA (not included)
Manufacturer	Easytry123

WARRANTY AND SUPPORT

As a replacement product, specific warranty details may vary. Please refer to the retailer or seller from whom you purchased this remote control for information regarding warranty coverage and customer support. For any

operational issues not covered in this manual, contacting the seller is recommended.