

[Manuals.plus](#) /

› [Easytry123](#) /

› Remote Control for LG AKB73975728 AKB73975757 42LB570 42LB580 42UB820 47LB570 47LB580 49UB820 49UB830 50LB570 Smart 3D LED TV User Manual

Easytry123 Easytry0333

Easytry123 Replacement Remote Control User Manual

Model: Easytry0333

INTRODUCTION

This user manual provides essential information for the proper setup, operation, and maintenance of your Easytry123 Replacement Remote Control. This remote is designed as a replacement for various LG Smart 3D LED TV models, including AKB73975728, AKB73975757, 42LB570, 42LB580, 42UB820, 47LB570, 47LB580, 49UB820, 49UB830, and 50LB570. Please read this manual thoroughly before use.

Note: This is a replacement remote control. While it is designed to be compatible, some advanced functions of your original remote may not be fully supported. Please verify compatibility with your specific TV model.

PACKAGE CONTENTS

- 1 x Easytry123 Replacement Remote Control (Model: Easytry0333)

Batteries are not included and must be purchased separately.

SETUP

1. Installing Batteries

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Battery compartment with batteries installed.

2. Initial Pairing (No Pairing Required)

This replacement remote control operates using infrared (IR) technology and typically does not require any pairing process. It is designed to work directly with compatible LG TV models once batteries are installed. Simply point the remote at your television and begin use.

OPERATING INSTRUCTIONS

The remote control features standard button controls for easy navigation and function access. Below is a general overview of common buttons and their functions:



Figure 2: Front view of the remote control.

Common Button Functions

Button	Function
POWER (Red button)	Turns the TV on or off.
Number Buttons (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.

Button	Function
CH +/-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV sound.
INPUT	Selects the input source (HDMI, AV, etc.).
Navigation Buttons (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
BACK	Returns to the previous screen or menu.
EXIT	Exits the current menu or application.
SMART / HOME	Accesses the Smart TV home screen or main menu.
APP/ (Colored buttons)	Quick access to specific applications or functions (functionality may vary by TV model).

For specific functions related to your LG Smart TV, refer to your television's original user manual.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting liquids inside the remote control.

Battery Care

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace all batteries at the same time with new ones of the same type.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Troubleshooting Guide

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote control range is poor.	Low batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries; Remove any objects blocking the line of sight; Ensure TV's IR sensor is clear.
Certain functions do not work.	This is a replacement remote; some advanced or specific functions of the original remote may not be supported.	Verify if the function is a basic TV control. If it's a specialized Smart TV feature, it might not be compatible.

Problem	Possible Cause	Solution
TV does not respond to remote.	TV is off; Remote is not pointed at TV; TV's IR sensor is faulty.	Ensure TV is powered on; Point remote directly at the TV's IR sensor; Test with another remote if available to rule out TV issue.

SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number	Easytry0333
Compatible Devices	LG Smart 3D LED TVs (Models: AKB73975728, AKB73975757, 42LB570, 42LB580, 42UB820, 47LB570, 47LB580, 49UB820, 49UB830, 50LB570)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's return policy or contact the seller directly. As per the product listing, a 30-day refund/replacement policy may apply through the seller, Easytry123.

For further assistance or inquiries, please contact the manufacturer or seller through the platform where the product was purchased.

Manufacturer: Easytry123

