

[manuals.plus](#) /› [beFree Sound](#) /› [beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker User Manual](#)

beFree Sound Bluetooth Portable

beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker User Manual

Model: Bluetooth Portable



1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker is designed for audio playback with features such as sound-reactive LED lights, USB/SD media playback, microphone and guitar inputs, and FM radio. Its portable design includes a trolley and wheels for easy transport.

2. PACKAGE CONTENTS

Please check the box for the following items:

- beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker
- Wireless Microphone
- Remote Control
- Power Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 3.1: Front view of the beFree Sound 18 Inch Bluetooth Portable Rechargeable Party Speaker, showcasing the 18-inch woofer with active LED lights, accompanied by a wireless microphone and remote control.



Figure 3.2: Side view illustrating the speaker's portable features, including the retractable pull handle, side handles, 18-inch woofer, tweeter, and integrated wheels for easy transport.



Figure 3.3: Detailed view of the rear control panel, featuring USB/SD/TF card slots, AUX inputs/outputs, microphone and guitar inputs, volume controls, echo, treble, bass adjustments, and power/light switches.



Figure 3.4: Close-up of the digital display showing 'LINE' mode, along with the USB port, TF card slot, and SD/MMC card slot for media playback.

4. SETUP INSTRUCTIONS

4.1 Unpacking

Carefully remove all components from the packaging. Inspect the speaker and accessories for any signs of damage. Retain the packaging for future transport or storage.

4.2 Initial Charging

Before first use, fully charge the speaker's internal 7.2Ah rechargeable battery. Connect the power cable to the AC IN port on the rear panel and plug it into a standard electrical outlet (100-240V, 50/60Hz). The charging indicator lights on the control panel will show the battery status (FULL, CHAR, LOW).

4.3 Placement

Place the speaker on a stable, flat surface. Ensure adequate ventilation around the unit. For optimal sound projection, position the speaker in an open area.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the 'POWER' switch on the rear control panel. Flip the switch to the 'ON' position to power on the speaker. Flip it to 'OFF' to power down.

5.2 Bluetooth Pairing

1. Power on the speaker. The display will show 'LINE' or the last used mode.
2. Press the 'MODE' button (usually labeled with an arrow icon) on the control panel or remote until 'BLUE' or 'BT' appears on the display, indicating Bluetooth mode.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings and search for available devices.
4. Select 'beFree Sound' or a similar name from the list.
5. Once paired, the speaker will emit a confirmation sound, and the display may show 'CONNECTED'.
6. You can now play audio from your device through the speaker.

5.3 USB/SD/TF Card Playback

1. Insert a USB flash drive or an SD/TF card (with compatible audio files) into the respective slot on the control panel.
2. The speaker should automatically switch to USB or SD mode and begin playing audio. If not, press the 'MODE' button to select the correct input.
3. Use the playback control buttons (Play/Pause, Next, Previous) on the control panel or remote to manage your music.

5.4 FM Radio Operation

1. Extend the antenna on the rear panel for better reception.
2. Press the 'MODE' button until 'FM' appears on the display.
3. Press and hold the 'Play/Pause' button to initiate an automatic scan for FM stations. The speaker will save all found stations.
4. Use the 'Next' and 'Previous' buttons to navigate through the saved stations.

5.5 Microphone and Guitar Inputs

1. Connect a wired microphone to the 'MIC IN' jack or a guitar to the 'GT IN' jack on the control panel.
2. Adjust the 'M.VOL+' (Microphone Volume) and 'GT.VOL+' (Guitar Volume) knobs to control the input levels.
3. The 'ECHO' knob can be used to add an echo effect to the microphone input.
4. The included wireless microphone will automatically connect when powered on.

5.6 Microphone Priority Function

Activate the 'MIC.PRI' (Microphone Priority) switch on the control panel. When active, the speaker will automatically lower the music volume when the microphone is in use, making the voice clearer.

5.7 RCA Input and Output

- **RCA Input:** Connect external audio sources (e.g., DVD player, mixer) using RCA cables to the 'INPUT' jacks (L/R). Select 'LINE' mode using the 'MODE' button.
- **RCA Output:** Connect the 'OUTPUT' jacks (L/R) to another speaker or audio system to extend the sound.

5.8 LED Light Control

The speaker features sound-reactive LED lights on the woofer. Use the 'LIGHT SW' switch on the control panel to turn the LED lights ON or OFF.

6. CHARGING AND BATTERY

The speaker is equipped with a 7.2Ah rechargeable battery. When the battery is low, the 'LOW' indicator light will illuminate. Connect the speaker to an AC power source using the provided power cable to charge. The 'CHAR' indicator will light up during charging, and 'FULL' will indicate a complete charge. The speaker can be operated while charging.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquids enter the speaker's openings.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place. It is recommended to charge the battery periodically (e.g., every 3 months) to maintain its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is OFF; Power cable not connected.	Charge the battery; Turn the power switch ON; Ensure power cable is securely connected.
No sound	Volume is too low; Incorrect input mode selected; Audio source issue.	Increase master volume and input-specific volumes (e.g., M.VOL+); Press MODE to select correct input (Bluetooth, USB, SD, FM, LINE); Check audio source device.
Bluetooth not connecting	Speaker not in Bluetooth mode; Device too far; Previous connection active.	Switch speaker to Bluetooth mode; Move device closer to speaker; Disconnect from other Bluetooth devices.
Microphone not working	Microphone volume too low; Microphone not powered on (wireless); Incorrect input.	Increase M.VOL+; Ensure wireless microphone has batteries and is ON; Check wired microphone connection.
LED lights not working	Light switch is OFF.	Flip the 'LIGHT SW' to ON.

9. SPECIFICATIONS

- Brand:** beFree Sound
- Model:** Bluetooth Portable
- Woofer Size:** 18 inches
- Connectivity:** Bluetooth, USB, SD/TF Card, RCA Input/Output
- Audio Inputs:** Microphone (1/4" jack), Guitar (1/4" jack), RCA (L/R)
- Features:** FM Radio, Sound Reactive LED Lights, Microphone Priority Function
- Battery:** 7.2Ah Rechargeable

- **Power Source:** Battery Powered, Corded Electric (AC 100-240V, 50/60Hz)
- **Portability:** Trolley and Wheels, Top and Side Handles
- **Item Weight:** 25.2 pounds
- **Package Dimensions:** 29.9 x 22 x 18.7 inches
- **UPC:** 602573512555

10. SAFETY INFORMATION

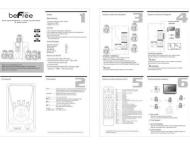
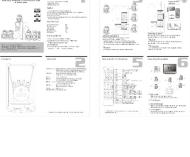
- Do not expose the speaker to water or excessive moisture.
- Avoid placing the speaker near heat sources or in direct sunlight.
- Do not attempt to open or repair the speaker yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.
- Use only the provided power cable for charging.
- Ensure proper ventilation to prevent overheating.

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official beFree Sound website. Please have your model number and purchase date available when contacting support.

© 2025 beFree Sound. All rights reserved.

Related Documents - Bluetooth Portable

 PORTABLE BLUETOOTH 10 INCH DOUBLE SUBWOOFER SPEAKER SYSTEM	<u>beFree BFS-K10 Portable Bluetooth Speaker System User Manual</u> User manual for the beFree BFS-K10 portable Bluetooth 10-inch double subwoofer speaker system. Includes package contents, control panel descriptions, microphone and remote details, safety precautions, and specifications.
	<u>BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System User Manual</u> This user manual provides instructions for setting up and using the BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System, including speaker connection, remote control operation, and speaker positioning.
	<u>BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System User Manual</u> User manual for the BeFree Sound BFS-400 Blue 5.1 Channel Surround Sound BT Speaker System, covering specifications, cautions, package contents, Bluetooth connectivity, system connection diagrams, front panel controls, remote control functions, and speaker positioning.

 <p>beFree Sound BFS-9160 Portable Bluetooth Speaker User Manual</p> <p>PORTABLE BLUETOOTH 12 INCH DOUBLE SUBWOOFER SPEAKER SYSTEM</p>	<p><u>beFree Sound BFS-9160 Portable Bluetooth Speaker User Manual</u></p> <p>User manual for the beFree Sound BFS-9160, a 12-inch portable Bluetooth double subwoofer speaker system. Includes setup, features, controls, and safety information.</p>
 <p>beFree BFS-6700</p> <p>PORTABLE BLUETOOTH 10 INCH DOUBLE SUBWOOFER SPEAKER SYSTEM</p> <p>INSTRUCTION MANUAL</p>	<p><u>BeFree BFS-6700 Bluetooth Portable Speaker with Party Lights - Instruction Manual</u></p> <p>Comprehensive instruction manual for the BeFree BFS-6700 portable Bluetooth speaker. Learn how to pair devices, use front panel controls, rear panel ports, and the remote control for this 10-inch subwoofer speaker with FM radio and party lights.</p>
 <p>ROCKVILLE</p> <p>Go Party X10</p> <p>DUAL 10" BATTERY POWERED BLUETOOTH PARTY SPEAKER + UHF MICROPHONE</p> <p>OWNER'S MANUAL</p>	<p><u>Rockville Go Party X10 Dual 10" Battery Powered Bluetooth Party Speaker + UHF Microphone Owner's Manual</u></p> <p>This owner's manual provides detailed instructions for the Rockville Go Party X10, a dual 10-inch battery-powered Bluetooth party speaker with a UHF microphone. Learn about its features, functions, operation, TWS linking, Bluetooth connectivity, microphone and guitar inputs, USB/SD and AUX playback, battery charging and replacement, specifications, and troubleshooting.</p>