

[Manuals.plus](#) /

› [VEIKK](#) /

› VEIKK A30 V2 Drawing Tablet 10x6 Inch Graphics Tablet with 8192 Pressure Sensitivity Battery-Free Pen and Touch Pad, 4 Hot Keys
Drawing Pad for Computer, Supports Mac Windows Android Linux

VEIKK VEIKK A30 V2

VEIKK A30 V2 Drawing Tablet User Manual

Model: VEIKK A30 V2

INTRODUCTION

The VEIKK A30 V2 Drawing Tablet is a versatile and powerful tool designed for digital artists, designers, educators, and anyone needing precise input for their computer or Android device. Featuring a large active area, high pressure sensitivity, and intuitive controls, it enhances your creative and professional workflow.

WHAT'S IN THE BOX

Upon unboxing your VEIKK A30 V2 Drawing Tablet, you should find the following items:

- VEIKK A30 V2 Drawing Tablet
- Battery-Free Pen
- USB Cable (Type-C)
- Pen Nibs x 8
- Nib Remover
- Artist Glove
- OTG-C Connector
- Quick Start Guide



A30 Drawing Tablet



Pen



8 x Replacement Pen Nibs



1 x OTG Connector



1 x Nib Remover



1 x Artist Glove



1 x Pen Pocket



1 x Type-c To
Type-a USB Cable



1 x Quick Start Guide

Figure 1: All items included in the VEIKK A30 V2 package.

SETUP GUIDE

1. Connecting the Tablet

Connect the VEIKK A30 V2 Drawing Tablet to your computer or Android device using the provided USB Type-C cable. The Type-C port allows for convenient plug-in and out with either direction.



Figure 2: The convenient Type-C port ensures stable and easy connection.

2. Driver Installation

For optimal performance and customization, it is highly recommended to install the latest driver for your operating system. Drivers can be downloaded from the official VEIkk website.

For Mac Users:

Video 1: Official guide on how to install the VEIkk driver on MacOS (Big Sur/Catalina/Mojave).

After installation, you may need to configure security and privacy settings on your operating system to grant necessary permissions to the tablet driver.

3. Basic Configuration

Once the driver is installed, you can open the VEIkk Tablet application to customize settings such as pen pressure sensitivity, assign functions to the customizable touch keys, and configure the gesture pad.

4 Customizable touch keys & Track Pad

Easy to zoom in, zoom out, undo, redo and other functions

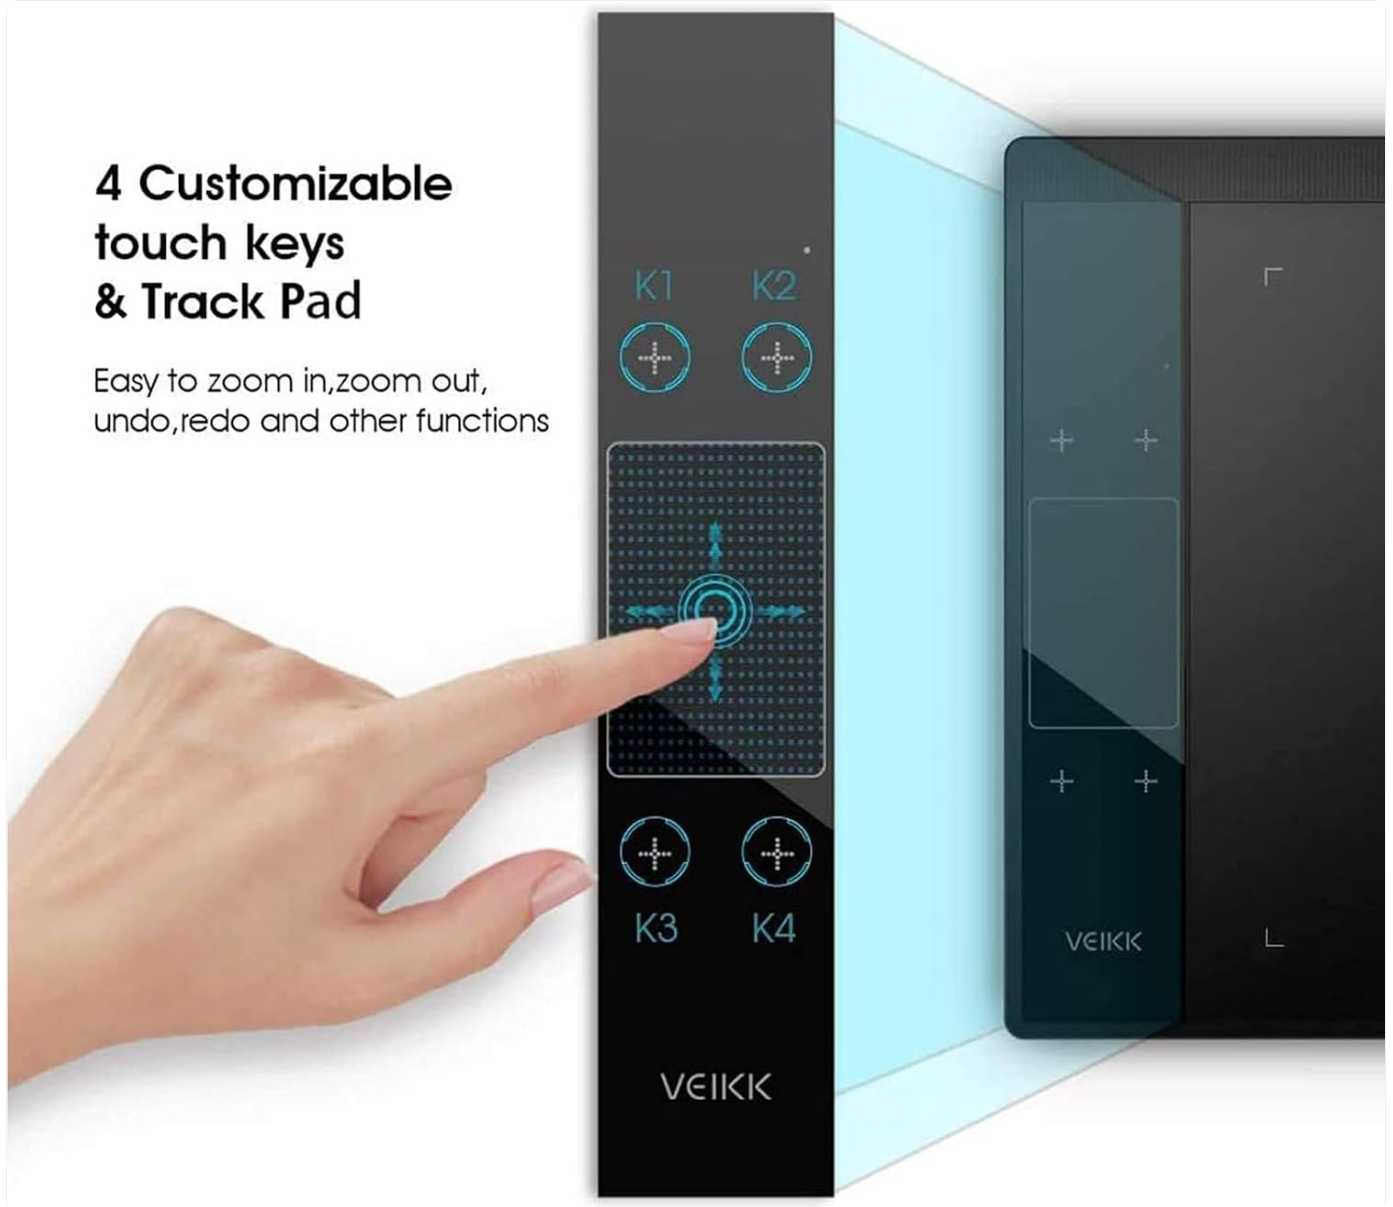


Figure 3: The unique touch pad design with 4 touch keys and one gesture pad offers a perfect touch experience.

The tablet supports both right-hand and left-hand modes, which can be configured in the driver settings.

OPERATING THE TABLET

Pen Usage

The battery-free pen offers 8192 levels of pressure sensitivity, allowing for precise control over line thickness and opacity. It also supports 60° tilt function for natural shading effects in compatible software.

Battery-free Pen



Figure 4: The battery-free pen provides constant uninterrupted drawing without the need for charging.

Touch Keys and Gesture Pad

The 4 customizable touch keys and the gesture pad provide quick access to frequently used functions such as zoom in/out, undo/redo, and brush size adjustments. These can be configured to suit your specific workflow in the driver settings.

Software Compatibility

The VEIKK A30 V2 is compatible with a wide range of creative software, including but not limited to Adobe Photoshop, SAI, Adobe Illustrator, Corel Painter, Clip Studio, SketchBook, MediBang, Zbrush, Krita, and Gimp. It supports Windows 7 or later, Mac OS 10.12 or later, Android 6.0-13.0, and Linux.



Windows/Mac/Android/Linux

Figure 5: Wide software compatibility for diverse creative needs.

MAINTENANCE

Replacing Pen Nibs

The pen nibs are consumable parts and will wear down with use. Replace them when they become too short or sharp to ensure smooth drawing. Use the provided nib remover tool to carefully pull out the old nib and insert a new one.

Cleaning the Tablet

To clean the tablet surface, use a soft, dry cloth. For stubborn smudges, a slightly damp cloth can be used, but ensure no liquid enters the ports or buttons. Avoid using harsh chemicals or abrasive materials.

General Care

Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures. Avoid dropping the tablet or applying excessive force to the surface or pen.

TROUBLESHOOTING

- **Pen not responding:** Ensure the USB cable is securely connected. Reinstall the driver if the issue persists. Check if any other tablet drivers are conflicting and uninstall them.
- **Pressure sensitivity not working:** Verify that the driver is correctly installed and that

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DQK7H15>

More documents and user manuals: <https://manuals.plus/>