

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Relaxdays](#) /

› [Relaxdays Balcony Awning 150x120cm - Instruction Manual](#)

Relaxdays Balcony Awning 150x120cm

Relaxdays Balcony Awning 150x120cm

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all components are present and undamaged before assembly.
- Do not use the awning in strong winds or heavy rain. Retract the awning immediately under such conditions.
- Ensure the telescopic poles are securely fastened and stable before use.
- Keep children and pets away from the awning during operation.
- Do not hang heavy objects on the awning frame.
- Regularly check all connections and fasteners for tightness.

2. PACKAGE CONTENTS

Verify that all the following parts are included in your package:

- Awning fabric with roller tube
- Telescopic support poles (2x)
- Crank handle
- Mounting brackets and fasteners
- End caps for poles
- Instruction manual

3. SETUP INSTRUCTIONS

Follow these steps for proper assembly and installation of your balcony awning.



This diagram illustrates the key dimensions of the awning, including its width, projection, and adjustable height range.

1. **Prepare the Location:** Choose a suitable location on your balcony or patio. Ensure there is enough space for the awning (150 cm width, 120 cm projection) and that the ceiling/floor can support the telescopic poles. The adjustable height range is between 200 cm and 300 cm.
2. **Assemble the Main Awning Unit:** Attach the awning fabric and roller tube to the main support bar. Ensure it is securely fastened according to the included hardware.
3. **Attach Telescopic Poles:** Insert the telescopic support poles into the designated slots on the main awning unit. Ensure the top and bottom end caps are firmly attached to the poles. These caps provide stability without requiring drilling.
4. **Position the Awning:** Place the assembled awning in your desired location. Extend the telescopic poles by twisting and pulling them until they firmly press against the ceiling and floor. Use the adjustment knobs to secure the height. Ensure the awning is level and stable.
5. **Attach the Crank Handle:** Connect the crank handle to the designated mechanism on the side of the awning.



The non-slip end caps ensure stable installation of the telescopic poles without requiring permanent drilling.



This image shows the robust mounting bracket, the knob for height adjustment, and the crank for extending and retracting the awning.

4. OPERATING INSTRUCTIONS

The Relaxdays Balcony Awning is designed for easy manual operation.

Your browser does not support the video tag.

This video demonstrates the smooth operation of the Relaxdays Balcony Awning, showing how it extends and retracts with the crank handle.

1. **Extending the Awning:** Turn the crank handle clockwise to extend the awning fabric. Continue turning until the awning reaches your desired projection (up to 120 cm).
2. **Retracting the Awning:** Turn the crank handle counter-clockwise to retract the awning fabric. Continue turning until the awning is fully rolled up against the main support bar.
3. **Adjusting the Angle:** The angle of the awning can be adjusted by loosening the side fasteners on the support arms, setting the desired angle, and then re-tightening the fasteners.




The awning can be easily retracted for storage or extended to provide shade as needed.

5. MAINTENANCE

Proper maintenance will extend the life of your awning.

- **Cleaning the Fabric:** Clean the polyester fabric with a soft brush and mild soapy water. Rinse thoroughly with clean water and allow it to air dry completely before retracting. Do not use harsh chemicals or abrasive cleaners.
- **Cleaning the Frame:** Wipe the steel frame with a damp cloth to remove dust and dirt. Dry thoroughly to prevent rust.
- **Lubrication:** Periodically apply a silicone-based lubricant to the moving parts of the crank mechanism to ensure smooth operation.
- **Winter Storage:** For prolonged periods of non-use, especially during winter, it is recommended to retract the awning and store it in a dry, protected area to prevent damage from extreme weather.

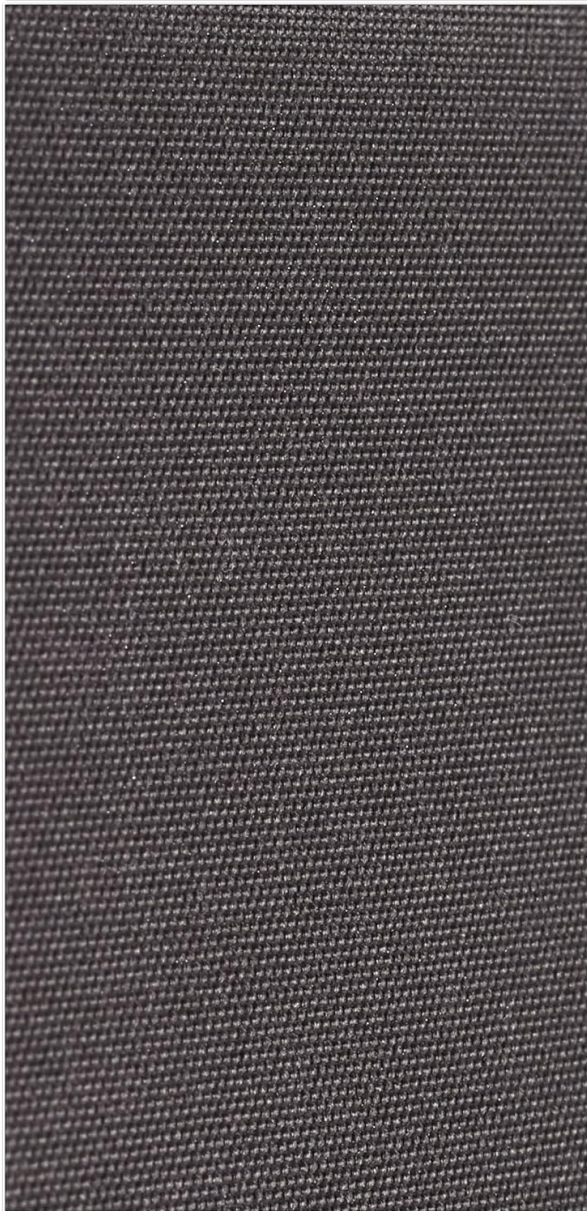

The awning's fabric is treated to be water-resistant, offering protection against light rain.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Awning not extending/retracting smoothly:** Check if the crank mechanism is clean and lubricated. Ensure there are no obstructions in the path of the fabric or the support arms.
- **Awning feels unstable:** Re-check the tightness of the telescopic poles against the ceiling and floor. Ensure all fasteners are secure. The poles should be adjusted to their maximum stable extension within the 200-300 cm range.
- **Fabric sagging:** Ensure the support arms are correctly positioned and tightened to maintain tension on the fabric.

7. SPECIFICATIONS

Feature	Specification
Brand	Relaxdays

Model	Balcony Awning
Dimensions (Width x Projection)	150 x 120 cm
Adjustable Height	200 - 300 cm
Color	Grey
Material	Polyester fabric, Alloy Steel frame
Weight	7.7 kg
Assembly Required	Yes
Features	UV Resistant, Crank Operated, No Drilling Required

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact Relaxdays customer support.

If you encounter any issues or have questions regarding your Relaxdays Balcony Awning, please contact our customer support team. Contact information can typically be found on the Relaxdays official website or on your purchase receipt.

9. PRODUCT OVERVIEW



The Relaxdays Balcony Awning provides effective shade and protection, enhancing your outdoor living space.



Enjoy your balcony or patio with enhanced comfort and protection from direct sunlight.



The high-quality polyester fabric is designed for durability and features an elegant scalloped edge.