

[Manuals.plus](#) /

› [Utilitech](#) /

› Utilitech White Remote Control Outlet RFK1600L Instruction Manual

Utilitech RFK1600L

Utilitech White Remote Control Outlet (Model: RFK1600L) Instruction Manual

Your guide to setting up and operating your remote control outlet.

1. INTRODUCTION

The Utilitech White Remote Control Outlet (Model RFK1600L) provides convenient wireless control over your electrical devices and lamps. This system consists of a plug-in receiver and a wireless remote switch. The remote switch can be placed in any convenient location without the need for wiring, and the receiver plugs into a standard active outlet. Radio Frequency (RF) signals allow control through walls and around corners, up to a distance of 100 feet.



Figure 1: The Utilitech White Remote Control Outlet system, showing the plug-in receiver on the left and the wireless wall switch on the right. The receiver has a grounded outlet and a circular button, while the wall switch features a modern rocker design.

2. SAFETY INFORMATION

Please read and understand all instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not exceed the electrical ratings of the receiver.
- Do not use in wet locations or near water.
- Ensure the receiver is fully inserted into the wall outlet.
- Keep children away from electrical devices.
- Do not disassemble or modify the product.

3. PACKAGE CONTENTS

- 1 x Wireless Remote Switch (with pre-installed lithium battery)
- 1 x Plug-in Receiver Outlet
- Instruction Manual

4. SETUP

4.1 Installing the Remote Switch

The remote switch comes with a pre-installed lithium battery designed to last up to 2 years. No wiring is required for the remote switch. It can be mounted on a wall using screws or adhesive strips (not included) in a location convenient for you.

4.2 Plugging in the Receiver

1. Locate an active, grounded wall outlet where you wish to control a device.
2. Plug the Utilitech receiver into the wall outlet.
3. Plug the device or lamp you wish to control into the grounded outlet on the receiver. Ensure the device is switched to the "ON" position if it has its own power switch.

4.3 Automatic Pairing

The remote switch and receiver are pre-paired from the factory. Simply plug in the receiver and use the remote switch. If additional receivers are purchased, they feature automatic pairing. To pair a new receiver:

1. Plug the new receiver into an active wall outlet.
2. Within 5 seconds of plugging in, press and hold the LED backlit on/off button on the receiver for 3 seconds until the LED blinks.
3. Press the "ON" button on your remote switch. The receiver's LED will stop blinking, indicating successful pairing.

5. OPERATING INSTRUCTIONS

5.1 Using the Remote Switch

- Press the top part of the rocker switch to turn the connected device **ON**.
- Press the bottom part of the rocker switch to turn the connected device **OFF**.

The remote control uses RF signals, allowing it to operate devices up to 100 feet away, even through walls and around corners, provided there are no significant obstructions or interference.

5.2 Using the Receiver's Manual Button

The receiver features an LED backlit on/off button. This button allows you to manually turn the connected device on or off directly at the outlet, independent of the remote switch.

- Press the button once to toggle the power state (ON/OFF).
- The LED backlight indicates the power status of the outlet.

6. MAINTENANCE

6.1 Battery Replacement (Remote Switch)

The remote switch uses a lithium battery with an estimated life of up to 2 years. When the remote switch stops responding or its range decreases significantly, it may be time to replace the battery.

1. Carefully open the remote switch casing (refer to the diagram on the back of the switch for guidance).
2. Remove the old battery. Note the battery type and polarity.
3. Insert a new battery of the same type, ensuring correct polarity.
4. Close the casing securely.

6.2 Cleaning

To clean the remote switch or receiver, wipe with a soft, dry cloth. Do not use liquid cleaners or solvents.

7. TROUBLESHOOTING

- **Device not responding to remote:**
 - Ensure the receiver is plugged into an active outlet.
 - Verify the device plugged into the receiver is switched ON.
 - Check the remote switch battery. Replace if necessary.
 - Try re-pairing the remote switch and receiver (refer to Section 4.3).
- **Limited range or intermittent operation:**
 - Ensure the remote switch is within the 100-foot operating range.
 - Minimize obstructions between the remote and receiver (e.g., large metal objects, thick walls).
 - Avoid areas with strong electromagnetic interference.
 - Check the remote switch battery.
- **Receiver LED not lighting up:**
 - Ensure the receiver is securely plugged into a functioning wall outlet.
 - Test the outlet with another device to confirm it has power.

8. SPECIFICATIONS

Brand	Utilitech
Model Number	RFK1600L
UPC	070686763490
Color	White

Product Dimensions	8 x 6 x 2 inches
Item Weight	4 ounces
Wireless Range	Up to 100 feet (RF signals)
Remote Battery Life	Up to 2 years (Lithium battery)
Receiver Features	1 grounded outlet, LED backlit on/off button

9. WARRANTY INFORMATION

Specific warranty details for the Utilitech White Remote Control Outlet (Model RFK1600L) are not provided in this manual. Please refer to the product packaging or contact Utilitech customer support for warranty terms and conditions.

10. CUSTOMER SUPPORT

For technical assistance or further inquiries regarding your Utilitech White Remote Control Outlet, please contact Utilitech customer support. Contact information is typically available on the product packaging or the official Utilitech website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DQR5QN3>

More documents and user manuals: <https://manuals.plus/>