

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waterpik](#) /

› [Waterpik Cordless Express Water Flosser, Battery Operated & Portable for Travel & Home, ADA Accepted, Waterproof for Shower Use, White WF-02, Packaging May Vary White AA battery](#)

Waterpik WF-02

Waterpik Cordless Express Water Flosser Instruction Manual

INTRODUCTION

Welcome to the Waterpik Cordless Express Water Flosser user manual. This portable, battery-operated water flosser is designed for effective oral hygiene, offering convenience for travel, smaller bathrooms, or shower use. It combines water pressure with pulsating action to remove plaque bacteria and improve gum health.

SAFETY INFORMATION

WARNING: Do not use this product with broken or damaged parts. Keep out of reach of children. Do not use while sleeping or unconscious. Do not use in bathtub or near water. Do not use if you have a heart condition, are pregnant, or have any other medical condition that could be affected by water pressure. Always follow the instructions in the manual for safe and proper use.

SETUP

Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure all parts are present and undamaged. The box should contain the Waterpik Cordless Express unit, 2 flossing tips, and 3 AA batteries.



Figure 1: Waterpik Cordless Express Water Flosser and included accessories.

Included in the box



Figure 2: Components included with the Waterpik Cordless Express Water Flosser.

Battery Installation

The Waterpik Cordless Express is powered by 3 AA batteries. Locate the battery compartment at the bottom of the unit. Insert the batteries according to the polarity indicators (+/-) inside the compartment. Securely close the compartment cover.

Filling the Reservoir

The unit features a removable 5-ounce water reservoir. To fill, detach the reservoir from the main unit. Open the small cap on the reservoir and fill with warm water. Securely close the cap and reattach the reservoir to the unit.

Dual pressure control

Personalize water flosser intensity



Figure 3: Filling the easy-to-fill water reservoir.

OPERATING INSTRUCTIONS

Attaching the Flossing Tip

Select your desired flossing tip. Insert the tip into the center of the handle until it clicks into place. To remove, press the tip eject button on the side of the unit and pull the tip out.

waterpik®

CORDLESS EXPRESS

waterflosser™



Figure 4: Quick release mechanism for flossing tips.

Adjusting Pressure Settings

The Waterpik Cordless Express offers two pressure settings. Use the slider switch on the handle to select between the lower (I) and higher (II) pressure settings. Start with the lower setting and increase as comfortable.



Figure 5: Dual pressure control for personalized intensity.

Flossing Technique

Lean over a sink and place the tip in your mouth. Close your lips enough to prevent splashing, but allow water to flow from your mouth into the sink. Turn the unit ON. Direct the water stream at a 90-degree angle to your gumline. Follow the gumline and pause briefly between teeth. Continue until you have cleaned all areas of your mouth. The 5-ounce reservoir provides approximately 30 seconds of flossing time.



Ideal For
Portability, small bathrooms,
and use in the shower

Figure 6: Demonstrating portable use over a sink.



Battery-Operated Handheld
No outlets or charging, uses
3 AA batteries (included)

Figure 7: Handheld design for convenient use.



FIRST IN CLASS ADA SEAL OF ACCEPTANCE

Figure 8: On/Off water control for convenient operation.

MAINTENANCE

Cleaning the Unit

After each use, empty any remaining water from the reservoir. It is recommended to rinse the reservoir with clean water. The reservoir is top-rack dishwasher safe for easy cleaning. Wipe the exterior of the unit with a soft, damp cloth.

Replacing Batteries

The unit uses 3 AA replaceable batteries. Assuming once-a-day use, replace batteries every 1 to 2 months, depending on the quality of batteries. If the water pressure weakens, it may be an indication that the batteries need replacement.

TROUBLESHOOTING

No Water Flow

- Ensure the reservoir is filled with water.
- Check that the flossing tip is securely inserted.
- Verify that the batteries are correctly installed and have sufficient charge. Replace if necessary.

Weak Water Pressure

- Replace the AA batteries with new ones.
- Ensure the selected pressure setting is appropriate (Level II for higher pressure).

Unit Not Turning On

- Check battery installation and replace batteries if they are depleted.
- Ensure the on/off switch is fully engaged.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.6 x 2.5 x 11.75 inches; 11.68 ounces
Item model number	WF-02
Batteries	3 AA batteries required. (included)
UPC	073950199742
Manufacturer	AmazonUs/WATV9
ASIN	B07DQSC9B5
Country of Origin	China
Brand	Waterpik
Power Source	Battery Powered
Special Feature	Portable, Waterproof for Shower Use
Product Benefits	Removes Plaque, ADA Accepted for Safety and Effectiveness, Gum Health
Unit Count	1 Count
Best Sellers Rank	See Top 100 in Health & Household
GTIN	073950199742

WARRANTY AND SUPPORT

The Waterpik Cordless Express Water Flosser is backed by a 1-year limited manufacturer's warranty. For detailed warranty information, please refer to the full product manual available as a PDF document.

For any product questions or support needs, Waterpik's Colorado support team is available to assist you. You can find contact information on the official Waterpik website or within the full user guide.

[Download User Guide \(PDF\)](#)

