

Generic UN50NU7100FXZA

Instruction Manual for Globalsaving AC Power Cord

Model: UN50NU7100FXZA Compatible Power Supply Cable

PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Globalsaving AC Power Cord, designed specifically for the Samsung 50-inch 4K UHD Smart TV UN50NU7100FXZA. This power cord serves as a direct replacement or spare for your television's power supply, ensuring reliable power delivery.



Figure 1: Globalsaving AC Power Cord. This image displays the complete power cord, highlighting its two-prong plug for wall outlets and the figure-8 connector designed to fit into compatible electronic devices like televisions.

SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Ensure the power cord is compatible with your device's power requirements. This cord is specifically designed for the Samsung UN50NU7100FXZA TV.
- Do not use the power cord if it is damaged, frayed, or has exposed wires.
- Do not overload electrical outlets.
- Keep the power cord away from water, heat sources, and sharp objects.
- Always grasp the plug, not the cord, when disconnecting from an outlet.

- Do not attempt to modify or repair the power cord. Contact qualified personnel for assistance.

SETUP AND INSTALLATION

Follow these steps to properly connect your AC power cord:

1. Ensure your Samsung UN50NU7100FXZA TV is turned off and unplugged from any existing power source.
2. Locate the power input port on the back of your television. This port is typically a figure-8 shape.
3. Take the figure-8 connector end of the Globalsaving AC Power Cord and firmly insert it into the power input port on your TV. Ensure it is fully seated.
4. Plug the two-prong end of the power cord into a standard, grounded electrical wall outlet.
5. Once connected, you may turn on your television.



Figure 2: Power Cord Connectors. This image provides a detailed view of both the two-prong plug, which connects to a wall outlet, and the figure-8 connector, which plugs into the television's power input.

OPERATING INSTRUCTIONS

The Globalsaving AC Power Cord is designed for simple plug-and-play operation. Once correctly connected to your Samsung UN50NU7100FXZA TV and a power outlet, the television should receive power and function as intended. No additional setup or configuration is required for the power cord itself.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power cord:

- **Cleaning:** Disconnect the power cord from both the TV and the wall outlet before cleaning. Wipe the cord and plugs with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, coil the power cord loosely. Avoid tight coiling or kinking, which can damage the internal wires. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the entire length of the cord for any signs of damage, such as cuts, fraying, or discoloration. If any damage is observed, discontinue use immediately and replace the cord.

TROUBLESHOOTING

If your television is not receiving power after connecting the Globalsaving AC Power Cord, consider the following:

Problem	Possible Cause	Solution
TV does not power on.	Power cord not fully inserted.	Ensure both ends of the power cord are firmly seated in the TV and the wall outlet.
TV does not power on.	Wall outlet is not active.	Test the wall outlet with another known working device. Check your home's circuit breaker if necessary.
TV does not power on.	Damaged power cord.	Inspect the power cord for any visible damage. If damaged, replace it immediately. Do not attempt to repair.
TV does not power on.	TV internal issue.	If the power cord is confirmed to be working and the outlet is active, the issue may be with the television itself. Consult your TV's user manual or contact Samsung support.

SPECIFICATIONS

Attribute	Value
Product Dimensions	6 x 1 x 1.5 inches (packaging)
Item Weight	7 ounces
ASIN	B07DQSSYB1
Date First Available	June 14, 2018
Manufacturer	Globalsaving
Country of Origin	China
Brand	Generic (Globalsaving)
Connector Gender	Male-to-Female
Total Power Outlets	1 (for the device)
Item Length	50 Inches

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your Globalsaving AC Power Cord, please refer to the seller's return policy or contact the manufacturer directly. Details for contacting Globalsaving may be available through your purchase platform or on the product packaging.

For issues related to your Samsung television, please consult the Samsung user manual or contact Samsung customer support.

© 2024 Globalsaving. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.