

[Manuals.plus](#) /

> [USARMT](#) /

> USARMT GB118WJSA Replacement Remote Control for Sharp Aquos LED Smart TVs Instruction Manual

USARMT GB118WJSA

USARMT GB118WJSA Replacement Remote Control Instruction Manual

For Sharp Aquos LED Smart TVs

INTRODUCTION


This manual provides instructions for the USARMT GB118WJSA replacement remote control. This remote is designed to function as a direct replacement for original Sharp Aquos LED Smart TV remotes, offering pre-programmed functionality without the need for complex setup. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

SETUP: BATTERY INSTALLATION

The GB118WJSA remote control operates on two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



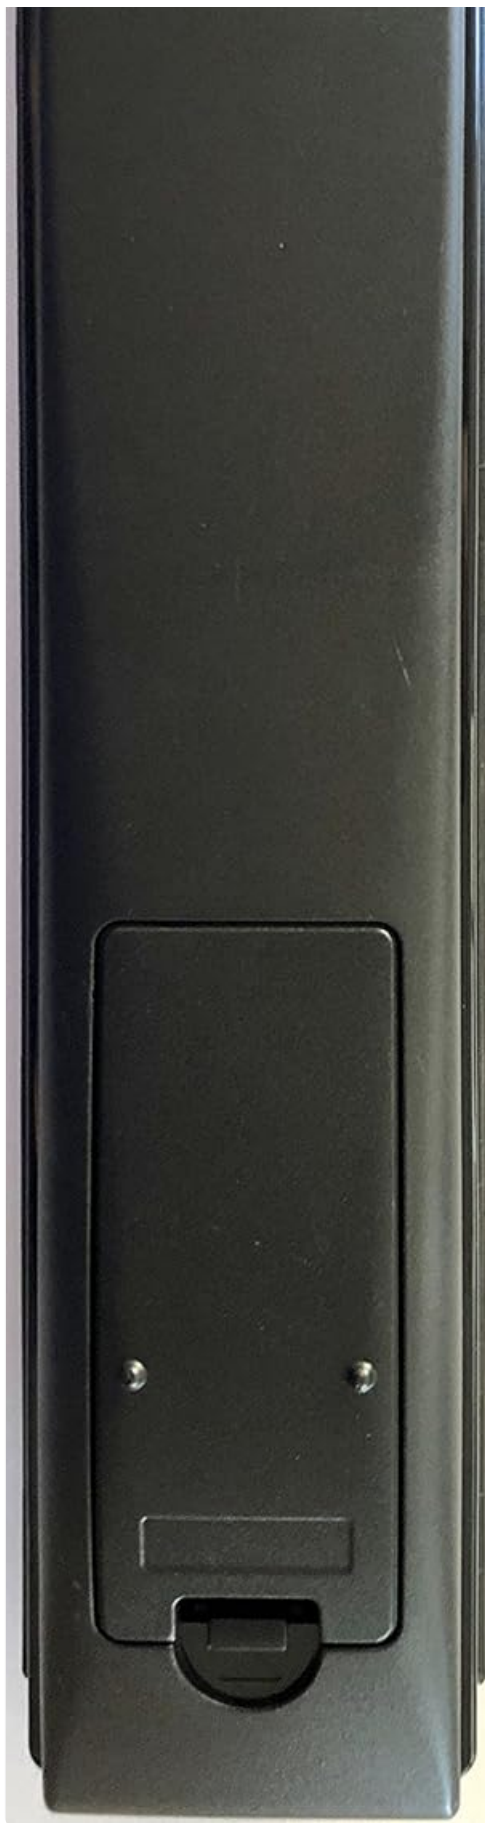

This image shows the rear of the GB118WJSA remote control, with a clear view of the battery compartment cover, indicating where to insert batteries.

Once batteries are installed, the remote is pre-programmed and ready for immediate use with compatible Sharp Aquos TVs. No additional setup or programming is required.

OPERATING INSTRUCTIONS

The GB118WJSA remote control features a comprehensive set of buttons for controlling your Sharp Aquos LED Smart TV. Refer to the image below for button identification and their primary functions.





This image displays the front of the GB118WJSA remote control, highlighting the layout of all functional buttons, including power, channel, volume, navigation, and dedicated app buttons.

Key Button Functions:

- **POWER (Red Button):** Turns the TV on or off.
- **DISPLAY (SOURCE):** Cycles through input sources (HDMI, AV, Component, etc.).
- **TV/STB/DVD-VCR/AUDIO:** Selects the device to control if the remote supports universal functions (may not be fully functional on all replacement remotes).
- **Number Buttons (0-9):** Direct channel selection.
- **CC (Closed Caption):** Toggles closed captions on/off.
- **AV MODE:** Adjusts audio/video modes.
- **VIEW MODE:** Changes screen aspect ratio or picture modes.
- **FLASHBACK:** Returns to the previously viewed channel.
- **MUTE:** Mutes or unmutes the TV audio.
- **VOL +/-:** Adjusts the volume level.
- **CH ^/v:** Changes channels up or down.
- **INPUT:** Opens the input source menu.
- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **MENU:** Opens the TV's main menu.
- **Smart Central:** Accesses the Smart Central platform on your Sharp TV.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **EXIT:** Exits the current menu or screen.
- **RETURN:** Returns to the previous menu or screen.
- **NETFLIX:** Direct access to the Netflix application.
- **FAV APP:** Customizable favorite application button.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context within menus or applications.

COMPATIBLE TV MODELS

This replacement remote control is compatible with a wide range of Sharp Aquos LED Smart TV models, including but not limited to:

- LC-60C6600U
- LC-60EQ10U

- LC-60EQ30U
- LC-60LE660U
- LC-60LE661U
- LC-60SQ15U
- LC-60TQ15U
- LC-60UD27U
- LC-60UQ17U
- LC-70C6600U
- LC-70EQ10U
- LC-70EQ30U
- LC-70LE660U
- LC-70LE661U
- LC-70SQ15U
- LC-70TQ15U
- LC-70UD27U
- LC-70UQ17U
- LC-80LE661U
- LC-80UQ17U

If your Sharp Aquos TV model is not listed, please refer to your TV's original manual or contact customer support to confirm compatibility.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working.	• Batteries: Check if batteries are inserted correctly (+/- terminals). Replace with fresh AAA batteries. • Line of Sight: Ensure there is a clear line of sight between the remote's IR emitter and the TV's IR receiver. Obstructions can block the signal. • Distance: Make sure you are within the effective range of the remote control. • TV Power: Confirm the TV is plugged in and powered on.
Some buttons do not respond.	• Specific Function: Some advanced functions (e.g., specific device controls like STB/DVD) may require the TV to support those commands or may not be fully replicated by a replacement remote. • TV Model: Ensure your TV model is fully compatible with all features of this remote.

Problem	Possible Cause / Solution
Remote works intermittently.	• Low Batteries: Replace batteries with new ones. • Interference: Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

- **Model:** GB118WJSA
- **Brand:** USARMT
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Sharp Aquos LED Smart Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design, Pre-programmed
- **Max Number of Supported Devices:** 1 (primarily for TV control)

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control may vary depending on the retailer or seller. Please refer to your purchase documentation or contact the seller directly for details regarding warranty coverage and customer support.

For technical assistance or further inquiries, please reach out to the customer service provided by your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07DQZR43B>

More documents and user manuals: **<https://manuals.plus/>**