

LUBY GH55-H

LUBY Large Toaster Oven Countertop Instruction Manual

Model: GH55-H | Brand: LUBY

INTRODUCTION

Thank you for choosing the LUBY Large Toaster Oven Countertop. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before initial use and keep it for future reference.



The LUBY Large Toaster Oven, shown here with a roasted turkey, highlights its spacious interior and French door design.

PRODUCT OVERVIEW

Included Components:

- Machine Body (1 Pc)
- Bake Tray (1 Pc)
- Wire Rack (1 Pc)
- Tray Handle (1 Pc)

Key Features:

- **Large Capacity:** Designed to accommodate a 14-inch pizza, roast a 20-lb turkey, or comfortably fit 24-cup muffin trays.
- **French Door Design:** The dual French doors open outwards, providing unobstructed access to the oven interior and saving countertop space.

- **Separate Temperature Selectors:** Independent and precise temperature control for upper and lower heating elements, allowing for versatile cooking.
- **60-Minute Timer:** Features an auto shutoff and signal bell for precise cooking control and convenience.
- **Fast & Even Heating:** Equipped with four heating tubes for efficient and uniform heat distribution.
- **Upgraded Knobs:** The control knobs feature clear marking lines for improved visibility and ease of use.



55L Extra Toaster oven

Prepare a big meals for your friends or the whole family
with Luby extra large toaster oven!



14 Inch Pizza



20 Pound Turkey



18 Slices Of Bread

This image demonstrates the 55L extra-large capacity of the LUBY toaster oven, capable of preparing large meals such as a 14-inch pizza, 20-pound turkey, or 18 slices of bread.



The French door design allows for easy and unobstructed placement and removal of food, as shown by a child inserting a baking tray.

SETUP

1. Unpacking:

Carefully remove the toaster oven and all packaging materials from the box. Ensure all accessories (bake tray, wire rack, tray handle) are present. Dispose of packaging responsibly.

2. Placement:

Place the appliance on a stable, level, and heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place it near flammable materials or under cabinets that may be damaged by heat.

3. Initial Use (Burn-Off):

Before using for the first time, operate the oven empty to burn off any manufacturing residues. This may produce a slight odor and some smoke, which is normal. Ensure the area is well-ventilated during this process.

1. Plug the oven into a grounded electrical outlet.
2. Set both upper and lower temperature knobs to 450°F (230°C).
3. Set the timer knob to "Stay On" or for 15-20 minutes.
4. Allow the oven to run until the odor and smoke dissipate.
5. Once cooled, wipe the interior with a damp cloth.

OPERATING INSTRUCTIONS

Controls:



Simply Control
easily re-heats or perfect for more delicious food

The control panel features three distinct knobs for precise temperature and time adjustments.

- **Upper Temperature Knob:** Controls the temperature of the upper heating elements (0°F-450°F).
- **Lower Temperature Knob:** Controls the temperature of the lower heating elements (0°F-450°F).
- **Timer Knob:** Sets the cooking time from 0 to 60 minutes. It also includes a "Stay On" function for continuous operation. The timer will automatically shut off the oven and sound a signal bell when the set time expires.

Cooking Modes:

The independent temperature controls allow for various cooking configurations:

- **Toast/Bake:** Set both upper and lower temperature knobs to the desired temperature.
- **Broil:** Typically uses only the upper heating elements. Set the upper temperature knob to the desired broil temperature and the lower knob to OFF.
- **Warm:** Set both temperature knobs to a low setting (e.g., 150°F) to keep food warm.

Rack Positions:

The oven features four rack positions to accommodate different food sizes and cooking needs. Adjust the wire rack or bake tray to the appropriate height before preheating.

Preheating:

For best results, preheat the oven for 10-15 minutes at the desired temperature before placing food inside.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your LUBY Toaster Oven.

General Cleaning:

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
3. For the interior, wipe down with a damp cloth. For stubborn stains, a solution of water and vinegar with a little baking soda can be used (as suggested by users). Apply with a spray bottle, let sit for 15 minutes, gently scrub with a sponge, then wipe clean with a damp cloth and dry thoroughly.

Cleaning Accessories:

- The bake tray, wire rack, and crumb tray can be washed with warm, soapy water. Rinse thoroughly and dry completely before returning to the oven.
- Ensure the crumb tray is always in place at the bottom of the oven to catch crumbs and drips, making cleaning easier.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not heating.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check household circuit breaker. Set the timer or use the "Stay On" function.

Problem	Possible Cause	Solution
Uneven cooking.	Incorrect rack position; insufficient preheating; food too crowded.	Adjust rack position for optimal heat distribution. Always preheat the oven. Avoid overcrowding the oven; cook in batches if necessary.
Knobs/markings fading.	Wear and tear from frequent use or cleaning.	Handle knobs gently. Avoid harsh chemical cleaners on the control panel.
Racks feel flimsy or slide out.	Heavy items; racks not fully seated.	Ensure racks are fully inserted into the support grooves. Use caution when pulling out racks with heavy items; support the rack with an oven mitt.

SPECIFICATIONS

- **Brand:** LUBY
- **Model Name:** Large Toaster Oven Countertop
- **Item Model Number:** GH55-H
- **Color:** Silver
- **Product Dimensions (External):** 22.04"W x 16.14"D x 14.37"H
- **Usable Interior Dimensions:** 16-3/8"W x 15-7/8"D x 8-1/2"H (upper element to rack at lowest position)
- **Capacity:** 55L (fits 14" pizza, 20lb Turkey, 18 Slices toast)
- **Special Feature:** Manual Control
- **Control Type:** Knob
- **Door Style:** French Door
- **Finish Type:** Painted
- **Door Material Type:** Stainless Steel
- **Power Source:** Corded Electric
- **Temperature Range:** 150 - 450 Degrees Fahrenheit
- **Number of Shelves:** 4 rack positions
- **Item Weight:** 24.9 pounds
- **Manufacturer:** Luby
- **Manufacture Year:** 2018



Item Dimension

L22.04 x W16.14 x H14.37 inches.

Internal Dimension

L16.38 x W15.88 x H8.5 inches.

Detailed dimensions of the LUBY toaster oven, including external and internal measurements, for proper placement and capacity understanding.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official LUBY website or contact the retailer where the product was purchased. A comprehensive User Manual (PDF) is also available for download from the product's listing page on Amazon.

User Manual (PDF): [Download Here](#)