

[Manuals.plus](#) /

› [Domo](#) /

› Domo Deli-Fryer XXL Hot Air Fryer User Manual

Domo DO513FR

Domo Deli-Fryer XXL Hot Air Fryer User Manual

Model: DO513FR | Brand: Domo

1. INTRODUCTION

Thank you for purchasing the Domo Deli-Fryer XXL Hot Air Fryer. This appliance is designed to provide a healthier alternative to traditional frying, using fast air circulation to cook a variety of foods with significantly less fat. Please read this manual carefully before using the appliance to ensure safe and optimal operation.



Figure 1: Domo Deli-Fryer XXL Hot Air Fryer, front view.

This image shows the sleek black design of the Domo Deli-Fryer XXL, highlighting its digital display panel and the silver handle of the frying basket.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Keep the appliance out of reach of children.

- Do not block the air inlet and outlet openings.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- Do not use the appliance for any purpose other than described in this manual.
- Unplug the appliance from the outlet when not in use and before cleaning.
- The appliance features overheat protection. If it overheats, it will automatically shut down.

3. COMPONENTS AND FEATURES

The Domo Deli-Fryer XXL is equipped with several features designed for ease of use and efficient cooking.

- **Capacity:** 5.5 liters (1.5 kg food capacity).
- **Temperature Control:** Adjustable from 80°C up to 200°C.
- **LCD Display:** Digital setting for time and temperature.
- **Timer:** Up to 30 minutes.
- **Automatic Programs:** 8 pre-set programs for various dishes.
- **Cool Touch Housing:** Ensures safety during operation.
- **Non-stick Coating:** Frying pan and basket for easy cleaning.
- **Accessories:** Includes grill rack and skewers.



Figure 2: Digital LCD Display.

This image provides a detailed view of the digital LCD display, showing temperature (180°C) and time (28 minutes) settings, along with various program icons.

4. SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging.
2. **Cleaning:** Before first use, clean the frying pan and basket with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the appliance on a stable, horizontal, and level surface. Ensure there is at least 10 cm of free space around the appliance for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Pull the frying pan out of the appliance.
2. Place the ingredients into the basket. Do not exceed the MAX indication.
3. Slide the frying pan back into the appliance.
4. Press the power button to turn on the appliance.
5. Use the temperature and time control buttons to set your desired cooking parameters. The temperature can be adjusted from 80°C to 200°C, and the timer up to 30 minutes.
6. Alternatively, select one of the 8 automatic programs by pressing the 'M' button.
7. Press the start button to begin cooking.
8. Some ingredients require shaking halfway through the preparation time. Pull the pan out by the handle and shake it. Then slide the pan back into the air fryer.
9. When the timer reaches zero, the appliance will emit a sound, indicating cooking is complete.
10. Carefully pull out the pan and empty the contents.





Figure 3: Preparing fries in the Deli-Fryer XXL.

These images demonstrate the process of loading the frying basket with ingredients, specifically showing a batch of fries ready for air

frying.

5.2 Cooking Various Foods

The Deli-Fryer XXL is versatile and can cook a wide range of foods.

- **Fries & Snacks:** Ideal for crispy fries, croquettes, and various frozen snacks.
- **Meat & Poultry:** Cook chicken, beef, and other meats to perfection.
- **Baked Goods:** Suitable for baking items like quiche and cakes.
- **Vegetables:** Roast or crisp a variety of vegetables.







Figure 4: Versatile cooking options.

These images showcase the versatility of the air fryer, demonstrating its ability to cook muffins, mixed vegetables, and even items on a grill rack with skewers.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Deli-Fryer XXL.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Frying Pan and Basket:** The frying pan and basket have a non-stick coating and can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes.
3. **Appliance Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaning materials.
4. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.
5. **Storage:** Store the appliance in a dry place once it is clean and dry.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
The appliance does not work.	The appliance is not plugged in.	Plug the main plug into a grounded wall socket.
Food is not cooked evenly.	Too much food in the basket; food not shaken.	Reduce the amount of food; shake the basket halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly; remove excess fat from ingredients.
Fries are not crispy.	Incorrect temperature or cooking time; type of potato.	Increase temperature/time; use fresh potatoes suitable for frying.

8. SPECIFICATIONS

Brand: Domo
Model Number: DO513FR
Color: Black
Product Dimensions: 44 x 37 x 37 cm
Item Weight: 5.48 kg
Capacity: 5.5 Liters
Power / Wattage: 1800 watts
Voltage: 230 Volts
Material: Aluminium Plastic
Auto Shutoff: No
Noise Level: 44 dB
Special Features: Temperature Control, Programmable

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Domo customer service directly. Specific warranty terms may vary by region.

While this manual provides comprehensive instructions, for further assistance or technical inquiries, please visit the official Domo website or contact their authorized service centers.