

Easytry123 Easytry0400

Easytry123 Replacement Remote Control User Manual

For Dynex DX-LCD37-09-02 and DX-LCD37-09-2 LCD LED HDTVs

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement infrared remote control, model Easytry0400. This remote is designed to function as a direct replacement for the original remote controls of Dynex DX-LCD37-09-02 and DX-LCD37-09-2 LCD LED HDTV television models. Please ensure your television model is listed for proper compatibility. This remote operates using infrared technology and requires 2 AAA batteries (not included).

2. SETUP: BATTERY INSTALLATION

To begin using your Easytry123 replacement remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back view of the Easytry123 remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

3. OPERATING INSTRUCTIONS

Point the remote control directly towards the infrared receiver on your Dynex television. Ensure there are no obstructions between the remote and the TV.



Figure 2: Front view of the Easytry123 remote control, displaying its button layout.

Button Functions:

- **POWER (Red button):** Turns the television on or off.
- **COMP, HDMI, VIDEO, 1-9, 0:** Number buttons for direct channel selection and input source selection.

- **MENU:** Accesses the television's main menu.
- **GUIDE:** Displays the electronic program guide (if supported by your TV and service).
- **ARROW buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **EXIT:** Exits current menu or screen.
- **INFO:** Displays information about the current program or input.
- **CCD:** Likely for Closed Captioning display.
- **INPUT:** Cycles through available input sources (HDMI, Video, etc.).
- **CH LIST:** Displays the channel list.
- **MUTE:** Mutes or unmutes the television audio.
- **VOL +/-:** Adjusts the volume level.
- **CH ^/v:** Changes the television channel up or down.
- **MTMAP, PICTURE, AUDIO:** Likely dedicated buttons for picture modes, audio settings, or other TV features.
- **ZOOM:** Adjusts the screen zoom level.
- **SLEEP:** Sets a sleep timer for the television.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** For controlling connected media devices or TV's built-in media player.

Note: Some advanced functions or specific buttons may require your television to support those features. Refer to your television's original user manual for detailed information on its capabilities.

4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or immerse the remote in liquids.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote.

5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if there are any obstructions between the remote and the TV.
 - Replace the batteries with fresh AAA batteries.
 - Verify that the TV is powered on.
- **Some buttons not working:**
 - This replacement remote is designed to replicate the original remote's functions. However, some specific or advanced features of your TV might not be fully supported if they differ

significantly from the original remote's design.

- Ensure your TV model is indeed one of the compatible models (Dynex DX-LCD37-09-02 or DX-LCD37-09-2).
- **Interference:**
 - Strong light sources, especially fluorescent lights or direct sunlight, can interfere with infrared signals. Try operating the remote in different lighting conditions.

If the problem persists after trying these steps, please contact customer support.

6. SPECIFICATIONS

| | |
|---------------------------------|---|
| Model Number: | Easytry0400 |
| Brand: | Easytry123 |
| Connectivity Technology: | Infrared (IR) |
| Controller Type: | Button Control |
| Compatible Devices: | Dynex DX-LCD37-09-02, Dynex DX-LCD37-09-2 LCD LED HDTVs |
| Batteries Required: | 2 x AAA (not included) |
| Special Feature: | Ergonomic replacement design |

7. CUSTOMER SUPPORT

For any questions, concerns, or troubleshooting assistance not covered in this manual, please contact the seller or Easytry123 customer support through the platform where the product was purchased. Please have your product model number (Easytry0400) and purchase details ready when contacting support.