

## Teesa TSA0520

# Teesa Hypercare T300 Rotary Shaver (TSA0520) Instruction Manual

## INTRODUCTION

The Teesa Hypercare T300 rotary shaver (model TSA0520) is designed for efficient and comfortable facial hair removal. Its three flexible blades adapt to facial contours, and the integrated pop-up trimmer allows for precise styling of sideburns and moustaches. This manual provides essential information for safe operation, maintenance, and optimal performance of your device.

## SAFETY INFORMATION

Please read these safety instructions carefully before using the appliance and keep them for future reference.

- This appliance is intended for household use only.
- Do not immerse the shaver in water or other liquids. Keep it dry.
- Do not use the appliance if the power cord or plug is damaged.
- Always disconnect the shaver from the power supply before cleaning.
- Keep the appliance out of reach of children.
- Use only the power cable supplied with the device.
- Do not use the shaver if the shaving heads are damaged, as this may cause injury.

## PACKAGE CONTENTS

Please check the contents of your package. If any items are missing or damaged, contact your retailer.

- Teesa Hypercare T300 Rotary Shaver
- Power Cable
- Protective Cap
- Cleaning Brush

- Lubricating Oil
- Instruction Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Teesa Hypercare T300 Rotary Shaver.





**Figure 1:** Front view of the Teesa Hypercare T300 Rotary Shaver, showing the three rotary shaving heads and the power button.





Figure 2: Back view of the shaver, displaying the model number (TSA0520) and power input details.





**Figure 3:** Side view of the shaver with the pop-up trimmer extended, ready for use.

## SETUP

### Charging the Shaver

1. Ensure the shaver is turned off before charging.
2. Connect the power cable to the charging port on the shaver.
3. Plug the other end of the power cable into a standard electrical outlet (220-240V; 50/60Hz).
4. The charging indicator light will illuminate, indicating that the shaver is charging.





reesa

HYPERCARE

T300



**Figure 4:** The shaver showing the illuminated charging indicator light.

A full charge takes approximately 8 hours and provides up to 45 minutes of cordless operation. Do not leave the shaver connected to the charger for extended periods after it is fully charged.

## OPERATING

---

### Shaving

1. Ensure the shaver is fully charged.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin.
4. Move the shaver in small, circular motions over your face and neck. For optimal results, shave against the direction of hair growth.
5. The flexible shaving heads will adapt to the contours of your face for a close shave.
6. After shaving, press the power button to turn off the shaver.

### Using the Pop-Up Trimmer

1. Turn on the shaver.
2. Locate the pop-up trimmer release button on the side of the shaver.
3. Slide the release button upwards to extend the pop-up trimmer.



**Figure 5:** Detailed view of the pop-up trimmer in its extended position.

4. Use the trimmer to precisely shape sideburns, moustaches, or beard lines.
5. After use, push the trimmer back down until it clicks into its closed position.

## **MAINTENANCE**

### **Cleaning the Shaver**

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and disconnect it from the power supply.
2. Press the release button on the front of the shaver to open the shaving head unit.
3. Use the provided cleaning brush to remove any accumulated hair clippings from the shaving heads and the hair chamber.
4. For a more thorough cleaning, you may rinse the shaving heads under running water. Ensure the main body of the shaver does not get wet.

5. Allow all parts to air dry completely before reassembling the shaving head unit.
6. Periodically apply a small drop of the provided lubricating oil to the shaving foils and cutters to maintain smooth operation and prolong blade life.
7. Always replace the protective cap over the shaving heads after each use to prevent damage.

## TROUBLESHOOTING

If you encounter any issues with your shaver, refer to the following common problems and solutions:

- **Shaver not turning on:**

- Ensure the shaver is fully charged.
- Press the power button firmly.

- **Poor shaving performance:**

- The blades may be clogged with hair. Clean the shaver thoroughly as described in the Maintenance section.
- Ensure the shaver is fully charged. Performance may decrease with low battery.
- Blades may be dull. Consider replacing the shaving heads after extended use (replacement parts sold separately).

- **Shaver not charging:**

- Check that the power cable is securely connected to both the shaver and the electrical outlet.
- Verify that the electrical outlet is functioning correctly.
- Ensure the charging indicator light illuminates when connected.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Specification
Model Number	TSA0520
Power	3 W
Rotational Speed	6000 RPM
Run Time	Up to 45 minutes
Charge Time	Up to 8 hours
Battery	2.4 V; 2/3 AA 600 mAh x2 (Rechargeable)
Power Supply	220 – 240 V; 50/60 Hz
Weight	165 g
Dimensions (L x W x H)	58.2 x 46.8 x 150.9 mm
Blade Material	Alloy Steel
Number of Blades	3 (Rotary Type)

Special Feature

Ergonomic Design

## WARRANTY AND SUPPORT

---

For warranty information, technical assistance, or to inquire about replacement parts, please refer to the documentation included with your purchase or visit the official Teesa website. Keep your proof of purchase for warranty claims.

