

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby 7600250381 Foldable Doll Stroller Instruction Manual

Smoby 7600250381

Smoby 7600250381 Foldable Doll Stroller Instruction Manual

Model: 7600250381

INTRODUCTION

Thank you for choosing the Smoby 7600250381 Foldable Doll Stroller. This classic blue doll stroller is designed for children aged 36 months and up, providing a realistic play experience. It features a durable metal and plastic frame, large wheels, and a fabric seat. The stroller is designed to fold for convenient storage. This manual provides essential information for assembly, operation, maintenance, and safety to ensure proper use and longevity of the product. This product is manufactured in Spain.

Important Safety Information: This product is a toy and should be used under adult supervision. Keep all packaging materials away from children.

SETUP AND ASSEMBLY

The Smoby 7600250381 doll stroller requires assembly. Please follow the instructions carefully. Ensure all components are present before beginning assembly.

Package Contents:

- Stroller frame components (metal and plastic)
- Wheels (4 units)
- Fabric seat and canopy
- Instruction leaflet

Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Attach the wheels to the designated axles on the stroller frame. Ensure they click securely into place.
3. Assemble the main frame by connecting the pre-drilled parts. Refer to the included instruction leaflet for specific connection points.
4. Secure the fabric seat and canopy onto the frame. Ensure all snaps, Velcro, or ties are fastened correctly.
5. Verify that all parts are securely attached and the stroller is stable before allowing a child to use it.



Image: A child interacting with the fully assembled Smoby doll stroller, showing its functional design and scale.

OPERATING INSTRUCTIONS

This doll stroller is designed for easy use and portability.

Using the Stroller:

- Place a doll (up to 42 cm in height) securely in the fabric seat.
- Ensure the doll is stable and will not fall out during play.
- The stroller is designed for indoor and outdoor play on smooth surfaces. Avoid rough terrain.
- Always supervise children during play with the stroller.

Folding for Storage:

The stroller can be folded to save space when not in use.

1. Remove any dolls or accessories from the stroller.
2. Locate the folding mechanism, typically near the handle or base of the frame.
3. Engage the folding mechanism (e.g., press a button, pull a lever) and gently push the stroller frame inwards until it collapses.
4. Ensure the stroller is fully folded and secured to prevent accidental unfolding.
5. Store in a dry, safe place.



Image: The Smoby doll stroller displayed from the front-side, highlighting its design and readiness for play.

MAINTENANCE AND CARE

Regular maintenance will help prolong the life of your Smoby doll stroller.

- **Cleaning:** Wipe plastic and metal parts with a damp cloth and mild soap. Do not use abrasive cleaners. The fabric seat can be spot cleaned with a mild detergent. Allow all parts to dry completely before storage.
- **Storage:** Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, fasteners, and moving parts to ensure they are secure and functioning correctly. Tighten any loose connections.
- **Avoid Overloading:** Do not place heavy objects or multiple dolls in the stroller that exceed its intended capacity.

TROUBLESHOOTING

If you encounter any issues with your doll stroller, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|---|--|---|
| Stroller does not fold/unfold smoothly. | Mechanism is stiff or obstructed. | Check for any debris or foreign objects obstructing the folding mechanism. Apply a small amount of silicone lubricant to moving parts if necessary. |
| Wheels are wobbly or fall off. | Wheels not properly attached or damaged. | Ensure wheels are securely clicked into place during assembly. If damaged, contact customer support for replacement parts. |
| Stroller is unstable. | Loose connections or incorrect assembly. | Re-check all assembly steps and ensure all screws and fasteners are tightened. Do not use if instability persists. |

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|-----------------------------|
| Brand | Smoby |
| Model Number | 7600250381 |
| Product Dimensions (L x W x H) | 41 x 13 x 63 cm |
| Item Weight | 3.1 Kilograms |
| Manufacturer Recommended Age | 36 months - 99 years |
| Material | Metal, Plastic |
| Frame Material | Metal |
| Color | Mixed Colors (Classic Blue) |
| Accommodates Doll Size | Up to 42 cm |
| Assembly Required | Yes |
| Operation Mode | Manual |



Image: The Smoby doll stroller with its key dimensions (length, width, height) clearly indicated, providing a visual reference for its size.

WARRANTY INFORMATION

Smoby products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship under normal use. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for any warranty claims.

The warranty does not cover damage caused by misuse, abuse, accident, unauthorized modification, or normal wear and tear. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Smoby website.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact

Smoby customer support.

- **Online Support:** Visit the official Smoby website for FAQs, product registration, and contact forms.
- **Contact Information:** Refer to the packaging or the Smoby website for regional customer service phone numbers and email addresses.
- When contacting support, please have your product model number (7600250381) and proof of purchase readily available.



© 2024 Smoby. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.