

[Manuals.plus](#) /

› [Victrola](#) /

› Victrola VS-120 Bluetooth Microsystem User Manual

Victrola VS-120

Victrola VS-120 Bluetooth Microsystem User Manual

Model: VS-120

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating the unit. Keep this manual for future reference.

- Do not block any ventilation openings.
- Do not install near any heat sources.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

PRODUCT OVERVIEW

The Victrola VS-120 is a versatile microsystem offering multiple audio playback options. It includes Bluetooth connectivity, a CD player, USB playback, an Aux-in port, and an FM radio.



Front view of the Victrola VS-120 Bluetooth Microsystem, showing the speaker, display, and control panel.



The Victrola VS-120 microsystem with its CD tray open, revealing a disc, and the included remote control positioned in the foreground.

SETUP GUIDE

Unpacking

Carefully remove the unit from its packaging. Ensure all accessories are present:

- Victrola VS-120 Microsystem
- Remote Control
- Power Adapter
- User Manual (this document)

Power Connection

1. Insert the small end of the power adapter into the DC IN jack on the rear of the unit.
2. Plug the other end of the power adapter into a standard wall outlet (AC 100-240V, 50/60Hz).
3. The unit will enter standby mode, and the LED clock display will illuminate.

Antenna Connection (FM Radio)

For optimal FM radio reception, extend the FM wire antenna fully. Adjust its position for the best signal.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button on the unit or remote control to turn the system on or off (standby mode).

Mode Selection

Press the **MODE** button on the unit or remote control repeatedly to cycle through available functions: **Bluetooth**, **CD**, **USB**, **AUX**, and **FM Radio**.

Bluetooth Operation

1. Select **Bluetooth** mode. The display will show "BT" and flash, indicating pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for "Victrola VS-120".
3. Select "Victrola VS-120" to pair. Once connected, the "BT" indicator will stop flashing and a confirmation tone will sound.
4. You can now stream audio from your device to the microsystem.
5. Use your device or the microsystem's controls (PLAY/PAUSE, NEXT, PREVIOUS) to manage playback.

CD Playback

1. Select **CD** mode.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD (audio CD or MP3 CD) with the label side facing up into the tray.
4. Press **OPEN/CLOSE** again to close the tray. The unit will read the disc and begin playback automatically.
5. Use **PLAY/PAUSE**, **NEXT**, and **PREVIOUS** buttons to control playback.

USB Playback

1. Insert a USB flash drive (FAT32 format, containing MP3 files) into the USB port.
2. Select **USB** mode. The unit will automatically detect and begin playing MP3 files from the drive.
3. Use **PLAY/PAUSE**, **NEXT**, and **PREVIOUS** buttons to control playback.

FM Radio Operation

1. Select **FM Radio** mode.
2. Press and hold the **TUNE +/-** buttons to automatically scan for the next available station.
3. Press the **TUNE +/-** buttons briefly to manually adjust the frequency in small increments.
4. To save a station as a preset, press the **MEM** button, then use **PRESET +/-** to select a preset number, and press **MEM** again to confirm.
5. To recall a preset station, use the **PRESET +/-** buttons.

Aux-in Connection

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX IN** jack using a 3.5mm audio cable (not included).
2. Select **AUX** mode.
3. Control playback and volume from your external device.

Remote Control Functions

The included remote control provides full functionality. Ensure batteries are correctly inserted. Key functions include:

- **POWER:** Turn unit on/off.
- **MODE:** Select audio source.
- **VOL +/-:** Adjust volume.
- **PLAY/PAUSE, NEXT, PREVIOUS:** Control playback for CD, USB, and Bluetooth.
- **TUNE +/-:** Tune FM radio stations.

- **MEM:** Store FM presets.
- **PRESET +/-:** Select FM presets.
- **EQ:** Cycle through equalizer settings (Flat, Rock, Pop, Jazz, Classic).
- **CLOCK:** Set the clock.
- **DIMMER:** Adjust display brightness.

Adjusting EQ Settings

Press the **EQ** button on the remote control to cycle through preset equalizer modes: Flat, Rock, Pop, Jazz, and Classic. Select the mode that best suits your audio preference.

Setting the Clock

To set the clock, press the **CLOCK** button on the remote control. Use the **TUNE +/-** buttons to adjust the hour and minute, and press **CLOCK** again to confirm each setting.

MAINTENANCE

Cleaning the Unit

To clean the exterior of the unit, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as these may damage the surface. Ensure the unit is unplugged before cleaning.

CD Player Care

Handle CDs by their edges. Keep them clean and free of scratches. If a CD is dirty, wipe it gently with a soft, lint-free cloth from the center outwards. Do not use solvents or abrasive cleaners on CDs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely plugged in; Try a different outlet.
No sound	Volume too low; Incorrect mode selected; External device not playing.	Increase volume; Select correct mode (BT, CD, USB, AUX, FM); Ensure external device is playing and its volume is up.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; Disc format not supported.	Insert CD with label side up; Clean or replace CD; Ensure it's an audio CD or MP3 CD.
Bluetooth pairing fails	Unit not in pairing mode; Device too far; Device already paired to another unit.	Ensure unit is in BT mode and "BT" is flashing; Move device closer; Disconnect from other devices.
Poor FM reception	Antenna not extended or positioned correctly.	Fully extend and reposition the FM wire antenna.
Remote control not working	Batteries dead or inserted incorrectly; Obstruction between remote and unit.	Replace batteries; Ensure correct polarity; Remove obstructions; Point remote directly at the unit's sensor.

SPECIFICATIONS

- **Brand:** Victrola
- **Model:** VS-120
- **Connectivity:** Bluetooth, USB, Auxiliary (3.5mm)

- **Audio Sources:** CD Player, USB Player, FM Radio, Bluetooth, Aux-in
- **Output Power:** 30 Watts
- **Supported Audio Formats:** CD, MP3
- **Dimensions (L x W x H):** 15.97 x 4.69 x 10.83 inches (40.56 x 11.91 x 27.51 cm)
- **Weight:** 10.76 Pounds (4.88 kg)
- **Power Input:** AC 100-240V, 50/60Hz
- **Color:** Maple

WARRANTY AND SUPPORT

Victrola products are designed with quality and performance in mind. For detailed warranty information, please refer to the warranty card included with your product or visit the official Victrola website. For technical support or customer service inquiries, please contact Victrola customer support through their official channels.

Website: www.victrola.com