Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Ergomotion /
- > Ergomotion E6 Adjustable Bed Replacement Remote Control User Manual

Ergomotion E6

Ergomotion E6 Adjustable Bed Replacement Remote Control User Manual

Model: E6

INTRODUCTION

This manual provides essential instructions for the setup, operation, and troubleshooting of your Ergomotion E6 Adjustable Bed Replacement Remote Control. Please read this manual thoroughly before use to ensure proper functionality and to maximize the lifespan of your remote.



Figure 1: Ergomotion E6 Replacement Remote Control. This image displays the black remote control with various buttons for adjusting head and foot positions, zero gravity, flat, and timer functions. The Ergomotion logo is visible at the bottom left.

COMPATIBILITY REQUIREMENTS

This replacement remote is specifically designed for the Ergomotion E6 adjustable bed model. To ensure compatibility:

- · Verify that the buttons on this replacement remote exactly match those on your original Ergomotion E6 remote.
- Confirm that your existing remote does **not** have dip switches numbered one through four or one through six. Remotes with dip switches are not compatible with this model.
- Your original remote (the one being replaced) should have a square rubber 'learn' button located above the AAA
 batteries behind its battery cover. This indicates compatibility with the bed system this replacement remote is
 designed for.

If your current remote or bed system does not meet these criteria, this replacement remote will not function correctly with your adjustable bed.

SETUP AND PAIRING INSTRUCTIONS

Follow these steps to pair your new Ergomotion E6 replacement remote control with your adjustable bed:

- 1. Locate the Control Box: Identify the control box for your adjustable bed. This is typically found underneath the bed frame.
- 2. **Power Cycle (Optional but Recommended):** Unplug the adjustable bed from the power outlet for approximately 30 seconds, then plug it back in. This can help reset the system.
- 3. Access the Learn Button: On the control box, locate the square rubber "learn" button. This button is usually small and may be recessed.
- 4. **Press the Learn Button:** Press and hold the "learn" button on the control box for approximately 2-3 seconds. The indicator light on the control box should begin to flash.
- 5. **Pair the Remote:** Within 10 seconds of the control box light flashing, press and hold any button on your new replacement remote control.
- 6. **Confirmation:** The indicator light on the control box should stop flashing and remain solid, or the bed may briefly move, indicating successful pairing.
- 7. **Test Functionality:** Test all functions of the remote control (Head Up/Down, Foot Up/Down, Flat, Zero G, Timer) to ensure proper operation.

If the remote does not pair on the first attempt, repeat the steps. Ensure the remote has fresh AAA batteries installed.

OPERATING THE REMOTE CONTROL

The Ergomotion E6 remote control provides intuitive access to various adjustable bed functions. Refer to the button descriptions below for operation:

HEAD (Up Arrow): Elevates the head section of the bed.

HEAD (Down Arrow): Lowers the head section of the bed.

FOOT (Up Arrow): Elevates the foot section of the bed.

FOOT (Down Arrow): Lowers the foot section of the bed.

FLAT Button: Returns the bed to a completely flat position.

ZERO G Button: Activates the "Zero Gravity" preset position.

Preset HEAD Button: Activates a pre-programmed head position.

Preset FOOT Button: Activates a pre-programmed foot position.

TIMER/ALL OFF Button: Initiates a timer function or turns off all active bed functions.

10 MIN, 20 MIN, 30 MIN Buttons: Activates a timer for the specified duration, after which the bed may adjust or turn off.

Button with Wave Symbol: Controls a massage or wave function.

Button with Light Bulb Symbol: Controls an integrated light feature.

Note: Specific button functions may vary slightly depending on the exact model of your Ergomotion adjustable bed.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these guidelines:

- Battery Replacement: Replace AAA batteries when the remote's response becomes sluggish or stops working. Ensure correct polarity when inserting new batteries.
- Cleaning: Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or harsh chemicals, as these can damage the remote's electronics and finish.
- Storage: Store the remote in a dry place, away from extreme temperatures and direct sunlight.
- Avoid Drops: Protect the remote from drops and impacts, which can cause internal damage.

Troubleshooting

If you experience issues with your Ergomotion E6 replacement remote, consult the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote does not respond.	Dead or incorrectly inserted batteries. Remote not paired.	Replace batteries with fresh AAA batteries, ensuring correct polarity. Reattempt the pairing process as described in the "Setup and Pairing Instructions" section.
Bed does not move after pairing.	Incorrect remote model. Interference.	Verify that this remote is the correct model (E6) and that its buttons match your original remote. Ensure no other devices are interfering with the signal. Try unplugging the bed for 30 seconds and re-pairing.
Remote works intermittently.	Low batteries. Signal obstruction.	Replace batteries. Ensure a clear line of sight between the remote and the bed's control box.
Remote has dip switches.	Incompatible remote model.	This E6 remote is not compatible with beds that use remotes with dip switches (numbered 1-4 or 1-6). You will need a different replacement remote.

If you continue to experience issues after following these steps, please contact Ergomotion customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	E6

Feature	Detail
Brand	Ergomotion Adjustable Bed Remotes
Compatible Devices	Ergomotion E6 Adjustable Beds
Max Number of Supported Devices	1 (Single adjustable bed)
Color	Black
Special Feature	Ergonomic design
Power Source	AAA Batteries (not included)
Date First Available	June 30, 2018

CUSTOMER SUPPORT

For further assistance, questions, or to report issues not covered in this manual, please contact Ergomotion customer support. Providing your product model (E6) and a detailed description of the issue will help expedite support.

Note: Contacting the seller directly with compatibility questions before purchase can help avoid restocking fees if the remote is incompatible.

© 2023 Ergomotion. All rights reserved.

Related Documents - E6



Ergomotion RF373F Remote Control Function and Operation Guide

Comprehensive guide to the Ergomotion RF373F remote control for adjustable beds, detailing all functions including head and foot lift, memory presets, Zero-G, massage, bed light, and pairing procedures.



Ergomotion Quest 1.0 Adjustable Base Owner's Manual

Comprehensive owner's manual for the Ergomotion Quest 1.0 Adjustable Base, detailing safety precautions, parts identification, installation steps, operation, troubleshooting, and warranty information.

