

FALMEC FE660IX

FALMEC FE660IX Gourmet Multifunction Electric Oven User Manual

1. INTRODUCTION

Thank you for choosing the FALMEC FE660IX Gourmet Multifunction Electric Oven. This manual provides essential information for the correct installation, safe operation, and proper maintenance of your new appliance. Please read these instructions carefully before using the oven for the first time and keep them for future reference.

The FALMEC FE660IX is a 67-liter, 60cm built-in electric oven designed for modern kitchens, offering multiple cooking functions to enhance your culinary experience.

2. SAFETY INSTRUCTIONS

General Safety:

- Ensure the oven is correctly installed by a qualified technician in accordance with local regulations.
- Do not operate the oven if it is damaged or malfunctioning. Contact customer service.
- Keep children and pets away from the oven during operation, as surfaces become very hot.
- Never use water to extinguish oil or grease fires. Smother the flames with a damp cloth or fire blanket.
- Always use oven mitts when handling hot dishes or oven accessories.

Electrical Safety:

- Ensure the electrical supply matches the voltage specified on the oven's rating plate.
- Do not use extension cords or multiple adapters.
- Disconnect the oven from the power supply before cleaning or maintenance.

3. PRODUCT OVERVIEW

The FALMEC FE660IX oven features a sleek stainless steel design with intuitive controls and a spacious interior.

3.1. External View and Controls



This image shows the front of the FALMEC FE660IX electric oven. It features a stainless steel finish, a digital clock display, and two rotary control knobs for temperature and cooking functions. The oven door is closed, revealing the Falmece logo at the bottom.

Key Components:

- **Temperature Control Knob:** Used to set the desired cooking temperature.
- **Function Selector Knob:** Used to choose various cooking modes (e.g., conventional, grill, fan-assisted).
- **Digital Display:** Shows time, temperature, and timer settings.
- **Control Buttons:** For setting the timer, clock, and other functions.
- **Oven Door:** Features a large viewing window.

3.2. Interior View




A view inside the FALMEC FE660IX electric oven, with the door open and the interior light illuminated. Multiple chrome-plated wire racks are visible, along with the fan at the back, indicating a fan-assisted cooking function. The interior appears clean and spacious.

The oven interior includes multiple rack positions for versatile cooking and a powerful fan for even heat distribution.

4. SETUP

4.1. Installation

The FALMEC FE660IX oven must be installed by a qualified electrician or authorized service technician. Ensure the installation area has adequate ventilation and meets all local building and electrical codes.

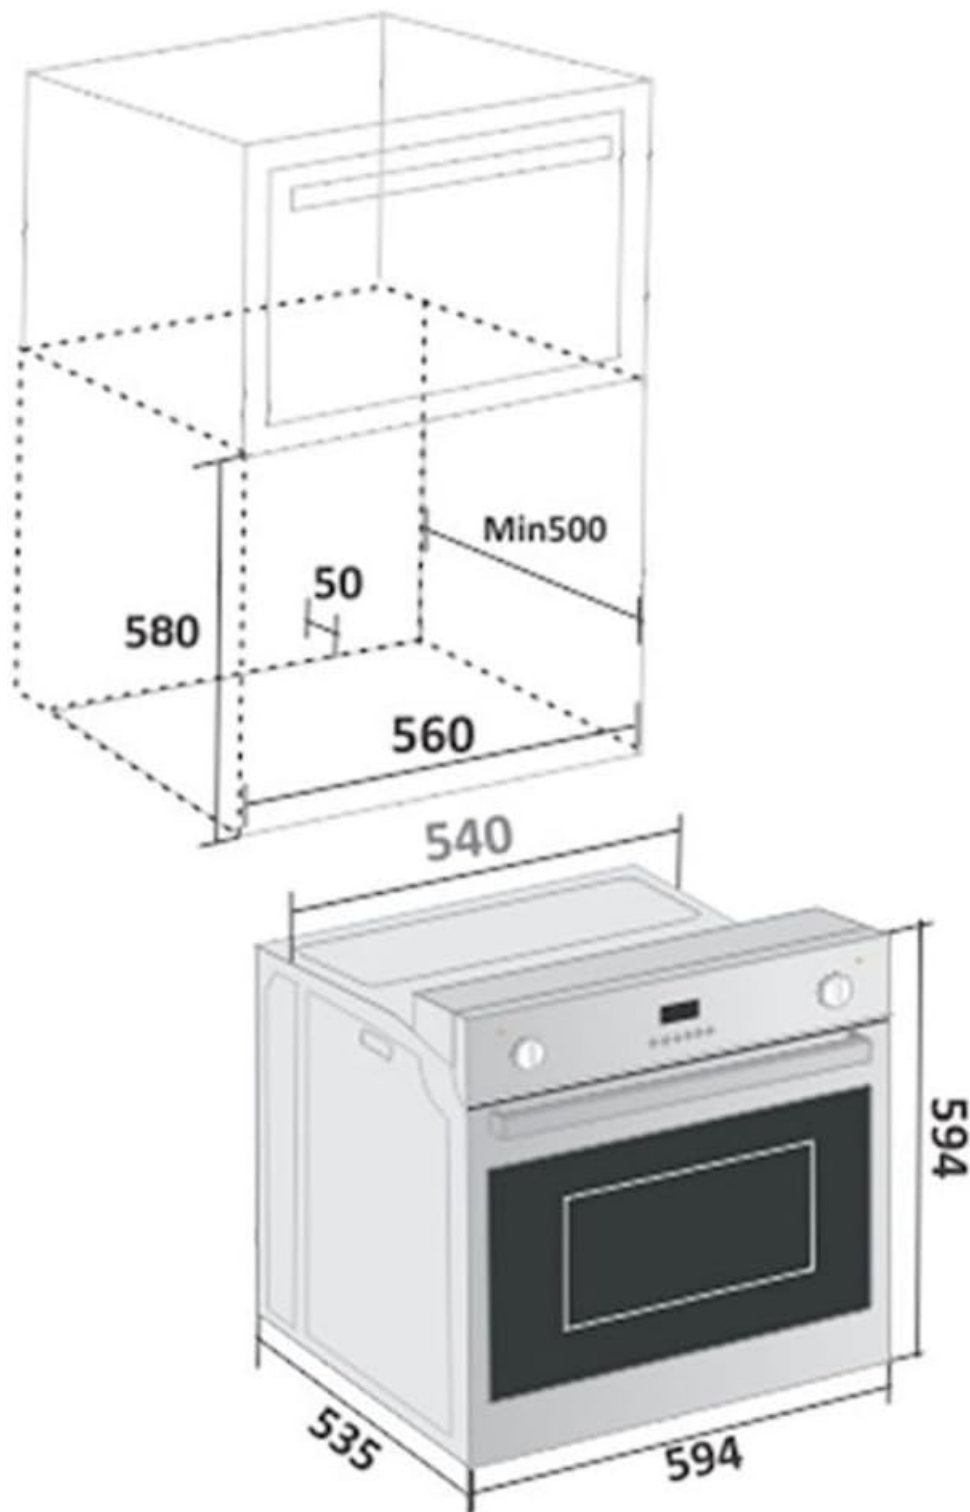

This diagram provides the precise dimensions for installing the FALMEC FE660IX electric oven. It illustrates the oven's external measurements (594mm width, 594mm height, 535mm depth) and the required cutout dimensions for cabinet integration (560mm width, 580mm height, minimum 500mm depth).

Installation Steps (Summary):

1. Prepare the cabinet opening according to the provided dimensional drawing.
2. Connect the oven to the electrical supply, ensuring proper grounding.
3. Slide the oven into the cabinet opening and secure it with screws.
4. Ensure the oven is level and stable.

4.2. First Use

Before cooking food for the first time:

1. Remove all packaging materials, accessories, and protective films from the oven interior and exterior.
2. Clean the oven interior with a damp cloth and mild detergent.
3. Heat the empty oven at maximum temperature (e.g., 250°C) for approximately 30-60 minutes with the fan function. This will burn off any manufacturing residues and odors. Ensure the kitchen is well-ventilated during this process.
4. Allow the oven to cool completely, then wipe the interior again.

5. OPERATING INSTRUCTIONS

5.1. Setting the Clock

Upon initial power-up or after a power outage, the digital display will flash. Use the control buttons (refer to your oven's specific button layout) to set the current time. Confirm the setting to stop the flashing.

5.2. Basic Cooking Operation

1. **Select Function:** Turn the Function Selector Knob to choose the desired cooking mode (e.g., Conventional, Fan-assisted, Grill).
2. **Set Temperature:** Turn the Temperature Control Knob to the desired temperature. The oven will begin to heat.
3. **Preheating:** Allow the oven to preheat to the set temperature. The indicator light will turn off when the temperature is reached.
4. **Place Food:** Carefully place your food inside the oven using appropriate bakeware and oven mitts.
5. **Monitor Cooking:** Observe the cooking process through the oven door.
6. **Finish Cooking:** Once cooking is complete, turn both control knobs to the 'OFF' position.

5.3. Using the Timer

Your oven may feature a minute minder or an automatic cooking timer. Consult the specific button functions on your control panel to set the desired cooking duration or a simple countdown timer. The oven will typically signal with an audible alarm when the set time expires.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

6.1. Cleaning the Oven

Always ensure the oven is cool and disconnected from the power supply before cleaning.

- **Exterior:** Wipe stainless steel surfaces with a soft cloth and a non-abrasive stainless steel cleaner. Avoid harsh chemicals or abrasive pads.
- **Interior:** For light spills, wipe with a damp cloth and mild detergent. For stubborn stains, use a specialized oven cleaner, following the product instructions carefully. Ensure adequate ventilation.
- **Oven Door Glass:** Clean with a glass cleaner or warm soapy water. Avoid scratching the surface.
- **Accessories:** Remove racks and trays and wash them in warm soapy water or in a dishwasher.

6.2. Replacing the Oven Lamp

Ensure the oven is cool and disconnected from the power supply.

1. Unscrew the protective glass cover of the lamp.
2. Carefully remove the old lamp.
3. Insert a new oven-specific lamp (check wattage and type, usually E14, 25W, 300°C resistant).
4. Screw the protective glass cover back on.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Oven does not heat	No power supply; Oven not switched on; Function/temperature not set.	Check power connection and circuit breaker; Ensure both control knobs are set correctly.
Oven light not working	Lamp is faulty or loose.	Replace the oven lamp (refer to Section 6.2).
Uneven cooking	Incorrect rack position; Overcrowding the oven; Door not fully closed.	Use recommended rack positions; Avoid overcrowding; Ensure door is sealed.
Excessive smoke/odor during first use	Residues from manufacturing process.	This is normal. Continue the 'first use' burn-off process (Section 4.2) in a well-ventilated area.

If the problem persists after checking these points, please contact FALMEC customer support.

8. SPECIFICATIONS

- **Model:** FE660IX
- **Type:** Built-in Electric Oven
- **Capacity:** 67 Liters
- **Nominal Dimensions (W x H x D):** 594 mm x 594 mm x 535 mm
- **Cutout Dimensions (W x H x D):** 560 mm x 580 mm x Min. 500 mm
- **Power Supply:** Refer to the product rating label for specific voltage and wattage requirements.
- **Functions:** Multifunction (specific functions vary by model, typically include conventional, grill, fan-assisted).

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card provided with your product or contact your retailer. Keep your proof of purchase for any warranty claims.

For technical assistance, spare parts, or service, please contact FALMEC customer support or an authorized service center. Provide your oven's model number (FE660IX) and serial number (found on the rating plate) when requesting support.

