

[Manuals.plus](#) /

› [VEMONT](#) /

› VEMONT Action Camera User Manual

VEMONT 8595758066

VEMONT Action Camera User Manual

Model: 8595758066

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your VEMONT 1080P 12MP Sports Action Camera. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.



Figure 1.1: VEMONT Action Camera in its transparent waterproof housing, showcasing its blue body and front lens.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- VEMONT Action Camera
- Waterproof Case
- Rechargeable Battery (900mAh)
- USB Cable
- Mounting Accessories Kit (various mounts for helmets, bicycles, etc.)
- User Manual



Figure 2.1: Included accessories for the VEMONT Action Camera, featuring various mounts, straps, and cables.

3. PRODUCT OVERVIEW

The VEMONT Action Camera is designed for capturing high-quality video and photos in various environments, including underwater. It features a 2.0-inch LCD screen for real-time display and a wide-angle lens.

Key Features:

- Full HD 1080P video recording at 30 frames per second.
- 12MP photo resolution.
- 2.0-inch LCD screen for live view and playback.
- Waterproof up to 30m (98ft) with the included case.
- 900mAh removable rechargeable battery for up to 90 minutes of continuous recording.
- 2x zoom wide-angle lens.

4. SETUP

4.1. Charging the Battery

Before first use, fully charge the included 900mAh rechargeable battery. Connect the camera to a USB power source using the provided USB cable. The charging indicator will illuminate during charging and turn off when fully charged.



Figure 4.1: Illustration of the 900mAh battery and its approximate 90-minute battery life.

4.2. Inserting a Micro SD Card


The camera requires a Micro SD card (not included) for storing videos and photos. Insert the Micro SD card into the designated slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.

4.3. Using the Waterproof Case

The high-quality waterproof case allows the camera to be used underwater up to 30 meters (98 feet). Ensure the case is properly sealed before submerging. Regularly check the rubber seal for any debris or damage to maintain its waterproof integrity.



Figure 4.2: The transparent waterproof case for the VEMONT Action Camera shown in an open position, revealing the camera compartment.

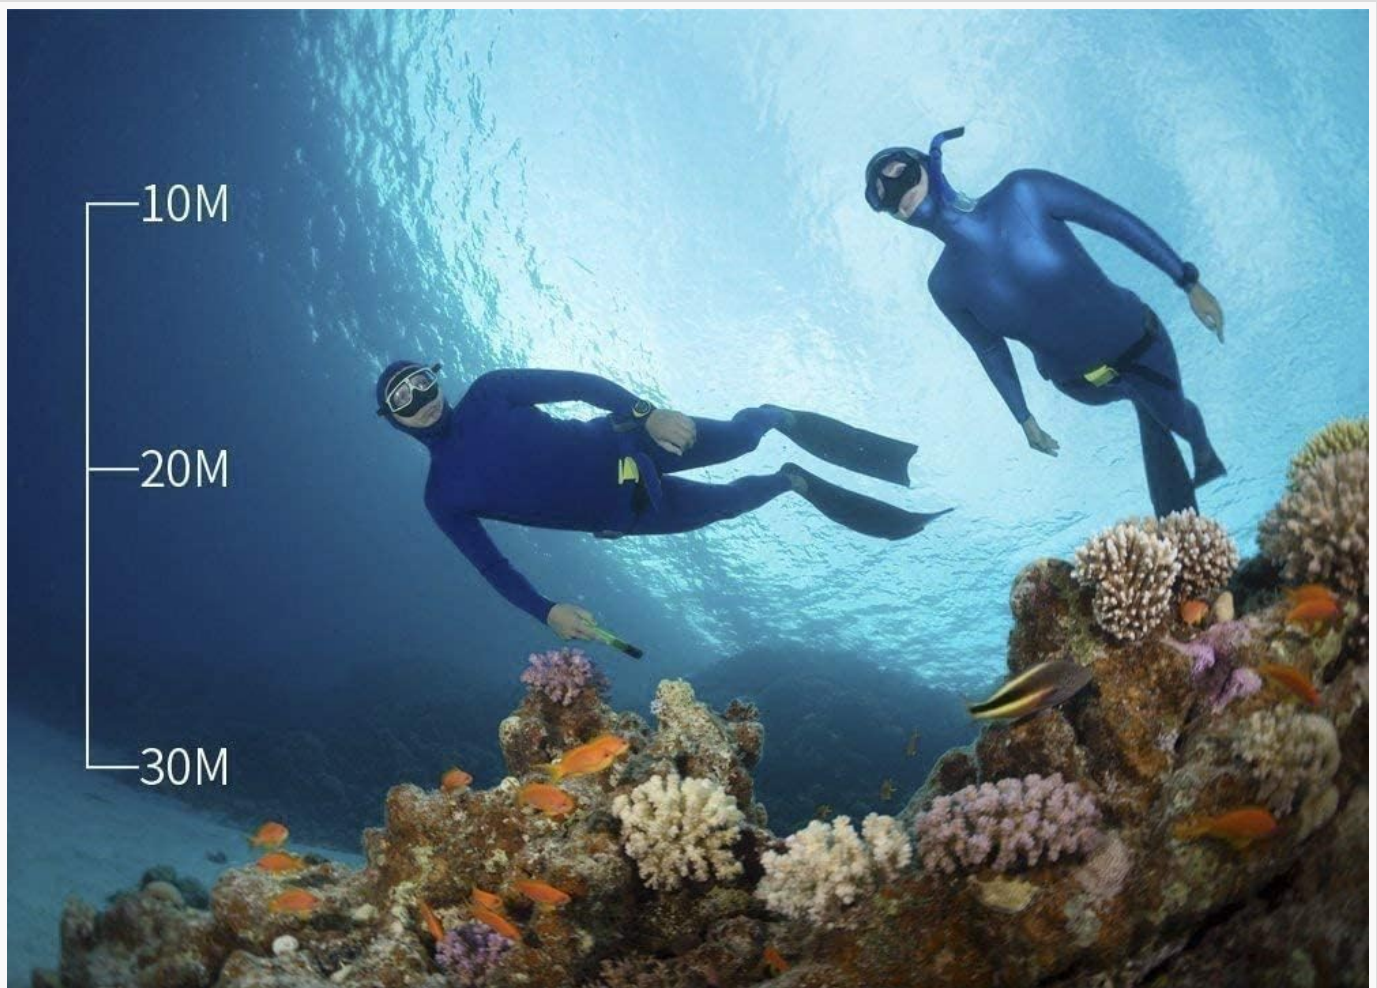

Depth of waterproof 30 M

Equipped with waterproof boxes, professional waterproof can dive deep 30 M



Figure 4.3: An illustration demonstrating the VEMONT Action Camera's waterproof capability up to 30 meters (98 feet) underwater.

5. OPERATING THE CAMERA

5.1. Power On/Off

Press and hold the Power/Mode button to turn the camera on or off.

5.2. Switching Modes

Press the Power/Mode button repeatedly to cycle through different modes (e.g., Video Recording, Photo, Playback). The current mode will be displayed on the 2.0-inch LCD screen.

5.3. Video Recording

In Video Recording mode, press the Shutter/OK button to start recording. Press it again to stop recording. The recording indicator will flash during recording.

5.4. Taking Photos

In Photo mode, press the Shutter/OK button to take a photo. The screen will briefly flash to indicate a photo has been captured.



Figure 5.1: A VEMONT Action Camera mounted on a bicycle helmet, demonstrating its use during outdoor activities.



Figure 5.2: A collage showing the VEMONT Action Camera being used in different sports and outdoor activities, highlighting its versatility.

6. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screen. For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid extreme temperatures. For long-term storage, charge the battery to about 50% capacity.
- **Storage:** When not in use, store the camera and accessories in a dry, dust-free environment, away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery; Battery not inserted correctly.	Charge the battery; Reinsert the battery.
Cannot record video/take photos.	No Micro SD card; SD card full; SD card error.	Insert Micro SD card; Delete files or use a new card; Format the SD card (this will erase all data).
Poor video/photo quality.	Lens is dirty; Low light conditions; Incorrect settings.	Clean the lens; Ensure adequate lighting; Adjust camera settings.
Water leakage in waterproof case.	Case not properly sealed; Damaged O-ring.	Ensure case is securely latched; Check O-ring for debris or damage and replace if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	VEMONT
Model Number	8595758066
Video Resolution	1080p (Full HD)
Photo Resolution	12MP
Screen Size	2.0 Inches
Waterproof Depth	Up to 30m (98ft) with case
Battery Capacity	900mAh (removable)
Continuous Recording Time	Up to 90 minutes
Flash Memory Type	Micro SD (not included)
Connectivity	USB
Color	Blue
Item Weight	2.05 ounces

9. WARRANTY AND SUPPORT

VEMONT provides a **1-year warranty** for this action camera. For any product-related inquiries, technical assistance, or warranty claims, please contact VEMONT customer service. Customer service will reply to emails in the shortest time. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question