

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Samsung Home Theater Systems

Easytry123 Easytry0504

Easytry123 Replacement Remote Control User Manual

For Samsung DVD Home Theater Systems

1. INTRODUCTION

Thank you for choosing the Easytry123 Replacement Remote Control. This remote is designed to function as a replacement for various Samsung DVD Home Theater System models. Please review this manual to understand its features and operation.

Compatible Samsung Models:

- AH59-01644A
- HT-Q10
- HT-Z120
- HT-Z120T
- HT-Q9TS
- AH59-01662L
- 01662C
- AH59-01951P
- HT-BD2E

Important Note: As a replacement unit, some advanced or specific functions of your original remote may not be fully supported. Please ensure your system model is listed above for optimal compatibility.

2. SETUP: BATTERY INSTALLATION

The remote control requires batteries for operation. Batteries are not included with this product.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

- Slide the battery cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control with the battery cover removed, illustrating the battery insertion points. Two AAA batteries are required.

3. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote and your Samsung Home Theater System's IR receiver.



Figure 3.1: Front view of the Easytry123 replacement remote control, displaying the layout of all control buttons.

Key Functions:

POWER: Turns the home theater system on or off.

TV/VIDEO, DVD, TUNER, AUX, PORT: Selects the input source for your system.

Number Pad (0-9): Used for direct track selection, channel input, or menu navigation.

VOLUME (+/-): Adjusts the master volume level.

MUTE: Silences the audio output.

PLAY, PAUSE, STOP, STEP, REWIND, FAST FORWARD: Controls media playback functions.

MENU, RETURN, EXIT: Navigates through system menus and returns to previous screens.

Directional Pad (Up, Down, Left, Right) & ENTER: Used for menu navigation and selection.

SOUND, V.SOUND, BASS: Accesses audio settings.

ZOOM, DIMMER, REPEAT, INFO: Provides additional functions depending on the system mode.

4. TROUBLESHOOTING

If you encounter issues with your remote control, please try the following steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the IR receiver on your home theater system.
- Confirm that the remote is pointed directly at the system's IR receiver.

- **Limited Functionality:**

- As a replacement remote, some specific or advanced functions of your original system remote may not be replicated. Refer to your original system's manual for specific feature operations.
- Verify that your Samsung Home Theater System model is listed in the "Introduction" section for compatibility.

5. SPECIFICATIONS

Brand	Easytry123
Model Number	Easytry0504
Compatible Devices	Samsung DVD Home Theater Systems (specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Power Source	2 x AAA Batteries (not included)

6. WARRANTY AND SUPPORT

This Easytry123 replacement remote control is designed to provide basic functionality for the listed Samsung Home Theater Systems. For specific warranty information or technical support, please refer to the retailer or seller from whom you purchased this product.

As a third-party replacement, warranty terms may differ from original equipment manufacturer (OEM) products. Please retain your proof of purchase for any support inquiries.