



[Manuals.plus](#) /

› [KidKraft](#) /

› KidKraft Uptown Elite Play Kitchen Instruction Manual

KidKraft 53426

KidKraft Uptown Elite Play Kitchen Instruction Manual

Model: 53426

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your KidKraft Uptown Elite Play Kitchen, Model 53426. Please read all instructions carefully before assembly and use to ensure proper function and longevity of the product. This play kitchen is designed for children aged 36 months to 8 years.



Image: The KidKraft Uptown Elite Play Kitchen, showcasing its modern design and features.

SAFETY INFORMATION

- Adult assembly is required.
- Ensure all screws and fasteners are securely tightened before use. Periodically check for loose connections.
- This product is intended for indoor use only.
- Keep small parts away from children during assembly to prevent choking hazards.
- The product meets or exceeds Toy Safety Standard ASTM F963.
- Batteries should be inserted with the correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly.
- Always supervise children during play.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged:

- All wooden and plastic kitchen components
- Assembly Instructions manual
- Hardware pack (screws, bolts, etc.)
- 5 AAA batteries (included for electronic features)
- Plastic ice cubes

SETUP AND ASSEMBLY

The KidKraft Uptown Elite Play Kitchen features EZ Kraft Assembly™ technology, designed to simplify the setup process. Assembly typically requires one adult and can take between 30 minutes to 2 hours.

1. **Preparation:** Clear a spacious area for assembly. Lay out all parts and hardware, organizing them by their numbered labels.
2. **Follow Instructions:** Refer to the included Assembly Instructions manual. For enhanced clarity, 3D interactive instructions may be available for download from the KidKraft website.
3. **Secure Connections:** Ensure all screws are tightened firmly but do not overtighten to avoid damaging the wood.
4. **Battery Installation:** Install the 5 AAA batteries into the designated compartments for the cooktop and microwave, observing correct polarity.
5. **Placement:** Position the assembled kitchen on a flat, stable surface. A wall anchor is included for additional stability if desired.



**Assembly in
2 hours or less**



**Crafted of premium
materials for
long-lasting play**



**Meets or
exceeds
Toy Safety
Standard
ASTM F963**



Image: The play kitchen highlighting its quick assembly time and durable construction.

Premium wood construction



Image: Dimensional overview of the play kitchen, indicating its overall size.

OPERATING INSTRUCTIONS

The Uptown Elite Play Kitchen offers various interactive features for realistic play:

- **Cooktop with Lights and Sounds:** Turn the red knobs on the stovetop to activate realistic cooking sounds and illuminated burners.

Lights and sounds cooktop and microwave



Image: The cooktop with active lights and sounds, demonstrating its interactive features.

Click-and-turn knobs



Image: The detailed click-and-turn knobs on the cooktop, providing tactile feedback.

- **Microwave with Lights and Sounds:** Press the buttons on the microwave to activate internal lights and cooking sounds. The microwave also features a door that opens.
- **Working Ice Maker:** Place a cup under the dispenser on the refrigerator door and press the lever to dispense plastic ice cubes.

Ice maker really dispenses play ice cubes



Image: The functional ice maker feature, dispensing play ice cubes.

- **Sink and Faucet:** The sink area includes a faucet with red and blue labels to indicate hot and cold water, encouraging imaginative play.
- **Storage Areas:** Utilize the refrigerator, deep freezer, dishwasher, and various shelves for organizing play food and accessories.
- **Side Towel Rack:** A functional towel rack is located on the side of the kitchen for hanging play towels or utensils.

Side towel rack



Image: The integrated side towel rack for play accessories.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Dusting:** Regularly dust the kitchen to maintain its appearance.
- **Hardware Check:** Periodically inspect all screws and fasteners to ensure they remain tight. Tighten as necessary.
- **Battery Replacement:** Replace all 5 AAA batteries when the lights and sounds begin to dim or cease functioning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights or sounds not working	Dead or incorrectly installed batteries.	Check battery polarity. Replace all 5 AAA batteries with new ones.

Problem	Possible Cause	Solution
Microwave door does not stay shut	Latching mechanism may be stiff or misaligned.	Ensure the door is pushed firmly to engage the latch. Over time, the latch may loosen slightly. If persistent, contact customer support.
Ice dispenser sticks or does not dispense	Mechanism obstruction or misalignment.	Ensure plastic ice cubes are properly loaded. Manually pull the dispenser button back out after each press if it sticks. If the issue persists, contact customer support.
Loose parts or instability	Screws have loosened over time.	Inspect all connections and tighten any loose screws. Ensure the kitchen is on a level surface.

SPECIFICATIONS

- **Model Number:** 53426
- **Product Dimensions (L x W x H):** 38.6 x 13.4 x 42.1 inches
- **Item Weight:** 46.3 pounds
- **Recommended Age:** 36 months - 8 years
- **Batteries:** 5 AAA batteries (included)
- **Materials:** Premium wood construction, plastic components
- **Manufacturer:** KidKraft

WARRANTY AND SUPPORT

KidKraft products are designed for durability and quality. For specific warranty details, please refer to the warranty information included with your purchase or visit the official KidKraft website. If you require replacement parts or assistance with assembly or troubleshooting, please contact KidKraft customer support directly. In some cases, replacement parts have been provided free of charge by KidKraft.

For further assistance, you may visit the [KidKraft Store on Amazon](#) or the official KidKraft website.

