

## Logitech 960-001226

# Logitech Rally Camera Instruction Manual

Model: 960-001226

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Logitech Rally Camera. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your video conferencing experience.

## 2. PRODUCT OVERVIEW

---

The Logitech Rally Camera is a premium, standalone USB conference camera designed for professional video meetings. It features advanced optics and a sleek design to deliver exceptional video quality and coverage for various meeting spaces.

### Key Features:

- **UHD 4K Video Capture:** Delivers crisp, clear video at 4K resolution.
- **Pan, Tilt, and Zoom (PTZ) Functionality:** Allows for dynamic camera adjustments to frame participants perfectly.
- **USB Connectivity:** Simple plug-and-play setup with your computer or conferencing system.
- **Remote Control:** Conveniently adjust camera settings from a distance.
- **Versatile Mounting Options:** Designed for flexible placement on or near displays.

### What's in the Box:

- Logitech Rally Camera Unit
- Remote Control
- USB Cable
- Power Adapter

## 3. SETUP

---

Follow these steps to set up your Logitech Rally Camera:

1. **Choose a Location:** Place the Rally Camera on a stable surface, such as a display, shelf, or tripod, ensuring it has a clear line of sight to all meeting participants. The camera can be mounted above or below a display.
2. **Connect Power:** Plug the power adapter into the camera's power port and then into an electrical outlet.
3. **Connect to Computer:** Connect the supplied USB cable from the camera's USB port to an available USB port on your computer or conferencing hub.
4. **Insert Remote Batteries:** Open the battery compartment on the remote control and insert the included batteries, observing polarity.
5. **Verify Connection:** Once connected, the camera should be automatically recognized by your operating system. You may need to select it as the primary video device in your video conferencing application.



Figure 3.1: Front view of the Logitech Rally Camera, showing the lens and sleek design.



Figure 3.2: The Logitech Rally Camera with its accompanying remote control, illustrating the complete package.

## 4. OPERATING INSTRUCTIONS

The Logitech Rally Camera is designed for intuitive operation, primarily through its remote control and your chosen video conferencing software.

### Using the Remote Control:

- **Pan/Tilt:** Use the directional arrows to move the camera left, right, up, or down.

- **Zoom:** Use the '+' and '-' buttons to zoom in and out. The camera features optical zoom for clear close-ups.
- **Home Position:** Press the 'Home' button to return the camera to its default, pre-set position.
- **Preset Positions:** The remote may include buttons (e.g., '1', '2') to save and recall specific camera positions. Refer to your software for detailed setup.





Figure 4.1: Close-up of the Logitech Rally Camera remote control, highlighting its intuitive button layout for camera adjustments.

### Software Integration:

The Rally Camera is compatible with leading video platforms such as Microsoft Teams, Zoom, and Google Meet. Ensure the camera is selected as the active video input within your chosen application's settings.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your Logitech Rally Camera, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and exterior. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the camera in a cool, dry place.
- **Firmware Updates:** Periodically check the Logitech support website for firmware updates to ensure your camera has the latest features and performance enhancements.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Rally Camera, refer to the following common troubleshooting tips:

- **No Video Output:**
  - Ensure the camera is properly connected to power and your computer via USB.
  - Verify that the camera is selected as the active video device in your conferencing software.
  - Try connecting the camera to a different USB port or computer.
- **Poor Video Quality:**
  - Check your internet connection speed.
  - Ensure the camera lens is clean and free from obstructions.
  - Adjust lighting conditions in your meeting space.
- **Remote Control Not Responding:**
  - Check and replace the batteries in the remote control.

- Ensure there are no obstructions between the remote and the camera's IR receiver.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Logitech
Model Number	960-001226
Max Screen Resolution	UHD
Video Capture Resolution	4K
Connectivity Technology	USB
Item Weight	7.4 pounds
Product Dimensions (LxWxH)	10.43 x 11.38 x 7.01 inches
Color	Matte Black, Slate Gray
Photo Sensor Technology	BSI CMOS
Maximum Focal Length	30 Millimeters
Maximum Aperture	3.5 f

## 8. WARRANTY AND SUPPORT

---

For warranty information and technical support, please visit the official Logitech support website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

**Logitech Support:** [www.logitech.com/support](http://www.logitech.com/support)