

[Manuals.plus](#) /

› [Rowenta](#) /

› Rowenta Freemove Cordless Steam Iron User Manual

Rowenta 1830007108

Rowenta Freemove Cordless Steam Iron User Manual

Model: 1830007108

INTRODUCTION

Welcome to the user manual for your Rowenta Freemove Cordless Steam Iron. This innovative appliance combines intuitive technology with a lightweight design to provide a seamless and efficient ironing experience. Its cordless operation offers unparalleled freedom of movement, while advanced features ensure optimal performance and garment care.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your iron. Please read it thoroughly before first use and keep it for future reference.



Image: The Rowenta Freemove Cordless Steam Iron, showcasing its sleek blue and black design on its charging base.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
- This appliance is for household use only.

SETUP

Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect the iron and its base for any signs of damage. Ensure all parts are present as listed in the product packaging.



Image: The Rowenta Freemove iron and its charging base, ready for setup.

Filling the Water Tank

Before filling, ensure the iron is unplugged from the electrical outlet.

1. Open the filling inlet door located on the top of the iron.
2. Hold the iron vertically under a tap and fill the water tank with tap water up to the "MAX" level indicator. Do not overfill.
3. Close the filling inlet door securely.



Image: Close-up of the iron's soleplate, highlighting the steam holes.

Connecting the Base

Place the charging base on a stable, heat-resistant surface, preferably near your ironing board. Plug the power cord of the base into a suitable electrical outlet.



Image: The Rowenta Freemove iron resting on its charging base, ready for use.

OPERATING INSTRUCTIONS

Powering On and Heating Up

Place the iron onto its charging base. The smart light on the base will begin to blink green, indicating that the iron is heating up. Once the light becomes steady green, the iron is ready for use.

The iron charges rapidly when placed on its base, ensuring it's ready when you are.

Setting the Temperature

Rotate the temperature dial to select the appropriate heat setting for your fabric. Refer to the fabric care labels on your garments for guidance.

Fabric Type	Temperature Setting
Synthetics	Low (•)
Wool - Silk	Medium (••)
Linen - Cotton	High (•••)

Steam Functions

The iron features various steam options for effective wrinkle removal:

- **Continuous Steam:** Set the steam lever to the desired steam output (On/Max).
- **Burst of Steam:** Press the steam shot button for an extra burst of steam to tackle stubborn wrinkles.
- **Vertical Steaming:** Hold the iron vertically and press the steam shot button to steam hanging garments.
- **Dry Ironing:** Set the steam lever to the "OFF" position for ironing without steam.

Cordless Operation

The cordless design allows for complete freedom of movement. When you need to reposition your garment, simply place the iron back on its base for a quick recharge. The smart light will indicate its charging status.

This iron features cordless technology for enhanced maneuverability.



Image: A graphic highlighting the "CORDLESS TECHNOLOGY" feature.

Auto-Off Safety Feature

For enhanced safety, the iron is equipped with a smart auto-off feature. If left unattended on its base, the iron will automatically switch off after 8 minutes. To reactivate, simply lift the iron from the base and place it back.



Image: A graphic illustrating the "SAFETY AUTO-OFF" function.

MAINTENANCE

Cleaning the Soleplate

To clean the stainless steel soleplate, use a damp cloth and a non-abrasive cleaner. Do not use metallic pads or abrasive cleaning agents as they can scratch the soleplate.



Image: A graphic emphasizing the "SCRATCH RESISTANT SOLEPLATE" feature.

Anti-Calc System

The integrated Anti-Calc system helps to prevent limescale build-up and prolong the life of your iron. For optimal performance, perform the anti-calc self-cleaning procedure regularly as described in the full user manual (PDF link available on product page).



Image: A graphic highlighting the "ANTICALC SYSTEM" for easy maintenance.

Storage

After use, ensure the water tank is emptied and the iron has cooled down completely. Store the iron upright on its base in a safe, dry place.

TROUBLESHOOTING

Iron not heating up or light not blinking

- Ensure the power cord is securely plugged into a working electrical outlet.
- Make sure the iron is correctly placed on its charging base.
- If the auto-off feature has activated, lift the iron and place it back on the base to reactivate.

Water leaking from the soleplate

- The temperature setting might be too low for steam production. Increase the temperature setting.
- Do not press the steam shot button too frequently. Allow a few seconds between bursts.
- Ensure the water tank is not overfilled.

Insufficient steam

- Check the water level in the tank and refill if necessary.
- Ensure the steam lever is set to the "On" or "Max" position.
- The iron might need to reheat. Place it back on the base until the smart light is steady green.

White flakes or residue on garments

- This indicates limescale build-up. Perform the anti-calc self-cleaning procedure.
- Consider using distilled or demineralized water if your tap water is very hard.

SPECIFICATIONS

Feature	Detail
Brand	Rowenta
Model Name	Rowenta Freemove Cordless Iron
Model Number	1830007108
Special Feature	Cordless, Auto-Off
Color	Blue
Recommended Uses	Steam Ironing
Item Weight	6.06 pounds
Base Material	Stainless Steel
Product Dimensions	14 x 10.3 x 8.2 inches
UPC	023108710800

WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please visit the official Rowenta website or contact their customer support. Keep your proof of purchase for warranty claims.

A detailed User Manual (PDF) is also available for download from the product's Amazon page for more in-depth instructions and diagrams.

For additional support, refer to the comprehensive user manual available online.