# Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Rapoo /
- Rapoo K2600 Wireless Touch Keyboard User Manual

# Rapoo K2600

# Rapoo K2600 Wireless Touch Keyboard

USER MANUAL

# Introduction

This manual provides detailed instructions for setting up, operating, and maintaining your Rapoo K2600 Wireless Touch Keyboard. Please read this manual carefully before using the product to ensure optimal performance and longevity.



Front view of the Rapoo K2600 Wireless Touch Keyboard, showcasing its compact design and integrated touchpad.

# **Setup**

# **Package Contents:**

- Rapoo K2600 Wireless Touch Keyboard
- Nano USB Receiver
- · Quick Start Guide
- 1 AAA Battery (pre-installed or included)

# **Battery Installation:**

The Rapoo K2600 keyboard requires one AAA battery for operation. The battery compartment is typically located on the underside of the keyboard. Ensure correct polarity when inserting the battery.

## Connecting the Nano USB Receiver:

- 1. Locate the Nano USB receiver, usually stored in a compartment on the keyboard itself or included separately in the packaging.
- 2. Plug the Nano USB receiver into an available USB port on your computer, Smart TV, or other compatible device.
- 3. The keyboard should automatically connect to the receiver. No additional drivers are typically required for basic functionality.

#### **System Requirements:**

- Operating System: Windows XP/Vista/7/8/10
- · Available USB Port



The Rapoo K2600 keyboard positioned in front of a smart TV, illustrating its use for controlling media and smart TV functions.

# **Operating**

#### **Wireless Connection:**

The K2600 utilizes a reliable 2.4 GHz wireless connection, offering a working range of up to 10 meters. This allows for flexible use from a distance, such as controlling a media PC or Smart TV from your couch.

# **Keyboard Layout and Keys:**

The keyboard features a total of 86 scissor keys, designed for comfortable and quiet typing. Its ergonomic design promotes a natural hand position.

#### **Multimedia Hotkeys:**

Seven dedicated Fn multimedia hotkeys provide quick access to common functions such as media player controls (play/pause, next/previous track), volume adjustment (mute, volume up/down), and homepage access.

# Multimedia hotkeys



The dedicated multimedia hotkeys located above the function row on the Rapoo K2600 keyboard, providing quick access to media controls.

# **Integrated Touchpad and Gestures:**

The large integrated touchpad allows for precise and quick navigation. It supports abundant touch gestures, especially useful for navigating Windows 10 interfaces.

# Abundant touch gestures LVDOO 0

An illustration of a hand performing a touch gesture on the Rapoo K2600's large touchpad, demonstrating its multi-touch capabilities.

# **Maintenance**

### Cleaning:

To clean the keyboard, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no liquid enters the keyboard. Avoid using harsh chemicals or abrasive cleaners.

### Storage:

When not in use for extended periods, store the keyboard in a cool, dry place. The sealed anti-oxidation membrane helps protect internal components from environmental factors.

### **Battery Replacement:**

Replace the AAA battery when the keyboard's performance degrades or it stops responding. Dispose of used batteries according to local regulations.

# **Troubleshooting**

# **Keyboard Not Responding:**

- Check Battery: Ensure the battery is correctly installed and has sufficient charge. Replace if necessary.
- Check Receiver: Make sure the Nano USB receiver is securely plugged into a working USB port on your device.

  Try a different USB port.
- Re-establish Connection: Unplug the USB receiver, wait a few seconds, and then plug it back in.
- **Distance:** Ensure the keyboard is within the 10-meter operating range of the receiver and there are no significant obstructions.

# **Touchpad Not Working Correctly:**

- Clean Touchpad: Ensure the touchpad surface is clean and free of dirt or debris.
- Driver Issues: While typically plug-and-play, ensure your operating system's drivers are up to date.
- System Settings: Check your operating system's mouse/touchpad settings to ensure it is enabled and configured correctly.

# **Specifications**

Feature	Detail
Brand	Rapoo
Model	K2600
Color	Gray
Connectivity Technology	Wireless (2.4 GHz Radio Frequency)
Wireless Range	Up to 10 meters
Number of Keys	86 Scissor Keys
Multimedia Hotkeys	7 Fn multimedia hotkeys
Touchpad Features	Abundant Touch Gestures, Wide touch area
Power Source	Battery Powered (1 AAA battery included)
Voltage	1.5 Volts
Key Lifetime	10 million times
Product Dimensions (LxWxH)	37.8 x 14.6 x 2.6 cm
Item Weight	437 g
Compatible Devices	Smart TV, PC
Operating System Support	Windows XP/Vista/7/8/10



Diagram showing the precise dimensions of the Rapoo K2600 keyboard: 377.86mm length, 146.1mm width, and 25.5mm height.

# **Warranty and Support**

# **Warranty Information:**

The Rapoo K2600 Wireless Touch Keyboard comes with a**3-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.



An image displaying a '3 Years Warranty' badge, along with contact information for support.

#### **Customer Support:**

For technical assistance, warranty claims, or product inquiries, please contact Rapoo customer support:

Phone: +91-84678-77770

Email: response.india@rapoo.com

Please visit the official Rapoo website for the most up-to-date support information and resources.

© 2024 Rapoo. All rights reserved.

