

BaByliss 2625688

BaByliss Nose and Ear Trimmer Model 2625688 Instruction Manual

Your guide to safe and effective use.

1. INTRODUCTION

Thank you for choosing the BaByliss Nose and Ear Trimmer, Model 2625688. This device is designed for safe and efficient removal of unwanted hair from the nose and ears. Please read this instruction manual carefully before using the appliance to ensure proper operation and to prevent injury. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- **DANGER:** To reduce the risk of electric shock:
 - Do not reach for an appliance that has fallen into water. Unplug immediately.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - This appliance should not be used by, on, or near children or individuals with certain disabilities.
 - Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
 - Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
 - Keep the cord away from heated surfaces.
 - Never drop or insert any object into any opening.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Do not use an extension cord with this appliance.
- Ensure the appliance is switched off before cleaning.
- **Use caution to avoid contact with eyes.**
- **Clean and maintain the device regularly according to the instructions provided.**
- **Do not use on children or individuals with sensitive skin without consulting a medical professional.**

3. PACKAGE CONTENTS

Your BaByliss Nose and Ear Trimmer package should contain the following items:

- BaByliss Nose and Ear Trimmer (Model 2625688)
- 1 x AA Battery
- Instruction Manual



BaByliss



TÊTE DÉTACHABLE
ET LAVABLE

TONDEUSE
NEZ-OREILLES



GARANTI 5 ANS



Image: BaByliss Nose and Ear Trimmer, Model 2625688. The image shows the compact, black trimmer with its cylindrical body and a small, circular trimming head at the top.

4. PRODUCT FEATURES

The BaByliss Nose and Ear Trimmer is designed for precision and ease of use:

- **Circular Cutting System:** Ensures efficient and safe hair removal.
- **Stainless Steel Blades:** Durable and sharp for effective trimming.
- **Detachable Head:** Allows for easy cleaning and maintenance.
- **Battery Operated:** Powered by 1 AA battery for cordless convenience.
- **Compact Design:** Easy to handle and store.

5. SETUP: BATTERY INSTALLATION

Your trimmer requires one AA battery (included) for operation.

1. Gently twist the bottom part of the trimmer body counter-clockwise to open the battery compartment.
2. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Replace the bottom part of the trimmer body by twisting it clockwise until it is securely closed.

Note: Always use fresh, high-quality batteries. Remove batteries if the trimmer will not be used for an extended period to prevent leakage.

6. OPERATING INSTRUCTIONS

Follow these steps for effective and safe trimming:

6.1. General Use

- Ensure your skin is clean and dry before use.
- Turn on the trimmer by sliding the power switch (usually located on the body of the trimmer).
- Gently insert the trimming head into the desired area.
- Move the trimmer slowly and carefully to trim unwanted hair. Avoid pressing too hard.
- Turn off the trimmer after use.

6.2. For Nose Hair

- Gently insert the trimmer head into the nostril, no more than 5mm.
- Move the trimmer in a circular motion to cut hairs.
- Breathe normally through your mouth during the process.
- Do not insert the trimmer too deeply into the nostril.

6.3. For Ear Hair

- Carefully insert the trimmer head into the outer ear canal.
- Move the trimmer gently to remove visible hairs.
- Do not insert the trimmer too deeply into the ear canal.
- If you experience any discomfort, stop immediately.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. **Ensure the trimmer is switched off** before cleaning.
2. Gently twist the trimming head counter-clockwise to detach it from the main body.
3. Rinse the detachable trimming head under running water to remove hair clippings. You may use a small brush (not included) to dislodge stubborn hairs.
4. Allow the trimming head to air dry completely before reattaching it to the trimmer body.
5. Wipe the main body of the trimmer with a clean, damp cloth. Do not submerge the main body in water.
6. Reattach the dry trimming head by aligning it and twisting clockwise until secure.
7. For optimal performance, occasionally apply a drop of clipper oil (not included) to the blades.

8. TROUBLESHOOTING

If you encounter issues with your BaByliss Nose and Ear Trimmer, refer to the following common solutions:

- **Trimmer does not turn on:**
 - Check if the battery is inserted correctly with the correct polarity (+/-).
 - Replace the AA battery with a new one.
 - Ensure the power switch is fully in the "ON" position.
- **Trimmer is pulling hair or not cutting effectively:**
 - The battery might be low; replace it.
 - The trimming head might be clogged with hair. Clean the detachable head thoroughly as per Section 7.
 - The blades might require lubrication. Apply a small drop of clipper oil.
 - Ensure the trimming head is securely attached.
- **Excessive noise or vibration:**
 - Check if the trimming head is properly attached and secured.
 - Ensure there are no obstructions in the trimming head.

If the problem persists after trying these solutions, please contact BaByliss customer support.

9. SPECIFICATIONS

Model Number:	2625688
----------------------	---------

Brand:	BaByliss
Power Source:	1 x AA Battery (included)
Blade Material:	Stainless Steel
Special Feature:	Detachable Head for easy cleaning
Recommended Use:	Nose and Ear Hair Trimming
Color:	Black
Dimensions (approx.):	24.2 x 10.1 x 5.1 cm (Package)
Manufacturer:	Babyliss SARL

10. WARRANTY AND SUPPORT

BaByliss products are manufactured to the highest standards and undergo rigorous quality control. This product is covered by a limited warranty against manufacturing defects. Please refer to the warranty card included in your package or visit the official BaByliss website for detailed warranty information specific to your region.

For technical support, replacement parts, or further assistance, please contact BaByliss customer service through their official website or the contact information provided in your product packaging.

Manufacturer: Babyliss SARL - 99 avenue Aristide Briand 92120 Montrouge France