

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL Vintage Solid Mango Wood TV Stand \(Model 245253\) Instruction Manual](#)

vidaXL 245253

vidaXL Vintage Solid Mango Wood TV Stand (Model 245253)

Instruction Manual

Contents Setup Operating Maintenance Troubleshooting Package Specifications Warranty & Support

1. INTRODUCTION

Thank you for choosing the vidaXL Vintage Solid Mango Wood TV Stand. This manual provides essential information for the safe and efficient use of your new furniture. Please read it thoroughly before use and retain it for future reference.

This TV stand is crafted from solid mango wood, offering a unique vintage aesthetic with natural variations in color and grain. It features two cabinets and two open shelves, designed for organizing media devices and accessories.



Image 1.1: The vidaXL Vintage Solid Mango Wood TV Stand in a living room setting with a television.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of the top surface or shelves. Refer to the 'Specifications' section for details. Overloading can cause instability and damage.
- **Placement:** Place the TV stand on a flat, stable, and level surface to prevent tipping.
- **Children Safety:** Keep children away from open cabinets and drawers to prevent pinching or entrapment. Do not allow children to climb on the unit.
- **Ventilation:** Ensure adequate ventilation around electronic devices placed within the shelves or cabinets to prevent overheating.
- **Liquid Exposure:** Avoid direct contact with liquids. Spills should be wiped immediately to prevent damage to the wood.
- **Heat Sources:** Keep the unit away from direct heat sources such as radiators, fireplaces, or direct sunlight to prevent warping or discoloration of the wood.

3. PACKAGE CONTENTS

The vidaXL Vintage Solid Mango Wood TV Stand is delivered fully assembled. Please inspect the packaging and the product upon receipt for any signs of damage.

- 1 x vidaXL Vintage Solid Mango Wood TV Stand
- Any included shelves are pre-installed.

4. SETUP

This TV stand arrives fully assembled, requiring no additional setup. Follow these steps for proper placement:

1. **Unpacking:** Carefully remove the TV stand from its packaging. Retain packaging materials until you are satisfied with the product.
2. **Placement:** Choose a suitable location on a flat, stable, and level floor surface. Ensure there is enough space around the unit for ventilation and access.
3. **Leveling:** If the floor is uneven, use appropriate shims under the feet of the stand to ensure it is perfectly level and stable.
4. **Positioning TV:** Carefully place your television on the top surface of the stand. Ensure the TV's base is fully supported and centered to prevent tipping.



Image 4.1: The TV stand with a television positioned on its top surface.

5. OPERATING THE TV STAND

The TV stand is designed to store and organize your media equipment and accessories.

- **Open Shelves:** Use the two open shelves for devices that require remote control access or better ventilation, such as DVD players, game consoles, or streaming boxes.



Image 5.1: Detail of the open shelves, suitable for media devices.

- **Cabinets:** The two side cabinets provide enclosed storage for items you wish to keep out of sight, such as media collections, cables, or other accessories. The cabinets feature louvered doors and black knobs.



Image 5.2: Detail of a side cabinet with its louvered door and knob.

- **Cable Management:** The back panel of the TV stand includes pre-drilled holes for cable routing, helping to keep wires tidy and organized.



Image 5.3: Rear view of the TV stand, highlighting the cable management openings.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your mango wood TV stand.

- **Cleaning:** Wipe the surface with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with a mild wood cleaner, then immediately dry with a clean cloth. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust the surfaces to prevent buildup.
- **Spills:** Clean up spills immediately to prevent watermarks or staining.
- **Sunlight Exposure:** Prolonged exposure to direct sunlight can cause fading or changes in wood color. Position the stand to minimize direct sun exposure.
- **Humidity:** Maintain a consistent humidity level in the room to prevent the wood from cracking or warping.

7. TROUBLESHOOTING

- **Unit is wobbly:**
 - Ensure the TV stand is placed on a flat, level surface.
 - Use shims under the feet if the floor is uneven.
- **Cabinet doors do not close properly:**
 - Check for any obstructions inside the cabinet.
 - Inspect hinges for damage or misalignment.
- **Wood appears dry or dull:**
 - Apply a suitable wood conditioner or furniture polish designed for solid wood, following the product's instructions.
- **Scratches or minor damage:**
 - For minor scratches, wood repair markers or wax sticks can be used. Consult a professional for significant damage.

8. SPECIFICATIONS

Brand	vidaXL
Model Number	245253
Material	Solid Mango Wood
Color	Brown (Whitewashed finish)
Product Dimensions (L x W x H)	43.31 x 11.81 x 15.7 inches (110 x 30 x 40 cm)
Item Weight	48.4 lbs (22 kg)
Number of Shelves	2 (open)
Number of Cabinets	2
Assembly Required	No (Ready Assembled)



Image 8.1: Dimensional diagram of the TV stand.



Image 8.2: Side profile of the TV stand.

9. WARRANTY & SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the retailer's policy where the product was purchased or visit the official [vidaXL website](#).

You can find more information and contact details on the [vidaXL Store on Amazon](#).

