

[manuals.plus](#) /› [Domo](#) /› [Domo DO517FR Mini Airfryer Deli-Fryer 1.6 Liter, 1000W Instruction Manual](#)

## Domo DO517FR

# Domo DO517FR Mini Airfryer Deli-Fryer Instruction Manual

Model: DO517FR

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may lead to electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Always place the appliance on a stable, heat-resistant surface, away from walls and other heat-sensitive materials.
- Do not block the air inlet or outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- This appliance is intended for household use only.

## 2. PRODUCT OVERVIEW

The Domo DO517FR Mini Airfryer is designed for frying, baking, and grilling with hot air, offering a healthier alternative to traditional deep frying.



Domo DO517FR Mini Airfryer with frying basket containing french fries.



Front view of the Domo DO517FR Mini Airfryer, showing the control panel and handle.



Top view of the Domo DO517FR Mini Airfryer, showing the basket filled with various food items.



Top view of the Domo DO517FR Mini Airfryer, showing the basket filled with french fries.



Top view of the Domo DO517FR Mini Airfryer, showing the basket with a piece of salmon.

## Components:

- **Temperature Control Dial:** Adjusts cooking temperature from 80°C to 200°C.
- **Timer Dial:** Sets cooking time up to 30 minutes with an audible signal.
- **Power Indicator Light:** Illuminates when the appliance is powered on.
- **Heating Indicator Light:** Illuminates when the heating element is active.
- **Frying Basket:** Removable basket with non-stick coating for food.
- **Cool-Touch Handle:** For safe handling of the frying basket.
- **Air Inlet/Outlet:** For proper air circulation during operation.
- **Non-Slip Feet:** Ensures stability during use.

---

## 3. SETUP

### Unpacking:

1. Remove all packaging materials from the airfryer.
2. Check that all parts are present and undamaged.
3. Remove any stickers or labels from the appliance.

### Before First Use:

1. Clean the frying basket and pan thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.
4. Place the airfryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space around the appliance for proper ventilation.

## 4. OPERATING INSTRUCTIONS

### General Operation:

1. Plug the power cord into a grounded wall outlet. The power indicator light will illuminate.
2. Carefully pull the frying basket out of the airfryer using the cool-touch handle.
3. Place your ingredients into the frying basket. Do not exceed the MAX fill line.
4. Slide the frying basket back into the airfryer until it clicks into place.
5. Set the desired temperature using the temperature control dial (80°C - 200°C).
6. Set the desired cooking time using the timer dial (up to 30 minutes). The heating indicator light will turn on, indicating that the airfryer is heating.
7. During cooking, the heating indicator light will cycle on and off as the airfryer maintains the set temperature.
8. For even cooking, some ingredients may require shaking halfway through the cooking time. Pull out the basket, shake, and slide it back in. The airfryer will resume cooking.
9. When the timer reaches zero, an audible signal will sound, and the airfryer will automatically turn off.
10. Carefully pull out the frying basket and empty the cooked food onto a plate.
11. Unplug the appliance after use.

### Cooking Tips:

- Preheating the airfryer for 3-5 minutes at the desired temperature can improve cooking results.
- For crispy results, lightly brush or spray food with oil.
- Smaller ingredients usually require a shorter cooking time than larger ones.
- Do not overfill the basket to ensure proper air circulation and even cooking.

---

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your airfryer.

### Cleaning Procedure:

1. Always unplug the airfryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
3. Remove the frying basket. Clean the basket and pan with hot water, dish soap, and a non-abrasive sponge. The non-stick coating is delicate; avoid metal utensils.
4. For stubborn food residue, soak the basket and pan in hot water with dish soap for about 10 minutes.
5. Clean the inside of the airfryer with a damp cloth.
6. Ensure all parts are completely dry before reassembling and storing the appliance.

### Storage:

Store the cleaned and dry airfryer in a cool, dry place, away from direct sunlight and moisture.

---

## 6. TROUBLESHOOTING

If you encounter issues with your Domo DO517FR Mini Airfryer, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
The airfryer does not turn on.	The appliance is not plugged in. The power outlet is not working. The timer is not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer to the desired cooking duration.
Food is not cooked evenly.	Too much food in the basket. Food not shaken during cooking.	Do not overfill the basket. Shake smaller ingredients halfway through cooking.
Food is not crispy.	Not enough oil (for fresh ingredients). Temperature too low or cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time as needed.
White smoke comes from the appliance.	Fat residue from previous use. Excess oil on food.	Clean the basket and pan thoroughly after each use. Remove excess oil from food before air frying.

## 7. SPECIFICATIONS

Technical details for the Domo DO517FR Mini Airfryer:

- **Brand:** Domo
- **Model Number:** DO517FR
- **Color:** White
- **Capacity:** 1.6 Liters
- **Wattage:** 1000 Watts
- **Voltage:** 230V
- **Material:** Non-stick coated metal, Plastic
- **Adjustable Temperature:** 80°C – 200°C
- **Adjustable Timer:** Up to 30 minutes with signal
- **Item Weight:** 2.6 Kilograms
- **Dimensions (Package):** 36.1 x 25.9 x 25.2 cm
- **Special Features:** Non-stick coating, Cool-touch handle, Non-slip feet

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Domo website. Keep your proof of purchase for any warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Domo customer support through their official channels. Contact details can typically be found on the manufacturer's website or on the product packaging.

