

Magic Sing E 1

MagicSing E-1 Smart Home Karaoke System

INSTRUCTION MANUAL

Product Overview

The MagicSing E-1 Smart Home Karaoke System is a portable and versatile karaoke microphone designed for home entertainment. It connects to your Wi-Fi network, providing access to an extensive library of over 10,000 songs in multiple languages. This system offers high-quality audio output and user-friendly controls, making it suitable for various occasions, from solo performances to group gatherings.

Key features include:

- **Portability:** Designed for easy movement and setup in any space.
- **Extensive Song Library:** Access to over 10,000 songs in various languages, including Tagalog, Hindi, Korean, and Spanish, via Wi-Fi connection.
- **High-Quality Audio:** Delivers clear sound for vocals and music.
- **User-Friendly Interface:** Intuitive controls for song selection, volume adjustment, and various karaoke functions.
- **Customizable Settings:** Adjust background display, melody, tone, echo, and tempo.
- **1-Touch Recording:** Easily record your performances.
- **Additional Microphone Input:** Includes one microphone and one input jack for a standard second microphone (not included).

What's in the Box

Upon opening the package, please verify that all the following components are present:

- MagicSing E-1 Microphone
- Receiver Unit
- HDMI Cable
- Auto Volt Power Supply
- Instruction Manual (this document)



Image: The MagicSing E-1 Karaoke System package contents, showing the microphone, receiver, power adapter, HDMI cable, and user manual laid out next to the product box.

Setup Guide

Follow these steps to set up your MagicSing E-1 Karaoke System:

1. **Connect the Receiver:**

Connect the HDMI cable from the receiver unit to an available HDMI input port on your TV or display device. Ensure the connection is secure.

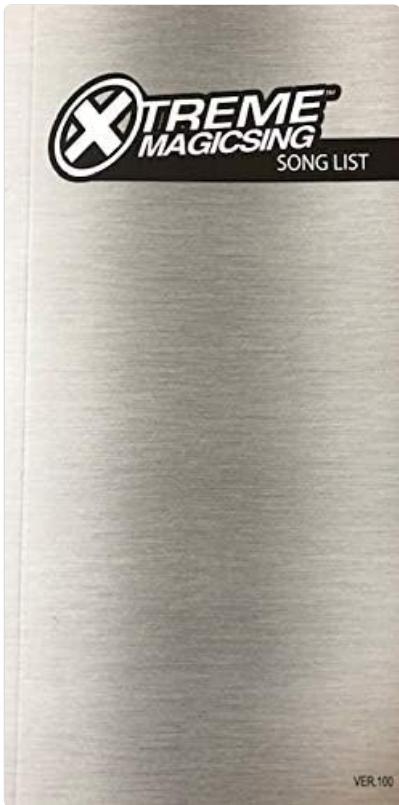


Image: A close-up view of the MagicSing E-1 receiver unit, highlighting the USB port, memory card slot, and power switch, which are essential for setup and operation.

2. **Power Connection:**

Connect the auto volt power supply to the receiver unit's power input port, then plug the power supply into a standard electrical outlet.

3. **Power On:**

Turn on the receiver unit using the power switch located on the unit. Turn on your TV and select the correct HDMI

input source.

4. Microphone Connection:

The microphone will automatically connect wirelessly to the receiver unit once both are powered on. If connection issues occur, ensure the microphone has sufficient battery power.

5. Wi-Fi Setup:

On your TV screen, navigate to the system settings to connect the MagicSing E-1 to your home Wi-Fi network. A stable internet connection is required to access the song library and updates.

6. Optional Second Microphone:

If you wish to use a second standard microphone, plug it into the dedicated microphone input jack on the receiver unit.

Operating Instructions

This section details the operation of your MagicSing E-1 system.



Image: A detailed view of the MagicSing E-1 microphone's control panel, showing buttons for numerical input, volume control, song selection, menu navigation, and specific karaoke functions like tempo and key adjustment.

Basic Functions:

- **Power On/Off:** Press and hold the power button on the microphone to turn it on or off.
- **Song Selection:** Use the numerical keypad on the microphone to enter song numbers directly, or navigate through the on-screen menu using the directional buttons.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the microphone's volume.
- **Music Volume:** Adjust the background music volume independently using the dedicated music volume controls on the microphone or on-screen menu.

Karaoke Functions:

- **Echo:** Use the **ECHO** button to adjust the echo effect on your vocals.
- **Tempo:** Modify the song's tempo using the **TEMPO** buttons.
- **Key Control:** Adjust the musical key of the song to suit your vocal range using the **KEY** buttons.
- **1-Touch Recording:** Press the **REC** button to start recording your performance. Press again to stop. Recordings are saved to a connected USB drive or memory card (if inserted).
- **Menu Navigation:** Use the **MENU** button to access various settings and options on the screen.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your MagicSing E-1 Karaoke System.

- **Cleaning:** Use a soft, dry cloth to clean the microphone and receiver unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the system in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the microphone uses replaceable batteries, remove them if the system will not be used for an extended period to prevent leakage.
- **Software Updates:** Periodically check for software updates via the system's Wi-Fi connection to ensure access to the latest features and song library.

Troubleshooting

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution
No display on TV.	HDMI cable not connected properly; Incorrect TV input selected; Receiver not powered on.	Ensure HDMI cable is securely connected. Select the correct HDMI input on your TV. Verify the receiver is powered on.
Microphone not working or low volume.	Microphone not paired; Low microphone battery; Microphone volume too low.	Check microphone battery and replace if necessary. Ensure microphone is powered on and within range of the receiver. Increase microphone volume using the VOL + button.
Cannot connect to Wi-Fi or access songs.	Incorrect Wi-Fi password; Weak Wi-Fi signal; Internet service issue.	Verify Wi-Fi password in settings. Move receiver closer to router or reduce interference. Check your internet connection.
No sound from speakers.	TV volume muted or too low; Incorrect audio output settings on TV.	Increase TV volume. Check TV audio settings to ensure sound is outputting from the correct source.

Specifications

Feature	Detail
Model Number	E 1
Item Weight	2.59 pounds
Product Dimensions	14 x 12 x 4 inches
Color	Black
Compatible Devices	Smartphone (for app control, if applicable)
Connector Type	USB, HDMI
Speaker Count	1 (referring to the system's audio output channel)
Hardware Platform	Karaoke Machine

Feature	Detail
Power Source	Corded Electric
Special Feature	1-Touch Recording
Recommended Use	Karaoke

Warranty and Support

MagicSing provides a comprehensive warranty for the E-1 Smart Home Karaoke System. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official MagicSing website.

Should you encounter any issues or require assistance with your product, our dedicated customer support team is available to help. Please contact MagicSing customer support through the contact information provided on the official website or your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

