Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Qilive /
- Qilive Q.8609 Gamepad User Manual Wireless & Wired Controller for Android, PC, PlayStation 3

Qilive 871871

Qilive Q.8609 Gamepad User Manual

Wireless & Wired Controller for Android, PC, PlayStation 3

1. Introduction

Thank you for choosing the Qilive Q.8609 Gamepad. This manual provides essential information for setting up, operating, and maintaining your new controller. The Q.8609 is designed to enhance your gaming experience across multiple platforms, including Android devices, personal computers (PC), and PlayStation 3 consoles, offering both wireless and wired connectivity options.

2. PACKAGE CONTENTS

Please check the box for the following items:

- · Qilive Q.8609 Gamepad
- USB Nano Receiver (for wireless connection)
- USB Cable (for wired connection and charging/power)
- · User Manual (this document)

3. PRODUCT OVERVIEW

The Qilive Q.8609 Gamepad features a standard controller layout with dual analog sticks, a D-pad, action buttons, shoulder buttons, and dedicated system buttons. Familiarize yourself with the controller's layout before use.

Note: No specific product image was provided for detailed component labeling. Please refer to the physical product for button identification.

4. SETUP

4.1 Battery Installation

- 1. Locate the battery compartment on the back of the gamepad.
- 2. Open the battery compartment cover.
- 3. Insert two (2) AA batteries, ensuring correct polarity (+/-).

4. Close the battery compartment cover securely.

4.2 Wireless Connection (via USB Nano Receiver)

This method is suitable for Android devices (with OTG support), PC, and PlayStation 3.

- 1. Ensure the gamepad has fresh batteries installed.
- 2. Plug the USB Nano Receiver into an available USB port on your Android device (via OTG adapter, if required), PC, or PlayStation 3 console.
- 3. Turn on the gamepad (usually by pressing the 'Home' button).
- 4. The gamepad should automatically pair with the receiver. An indicator light on the gamepad will confirm a successful connection.
- 5. The wireless range is approximately 3 meters. Ensure the gamepad is within this range for optimal performance.

4.3 Wired Connection (via USB Cable)

This method is suitable for PC and PlayStation 3, and can also provide power to the gamepad.

- 1. Connect one end of the provided USB cable to the gamepad's USB port.
- 2. Connect the other end of the USB cable to an available USB port on your PC or PlayStation 3 console.
- 3. The gamepad will be recognized as a wired controller. No batteries are required for operation in wired mode, as it draws power from the USB connection.

5. OPERATING THE GAMEPAD

5.1 Supported Platforms

- Android: Compatible with Android devices that support external gamepads (OTG functionality may be required for some devices).
- **PC:** Compatible with Windows operating systems (Windows 98, 2000, Me, XP, and newer versions). Drivers may install automatically upon connection.
- PlayStation 3: Compatible with PlayStation 3 consoles.

5.2 Control Technology

The Q.8609 Gamepad supports both **analog** and **digital** control inputs. Analog sticks provide precise, variable input for movement and camera control, while the D-pad and action buttons offer crisp, digital input for specific actions.

5.3 Special Buttons

- Back Button: Typically used for navigating back in menus or canceling actions.
- Home Button: Returns to the system's home screen or main menu.
- Menu Button: Accesses in-game menus or system options.

6. MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the gamepad. Do not use harsh chemicals or abrasive materials.
- Storage: Store the gamepad in a cool, dry place away from direct sunlight and extreme

temperatures.

- **Battery Care:** Remove batteries if the gamepad will not be used for an extended period to prevent leakage.
- Avoid Drops: Protect the gamepad from drops and impacts, which can damage internal components.

7. TROUBLESHOOTING

· Gamepad not connecting wirelessly:

- Ensure batteries are correctly installed and charged.
- Verify the USB Nano Receiver is securely plugged into the device.
- Make sure the gamepad is powered on.
- Try plugging the receiver into a different USB port.
- Ensure the gamepad is within the 3-meter wireless range.

· Gamepad not responding in wired mode:

- Check that the USB cable is securely connected to both the gamepad and the device.
- Try a different USB port on your PC or console.
- Test with a different USB cable if available.

· Buttons or joysticks not working correctly:

- Restart the gamepad and the connected device.
- Ensure the gamepad's firmware is up to date (if applicable, check manufacturer's website).
- Clean around the buttons and joysticks to remove any debris.

Input lag or disconnection:

- Reduce interference by moving away from other wireless devices.
- Ensure a clear line of sight between the gamepad and the wireless receiver.

8. Specifications

Model Number: 871871

• Connectivity: Wireless (USB Nano Receiver), Wired (USB)

• Wireless Range: Up to 3 meters

• Control Technology: Analog / Digital

• Supported Platforms: Android, PC, PlayStation 3

• Battery Type: 2 x AA batteries

• Color: Black

• ASIN: B07DZK3MBB

• Release Date: March 26, 2019

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official Qilive website. Keep your proof of purchase for any warranty claims.

