

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT RC108 Remote Control User Manual for Roku Streaming Boxes

USARMT Roku RC108 Sling Vudu-1

USARMT RC108 Remote Control User Manual

Model: Roku RC108 Sling Vudu-1

INTRODUCTION

Welcome to the user manual for your new USARMT RC108 Remote Control. This remote is designed to provide seamless control over various Roku streaming boxes, offering pre-programmed access to popular streaming services. Please read this manual carefully to ensure proper use and to maximize your experience.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries according to local regulations.
- Do not expose the remote to extreme temperatures or moisture.
- Avoid dropping the remote or subjecting it to strong impacts.

PRODUCT OVERVIEW

The USARMT RC108 remote is a pre-programmed infrared remote control for Roku streaming devices. It features dedicated quick-access buttons for popular streaming applications, providing convenience and ease of use.

Remote Layout





This image displays the front of the USARMT RC108 remote control. It features standard navigation buttons (directional pad with OK button), playback controls (rewind, play/pause, fast forward), and dedicated app buttons for Netflix, Sling, Hulu, and Vudu.

- **Arrow Keys (Up, Down, Left, Right):** Navigate menus and content.
- **OK Button:** Select items or confirm actions.

- **Back Button:** Return to the previous screen.
- **Home Button:** Go to the Roku home screen.
- **Rewind, Play/Pause, Fast Forward:** Control media playback.
- **Netflix, Sling, Hulu, Vudu Buttons:** Direct access to these streaming applications.

COMPATIBILITY

This remote control is compatible with a range of Roku streaming boxes. It is important to verify your Roku device model for compatibility.

Compatible with Roku Box Players



NOT
Support

**Roku Smart TV &
Roku Sticks**





This image illustrates the compatibility of the remote. It shows various Roku box players (e.g., Roku LT, HD, XD, XDS, N1, 1, 2, 3, Express, Express+) as compatible, indicated by a green checkmark. It explicitly states "NOT Support" for Roku Smart TVs and Roku Sticks, indicated by a red cross.

Compatible Models (Partial List):

- Roku LT
- Roku HD, XD, XDS
- Roku N1
- Roku 1
- Roku 2, Roku 2 HD, XD, XS
- Roku 3
- Roku Express
- Roku Express+

Note: This remote does not work with Roku Smart TVs or Roku Sticks. It also does not feature a pairing button, power button, or volume control. It is designed specifically for the listed Roku streaming devices.

SETUP

Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote is pre-programmed and does not require any setup or pairing with compatible Roku streaming boxes. Once batteries are installed, it is ready for immediate use.

OPERATING INSTRUCTIONS

Point the remote control directly at your Roku streaming box. Ensure there is a clear line of sight between the remote and the Roku device for optimal performance.

Basic Navigation

- Use the **Up, Down, Left, Right** arrow keys to move through menus and select options.

- Press the **OK** button to confirm a selection or open an application.
- Press the **Home** button to return to the main Roku home screen at any time.
- Press the **Back** button to go back to the previous screen or menu.

Media Playback

- Use the **Play/Pause** button to start or pause video playback.
- Use the **Rewind** and **Fast Forward** buttons to skip backward or forward through content.

Quick Access Buttons

- Press the **Netflix** button to launch the Netflix application.
- Press the **Sling** button to launch the Sling TV application.
- Press the **Hulu** button to launch the Hulu application.
- Press the **Vudu** button to launch the Vudu application.

MAINTENANCE

Cleaning

To clean the remote, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or harsh chemicals, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries of the same type. Do not leave depleted batteries in the remote for extended periods.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly and are not depleted. Replace with new AAA batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote and the Roku device. Infrared remotes require direct line of sight and can be affected by obstructions.
- **Compatibility:** Verify that your Roku device is listed as compatible with this remote. This remote is not compatible with Roku Smart TVs or Roku Sticks.

Buttons Not Working

- Ensure the remote is pointed directly at the Roku device.
- Check for any physical obstructions or debris under the buttons that might prevent them from being pressed fully.

No Power Button / Volume Control

This remote model (RC108) does not include a power button for the Roku device or TV, nor does it have volume

control buttons. These functions must be managed via your TV's remote or the Roku device's native controls if available.

SPECIFICATIONS

Feature	Detail
Model	Roku RC108 Sling Vudu-1
Brand	USARMT
Dimensions	8 x 2 x 0.5 inches
Weight	1.44 ounces
Power Source	2 x AAA Batteries (not included)
Connectivity	Infrared (IR)
Special Features	Pre-programmed, Dedicated App Buttons (Netflix, Sling, Hulu, Vudu)

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

For support inquiries or further assistance regarding your USARMT RC108 Remote Control, please refer to the seller's contact information or the platform where the product was purchased. Specific warranty details may vary and are typically provided at the point of sale or within the product listing.

For general information about Roku devices and their functionalities, please visit the official Roku support website.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question