

ECONTROLLY AA59-00445A

ECONTROLLY AA59-00445A Replacement Remote Control User Manual for Samsung TVs

INTRODUCTION

This manual provides instructions for the ECONTROLLY AA59-00445A replacement remote control, designed for use with various Samsung TV models. It covers setup, basic operation, maintenance, and troubleshooting to ensure optimal performance.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Samsung TVs once batteries are installed. No programming is required.





Image: Front view of the AA59-00445A remote control, displaying its full button layout.

Key Button Overview

- **POWER (Red Button):** Turns the TV on or off.
- **ON/OFF (Light Orange Button):** Secondary power control, often for specific functions or devices.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts volume up or down.
- **CH (Up/Down):** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **INFO:** Shows information about the current program or input.
- **Directional Pad (Up/Down/Left/Right):** Navigates through menus and options.
- **ENTER (Center Button):** Confirms selections.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **SMART HUB:** Accesses the Samsung Smart Hub for apps and streaming services.
- **TOOLS:** Provides quick access to common functions or settings.
- **Color Buttons (A, B, C, D):** Function-specific buttons, often used within Smart TV apps or teletext.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.

COMPATIBLE SAMSUNG TV MODELS

The ECONTROLLY AA59-00445A remote control is compatible with a wide range of Samsung TV models, including but not limited to the following:

- UE40D8000YU
- UE46D8000YU
- UE55D8000YU
- UE60D8000YU
- UE40D8000
- UE46D8000
- UE55D8000

- UE32D6510WK
- UE32D6530WK
- UE37D6510WK
- UE37D6530WK
- UE40D6510WK
- UE40D6530WK
- UE46D6510WK
- UE46D6530WK
- UE55D6530WK
- UE32D6505
- UE32D6510
- UE32D6530
- UE32D6540
- UE32D6570
- UE37D6505
- UE37D6510
- UE37D6530
- UE37D6540
- UE37D6570
- UE40D6505
- UE40D6510
- UE40D6530
- UE40D6540
- UE40D6570
- UE46D6505
- UE46D6510
- UE46D6530
- UE46D6540
- UE46D6570
- UE55D6505
- UE55D6510
- UE55D6530
- UE55D6540
- UE55D6570
- UE60D6505
- UE32D6750WK
- UE40D6750WK
- UE46D6750WK
- UE55D6750WK
- UE37D6750WK
- UE32D6750
- UE37D6750
- UE40D6750

- UE46D6750
- UE55D6750
- PS59D6900
- PS51D6900
- PS51D6910
- PS59D6910

CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Keep the remote away from extreme temperatures, direct sunlight, and moisture.

TROUBLESHOOTING GUIDE

Common Issues and Solutions

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Buttons are sticky or unresponsive:**
 - Clean the remote's surface and around the buttons with a soft, dry cloth.
 - Avoid spilling liquids on the remote.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

PRODUCT SPECIFICATIONS

Brand	ECONTROLLY
Model Number	RCEC-AA59-00445A
Compatible Devices	Television
Power Source	2 x AAA Batteries (not included)
Material	ABS Material

Color	Black
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces
Transmitting Distance	Up to 10 meters (33 feet)

WARRANTY AND SUPPORT INFORMATION

Specific warranty details for the ECONTROLLY AA59-00445A replacement remote control are not provided in the product information. For any support inquiries or further assistance, please refer to the seller or retailer from whom the product was purchased.