

ECONTROLLY AA59-00580A

ECONTROLLY AA59-00580A Replacement Remote Control User Manual

For Samsung LCD LED HDTV Televisions

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AA59-00580A Replacement Remote Control. This remote is designed as a direct replacement for various Samsung LCD LED HDTV models, offering full functionality without the need for complex programming.

Please read this manual carefully before using the remote control to ensure proper operation and to familiarize yourself with its features.

2. SETUP

2.1 Battery Installation

The ECONTROLLY AA59-00580A remote control requires two (2) AAA batteries for operation. No programming or pairing is necessary; simply install the batteries, and the remote will be ready to use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Image: Back view of the remote control with the battery compartment open, illustrating correct battery placement.

2.2 Initial Use

After installing the batteries, point the remote control towards your Samsung TV. The remote should function immediately without any additional setup steps.

3. OPERATING INSTRUCTIONS

The ECONTROLLY AA59-00580A remote control provides standard functions for your compatible Samsung LCD LED HDTV. Below are common button functions:



Image: Front view of the remote control, displaying all functional buttons.

- **Power (Red Button):** Turns the TV on or off.
- **Source:** Selects input sources (HDMI, AV, Component, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Pre-CH:** Returns to the previous channel.

- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV audio.
- **CH (Up/Down):** Changes channels sequentially.
- **CH LIST:** Displays the channel list.
- **MENU:** Accesses the TV's main menu.
- **TOOLS:** Opens a quick menu with common functions.
- **SEARCH:** Initiates a search function (if supported by TV).
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & Enter:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV applications or menus.
- **Family Story, MTS, SRS, Support, P.SIZE, CC:** Specific function buttons, their availability and function depend on the TV model.
- **Playback Controls (Record, Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback on compatible devices or TV functions.

3.1 Compatibility

This remote control is compatible with a wide range of Samsung LCD LED HDTV models, including but not limited to: UN32EH5300, UN32EH5300F, UN32EH5300FXZA, UN40EH5300F, UN40ES6100F, UN40ES6100FXZA, UN40ES6150F, UN46ES6100, UN46ES6150F, UN50EH5300, and other similar models that originally used the AA59-00580A remote.

4. MAINTENANCE

4.1 Battery Replacement

Replace the batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV's sensor.
- **Limited range:**

- Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

6. SPECIFICATIONS

Feature	Specification
Model Number	AA59-00580A
Brand	ECONTROLLY
Compatible Devices	Samsung LCD LED HDTV Televisions
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	1 ounce (approx.)

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the ECONTROLLY customer service directly. Contact details are typically available on the product packaging or the manufacturer's official website.