

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moulinex](#) /

› [Moulinex Removable Power Cable User Manual for Cookeo Pressure Cookers CE7061, CE8511](#)

Moulinex SS-993452

Moulinex Removable Power Cable User Manual

Model: SS-993452

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Moulinex Removable Power Cable (Model SS-993452). This cable is an original Moulinex replacement part designed for specific Moulinex Cookeo and Cook4Me pressure cooker models. Please read this manual thoroughly before installation and use, and retain it for future reference.

2. PRODUCT OVERVIEW

The Moulinex Removable Power Cable is designed to supply electrical power to your compatible Moulinex pressure cooker. It features a standard European Type F (Schuko) plug for connection to a wall outlet and an IEC C13 connector for secure attachment to the appliance.



Image 1: Moulinex Removable Power Cable. This image displays the Moulinex removable power cable. It features a standard European Type F (Schuko) plug for wall outlets and an IEC C13 connector designed to plug into compatible appliances like the Moulinex Cookeo pressure cooker. The cable is white and coiled for presentation.

3. SETUP AND INSTALLATION

- Safety First:** Ensure your Moulinex pressure cooker is turned off and unplugged from the wall outlet before attempting to connect or disconnect the power cable.
- Identify Connection Ports:** Locate the power input port on your Moulinex pressure cooker. This port is typically a three-pin receptacle designed to accept an IEC C13 connector.
- Connect to Appliance:** Align the IEC C13 connector end of the new power cable with the power input port on your pressure cooker. Gently push the connector firmly into the port until it is fully seated. Do not force the connection.
- Connect to Power Outlet:** Insert the European Type F (Schuko) plug end of the power cable into a compatible, grounded wall outlet. Ensure the outlet is easily accessible.
- Verify Connection:** Confirm that both ends of the cable are securely connected before powering on your appliance.

4. OPERATING INSTRUCTIONS

Once the power cable is securely connected to both the Moulinex pressure cooker and a functional wall

outlet, the appliance is ready for use according to its own operational manual. The power cable itself does not require specific operational steps beyond proper connection.

- To power on the appliance, use the power button or controls on the pressure cooker itself.
- To disconnect power, always turn off the appliance first, then unplug the cable from the wall outlet. If necessary, then disconnect from the appliance.

5. MAINTENANCE

- **Cleaning:** Disconnect the cable from both the appliance and the wall outlet before cleaning. Wipe the cable with a soft, dry cloth. Do not use abrasive cleaners or immerse the cable in water.
- **Inspection:** Regularly inspect the cable for any signs of damage, such as cuts, fraying, or bent pins. If any damage is observed, discontinue use immediately and replace the cable with an original Moulinex part.
- **Storage:** When not in use, store the cable in a cool, dry place, away from direct sunlight and heat sources. Avoid tightly coiling or bending the cable sharply, as this can cause internal damage.

6. TROUBLESHOOTING

If your Moulinex pressure cooker does not power on after connecting the new cable, consider the following:

- **Check Connections:** Ensure both ends of the power cable are fully and securely inserted into the appliance and the wall outlet.
- **Test Wall Outlet:** Plug another working appliance into the same wall outlet to confirm the outlet is supplying power.
- **Inspect Cable:** Visually inspect the cable for any visible damage. If damaged, replace it.
- **Appliance Issue:** If the cable and outlet are confirmed to be working, the issue may lie with the pressure cooker itself. Refer to your pressure cooker's manual or contact Moulinex customer support.

7. SPECIFICATIONS

- **Brand:** Moulinex
- **Model Number:** SS-993452
- **Color:** White
- **Item Weight:** 140 g
- **Connector Type (Appliance):** IEC C13
- **Plug Type (Wall Outlet):** European Type F (Schuko)

8. COMPATIBLE MOULINEX MODELS

This power cable is compatible with the following Moulinex Cookeo and Cook4Me pressure cooker models. Please verify your appliance's model number, typically found on an identification plate under the device, to ensure compatibility.

- CE7010, CE7011, CE7015, CE7021, CE7038, CE7041, CE7051, CE7061
- CE8511, CE8515, CE8531, CE8558, CE8568
- CY7011, CY7015, CY7018, CY7038
- CY8511, CY8515, CY8518, CY8558

- CZ7001, CZ7101
- And specific versions such as CE701010/87A, CE701100/87A, CE702100/87A, CE703800/87A, CE704110/87A, CE705100/87A, CE706121/87A, CE851100/87A, CE851500/87A, CE853100/87A, CE855800/87A, CE856800/87A, CY701160/87A, CY7011JP/87A.

9. SUPPORT INFORMATION

For further assistance, technical support, or warranty inquiries regarding your Moulinex Removable Power Cable or compatible appliance, please refer to the contact information provided in your Moulinex pressure cooker's original manual or visit the official Moulinex website.

You can also visit the [Moulinex Store on Amazon](#) for additional product information and support resources.