

Manuals.plus /

› Rowenta /

› Rowenta Replacement Fan Blade for Turbo Silence Fan VU2640, VU5640

## Rowenta CS-00139745

# Rowenta Turbo Silence Fan Replacement Blade User Manual

Model: CS-00139745

## INTRODUCTION

---

This manual provides essential information for the installation, maintenance, and troubleshooting of your Rowenta Turbo Silence Fan Replacement Blade. This is an original spare part designed to restore the optimal performance of your compatible Rowenta fan models.

Please read these instructions carefully before proceeding with any installation or maintenance to ensure safe and correct usage.

## SAFETY INSTRUCTIONS


---

Always prioritize safety when handling electrical appliances and their components. Failure to follow these instructions may result in injury or damage.

- **Disconnect Power:** Always unplug the fan from the power outlet before attempting any installation, removal, or maintenance of the fan blade.
- **Use Correct Tools:** Ensure you have the appropriate tools for disassembly and assembly, as specified in your fan's original manual.
- **Handle with Care:** The fan blade may have sharp edges. Handle it carefully to avoid cuts.
- **Keep Away from Children:** Store replacement parts and tools out of reach of children.
- **Inspect for Damage:** Before installation, inspect the new blade for any signs of damage. Do not install a damaged blade.
- **Professional Assistance:** If you are unsure about any step, consult a qualified technician or contact Rowenta customer support.

## PRODUCT OVERVIEW

---

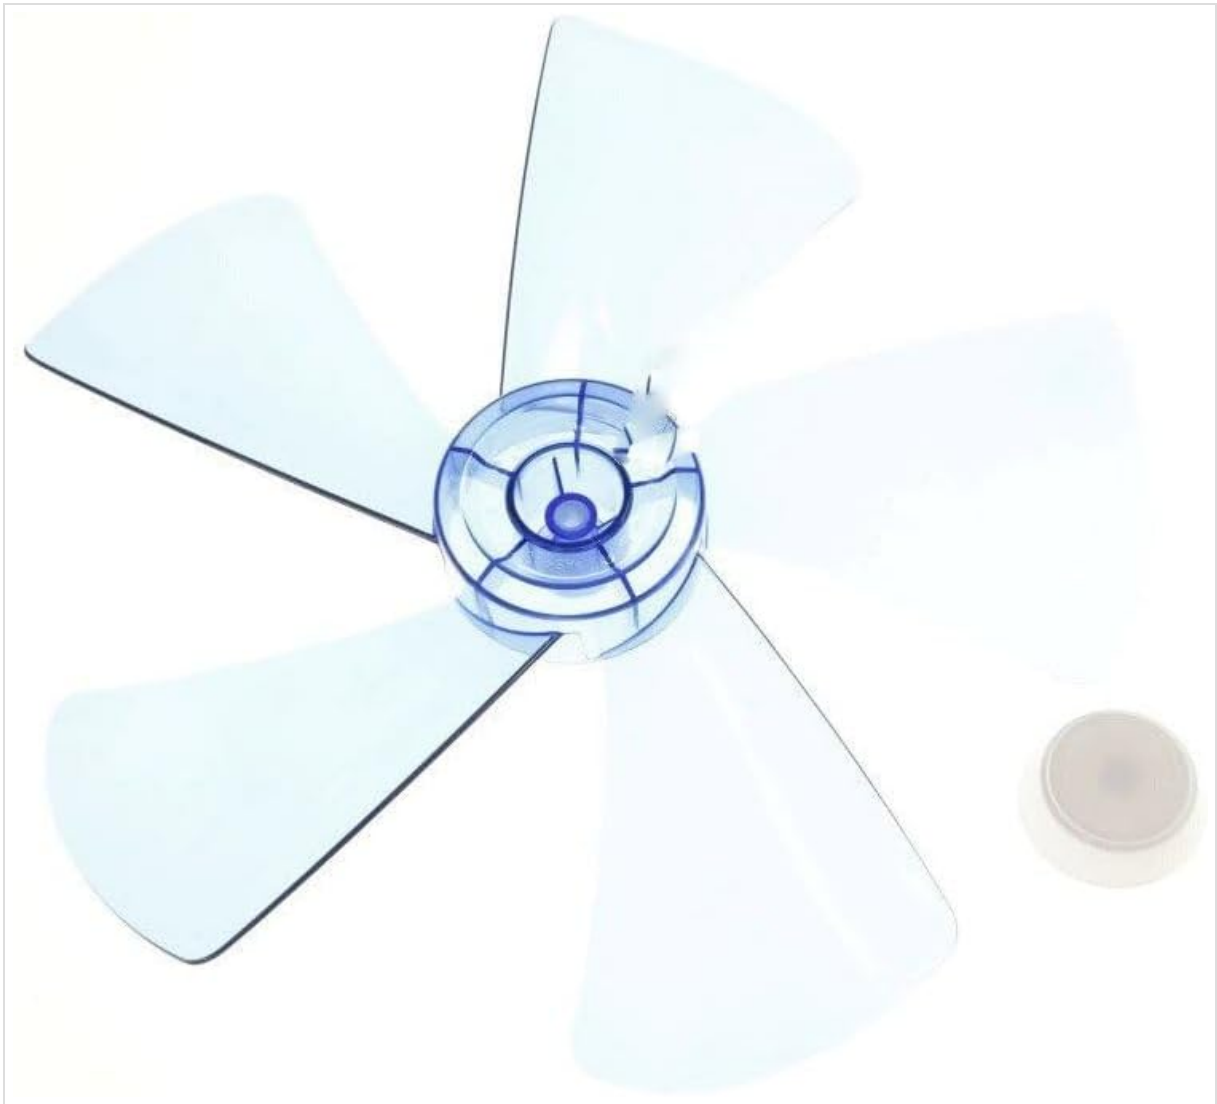

*Image: Rowenta Turbo Silence Fan Replacement Blade. This image shows the five-bladed translucent blue fan propeller with its central hub, designed for efficient air circulation. A small, round, grey cap is also visible, likely for securing the blade.*

This replacement blade is specifically designed for Rowenta Turbo Silence fan models. It features a durable, lightweight construction optimized for quiet operation and powerful airflow. The blade is typically made of a translucent material and has a specific hub design for secure attachment to the fan motor shaft.

## INSTALLATION (SETUP)

Follow these steps to replace the fan blade. Refer to your original fan manual for detailed disassembly instructions if needed.

1. **Prepare the Fan:** Ensure the fan is unplugged from the power outlet. Place it on a stable, flat surface.
2. **Remove Front Grille:** Carefully remove the front protective grille of the fan. This usually involves unlatching clips or unscrewing fasteners.
3. **Remove Retaining Nut/Cap:** Locate the retaining nut or cap that secures the existing fan blade to the motor shaft. Unscrew or unclip it. Note the direction of rotation for unscrewing (often counter-clockwise for fan blades).
4. **Remove Old Blade:** Gently pull the old fan blade straight off the motor shaft. If it's stuck, a slight wiggle might help, but avoid excessive force.
5. **Install New Blade:** Align the new replacement blade with the motor shaft. Ensure the flat side or

keyway on the shaft matches the corresponding slot in the blade's hub. Slide the new blade onto the shaft until it is fully seated.

6. **Secure New Blade:** Reattach and tighten the retaining nut or cap onto the motor shaft, ensuring the blade is firmly secured and does not wobble.
7. **Reattach Front Grille:** Carefully reattach the front protective grille, ensuring all clips are latched or screws are tightened.
8. **Test Fan:** Plug the fan back into the power outlet and test its operation at various speeds to ensure the new blade functions correctly and quietly.

The identification plate with your product data is generally located under the appliance. Compatible models include: VF5660, VU2640, VU5640, VF5660F0/7X0, VU2640F0/7X0, VU2640F1/7X0, VU5640F0/7X0, VU5640F1/7X0.

## OPERATING INSTRUCTIONS

Once the replacement blade is correctly installed, your Rowenta Turbo Silence fan will operate as usual. Refer to your fan's original user manual for specific operating instructions, including speed settings, oscillation functions, and timer controls.

Ensure the fan is placed on a stable surface and that the grilles are clear of obstructions for optimal airflow and safety.

## MAINTENANCE

Regular maintenance helps prolong the life of your fan and its components.

- **Cleaning the Blade:** Periodically, with the fan unplugged, remove the front grille and gently wipe the fan blade with a soft, damp cloth to remove dust and debris. Do not use abrasive cleaners or solvents.
- **Grille Cleaning:** Clean the front and rear grilles as well to ensure unobstructed airflow.
- **Storage:** If storing the fan for an extended period, ensure the blade and fan are clean and dry. Store in a cool, dry place, ideally in its original packaging or covered to prevent dust accumulation.

## TROUBLESHOOTING

If you encounter issues after replacing the fan blade, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Fan not working after blade replacement.	Fan not plugged in; power outlet issue; blade not correctly seated; retaining nut loose.	Ensure fan is securely plugged in. Test the outlet with another device. Unplug, re-seat the blade, and tighten the retaining nut.
Unusual noise or vibration.	Blade not properly secured; blade damaged; debris caught in grille/blade.	Unplug the fan. Check if the blade is firmly secured. Inspect the blade for cracks or bends. Remove any debris from the grilles or blade.
Reduced airflow.	Blade installed backward (if applicable); grilles obstructed by dust.	Unplug the fan. Verify the blade's orientation (though typically only fits one way). Clean the fan blade and grilles thoroughly.

## SPECIFICATIONS

Attribute	Detail
Brand	Rowenta
Model Number (Blade)	CS-00139745
Item Weight	Approximately 100 g
Compatible Fan Models	VF5660, VU2640, VU5640, VF5660F0/7X0, VU2640F0/7X0, VU2640F1/7X0, VU5640F0/7X0, VU5640F1/7X0
Part Type	Original Spare Part (Fan Blade)

## WARRANTY AND SUPPORT

This replacement blade is an original Rowenta part. For specific warranty information regarding spare parts, please refer to the warranty documentation provided with your original Rowenta fan appliance or visit the official Rowenta website.

For further assistance, technical support, or to inquire about other genuine Rowenta spare parts, please visit the official Rowenta website or contact their customer service department. Always ensure you have your fan's model number and the blade's part number (CS-00139745) ready when seeking support.

You can visit the Rowenta store on Amazon: [Rowenta Store](#)