

USARMT Emerson NH000UD-3

Instruction Manual: USARMT Replacement Remote Control for Emerson TVs

Model: NH000UD-3

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your new USARMT NH000UD replacement remote control. This remote is designed to be compatible with a wide range of Emerson LED and LCD Smart Digital TV Box Televisions.

The remote control is preprogrammed and requires no additional setup or programming. Simply insert batteries, and it is ready for use.

2. PRODUCT OVERVIEW

The NH000UD remote control is an ergonomic device designed for comfortable and intuitive use with your Emerson television. Below are images illustrating the front and back of the remote, highlighting key features.





Figure 2.1: Front View of Remote Control

This image displays the front face of the NH000UD remote control, featuring all functional buttons. Key buttons visible include the red Power button, Volume Up/Down, Channel Up/Down, a central navigation pad with an OK button, number keys (0-9), and various function buttons like SOURCE, SAP, BACK, MENU, INFO, SLEEP, FREEZE, and FORMAT.







Figure 2.2: Back View of Remote Control

This image shows the rear side of the NH000UD remote control. The prominent feature is the battery compartment cover, clearly marked with the word 'OPEN', indicating where to access the battery slot for installation or replacement.

3. SETUP

The USARMT NH000UD remote control is designed for immediate use with compatible Emerson TV models without any complex setup or programming. The only required step is battery installation.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.2).
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.
5. The remote control is now ready for use.

4. OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Emerson TV. Point the remote directly at the TV's infrared sensor for optimal performance.

4.1 Basic Functions

- **Power (⏻):** Turns the TV on or off.
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **CH+ / CH-:** Changes the channel up or down.
- **Mute (⏻):** Mutes or unmutes the TV audio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **SOURCE:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menu options.
- **OK:** Confirms selections within menus.
- **BACK:** Returns to the previous screen or menu.
- **INFO:** Displays information about the current program or input.
- **SAP:** Selects Secondary Audio Program (if available).
- **ECO:** Activates or deactivates power-saving modes.
- **PREV.CH:** Switches to the previously viewed channel.
- **SLEEP:** Sets a sleep timer for the TV.
- **FREEZE:** Pauses the current image on screen.

- **FORMAT:** Adjusts the screen aspect ratio or display format.

5. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

5.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads.

5.2 Battery Care

- Replace batteries when the remote's performance degrades or it stops responding.
- Always replace both batteries at the same time.
- Do not mix old and new batteries, or different types of batteries.
- If the remote will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the TV.
- **Some functions not working:**
 - Verify that your Emerson TV model is listed as compatible with the NH000UD remote control.
 - Ensure the TV's firmware is up to date, if applicable.
 - Some advanced TV features may require the original remote or specific TV settings.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the TV's infrared sensor is clean and not obstructed.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Product Model Number	Emerson NH000UD-3
Brand	USARMT
Compatible Devices	Emerson Televisions (various models including LC190EM1, LC220EM1, LC260EM1, LC320EM1, LC320EM1F, LC190EM2, LC220EM2, LC260EM2, LC320EM2, LC370EM2, LC401EM2, LC260EM2A, LC320EM2F, LC401EM2F, LC320EM3F, LC401EM3F, RLC320EM2, RLC370EM2, RLC320EM2F, CLC320EM2F, CLC401EM2F, LC320SL1DS2, LC320SL1DS5, LC320SL1TH1, LC320SL1TH2)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (one TV)
Special Feature	Ergonomic design
Product Dimensions	8 x 2 x 0.5 inches (approximately)
Item Weight	3.2 ounces (approximately)
Batteries Required	2 x AAA (not included)

8. WARRANTY AND SUPPORT

For specific warranty information regarding your USARMT replacement remote control, please refer to the product packaging or contact the retailer from whom you purchased the item. As a replacement part, warranty terms may vary.

For technical support or further inquiries, please contact the manufacturer, USARMT, through their official support channels. Contact information is typically provided with the product or can be found on the manufacturer's website.