

[manuals.plus](#) /

- › [VINABTY](#) /
- › [VINABTY RC5112 Universal TV Remote Control User Manual](#)

VINABTY RC5112

VINABTY RC5112 Universal TV Remote Control User Manual

Brand: VINABTY | Model: RC5112

1. PRODUCT OVERVIEW

The VINABTY RC5112 is a replacement universal remote control designed for a wide range of televisions, including models from HITACHI, JVC, LAURUS, Bush, and Finlux. This remote provides full functionality for your compatible TV, offering an ergonomic design for comfortable use. It operates via infrared technology and requires no programming; simply insert batteries to begin use.





Figure 1: Front view of the VINABTY RC5112 remote control, displaying its full button layout.

2. SETUP GUIDE

2.1 Battery Installation

To power your VINABTY RC5112 remote control, follow these steps for battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

The remote control is now ready for use and does not require any additional programming.





Figure 2: Rear view of the remote control with the battery compartment open for battery insertion.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your VINABTY RC5112 remote control.



Figure 3: Angled view of the remote control, illustrating the button arrangement.

3.1 Basic Functions

- **Power Button (●)**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select TV channels.
- **Volume Up/Down (V+/V-)**: Adjusts the sound volume.
- **Channel Up/Down (P+/P-)**: Changes the TV channel sequentially.
- **Mute Button**: Mutes or unmutes the TV sound.
- **Source Button**: Cycles through available input sources (e.g., HDMI, AV).
- **Menu Button**: Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **Back Button**: Returns to the previous menu or screen.
- **Exit Button**: Closes the current menu or application.

3.2 Advanced Functions

- **INTERNET Button**: Accesses smart TV features or internet browser.
- **EPG (Electronic Program Guide)**: Displays the TV program guide.
- **TEXT Button**: Activates or deactivates Teletext.
- **FAV (Favorites) Button**: Accesses favorite channels list.
- **SLEEP Button**: Sets the TV's sleep timer.
- **SWAP Button**: Switches between the current and previously viewed channel.
- **MULTIMEDIA Button**: Accesses multimedia functions (e.g., USB playback).
- **MY BUTTON 1 / MY BUTTON 2**: Customizable buttons for specific functions (refer to your TV's manual for programming).
- **INFO Button**: Displays information about the current program or input.

4. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, please observe the following:

- **Cleaning**: Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones of the same type (AAA).
- **Storage**: Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal circuitry.

5. TROUBLESHOOTING

If you encounter issues with your VINABTY RC5112 remote control, refer to the following common problems and solutions:

- **Remote Not Responding**:
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.

- Ensure there are no obstructions between the remote and the TV's infrared sensor.
- Confirm the remote is pointed directly at the TV.

- **Specific Buttons Not Working:**

- This may indicate a compatibility issue with a specific TV model or a faulty button. Try cleaning around the button.
- Ensure your TV supports the specific function (e.g., INTERNET button functionality depends on your TV's smart features).

- **Short Operating Range:**

- Replace batteries with new ones.
- Ensure the remote's infrared emitter is clean and unobstructed.

If problems persist after trying these solutions, please contact customer support.

6. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	VINABTY
Model	RC5112
Connectivity Technology	Infrared
Compatible Devices	Television (HITACHI, JVC, LAURUS, Bush, Finlux, etc.)
Controller Type	Button Control
Maximum Range	10 Meters
Power Source	2 x AAA Batteries (not included)
Product Dimensions	20 x 5 x 1 cm
Item Weight	50 g
Special Features	Ergonomic Design
UPC	761895912327

7. WARRANTY AND SUPPORT

This VINABTY remote control is designed for reliable performance. For any questions, technical assistance, or support regarding your product, please refer to the retailer's return policy or contact VINABTY customer service through their official channels. Please have your product model (RC5112) and purchase information ready when contacting support.

