

FOSA fosad0ky8nv51f-01

FOSA Portable Wooden Retro Desktop Speaker Instruction Manual

Model: fosad0ky8nv51f-01

1. INTRODUCTION

This manual provides detailed instructions for the FOSA Portable Wooden Retro Desktop Speaker. This device combines classic aesthetics with modern audio technology, offering Bluetooth connectivity, FM radio, and playback from USB and TF cards. It is designed for versatile use in various environments.

2. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure proper operation and prevent damage or injury:

- Do not connect the charging cable or operate the product with wet hands.
- Avoid storing this product in hot or humid environments.
- When children use the device, parental guidance is required.
- To prevent potential hearing impairment, avoid listening to music at high volumes for extended periods.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x FOSA Portable Wooden Retro Desktop Speaker
- 1 x USB Charging Cable
- 1 x English User Manual



Image: The included USB charging cable for the speaker.

4. PRODUCT OVERVIEW

The FOSEA Portable Wooden Retro Desktop Speaker features a compact design with a wooden finish, combining vintage aesthetics with modern functionality. Below are key components and controls:



Image: Front view of the FOSA Portable Wooden Retro Desktop Speaker, showing the speaker grille, control buttons, and tuning wheel.



Image: Close-up of the speaker's front panel, highlighting the 'BT/MODE' button, playback controls, USB port, TF card slot, and the tuning wheel.

Key Features:

- **Tube Efficiency:** Utilizes multiple capacitors and conventional analog capacitors for enhanced audio performance.
- **Unique Sound Quality:** Designed to deliver a distinct and enjoyable audio experience.
- **Bluetooth CSR 5.0:** Features a stable Bluetooth 5.0 program with aptX support for high-quality wireless audio streaming.
- **Tuning Wheel:** A mechanical deceleration mechanism on the tuning wheel allows for precise sound quality adjustments.
- **5-inch Full-Frequency Paper Basin Trumpet:** Equipped with a 5-inch speaker unit for comprehensive sound reproduction.
- **Innovative Circuit Design:** Offers a warm, real, and dynamic audio experience.
- **Multi-Source Playback:** Supports audio playback via USB drives, TF cards, and FM radio.

5 inch

full frequency paper basin trumpet.



Image: The speaker's front panel with text indicating a "5 inch full frequency paper basin trumpet."

Tuning wheel

mechanical deceleration mechanism could provide sound quality.



Image: Close-up of the tuning wheel, with text highlighting its mechanical deceleration mechanism for sound quality.

Tube efficiency,

using multiple capacitors and conventional analog capacitors.



Image: The speaker's front panel with text indicating "Tube efficiency, using multiple capacitors and conventional analog capacitors."

5. SETUP

5.1 Charging the Speaker

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the USB cable to a standard USB power adapter (5V-1000mAh recommended) or a computer's USB port.
3. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.

5.2 Powering On/Off

Locate the power button (often integrated with the 'BT/MODE' button or a separate switch). Press and hold the power button to turn the speaker on or off. A sound or indicator light will confirm the status change.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Press the 'BT/MODE' button to switch to Bluetooth mode. The speaker will typically emit an audible prompt and an indicator light will flash, indicating it is in pairing mode.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "FOSA Speaker" (or similar name) from the list of found devices.
5. Once connected, the speaker will provide an audible confirmation, and the indicator light will stop flashing. You can now play audio from your device through the speaker.



Image: An illustration showing a smartphone connecting wirelessly to the FOSA speaker via Bluetooth, with text highlighting aptX support and stable signal.

**UNIQUE SOUND QUALITY AND WIRELESS BLUETOOTH,
YOU COULD ENJOY WIRELESS PLAYBACK QUALITY FEELING**



Image: A person enjoying music from the FOSA speaker, emphasizing unique sound quality and wireless Bluetooth playback.

6.2 FM Radio Operation

1. Press the 'BT/MODE' button to cycle through modes until you reach FM Radio mode.
2. Use the tuning wheel to manually scan for radio stations.
3. For automatic scanning (if available), refer to specific button functions on your device.

6.3 USB/TF Card Playback

1. Insert a USB flash drive or a TF (MicroSD) card containing MP3 audio files into the respective port on the speaker.
2. The speaker should automatically detect the storage device and begin playing audio. If not, press the 'BT/MODE' button to switch to USB or TF card mode.
3. Use the playback control buttons (e.g., Play/Pause, Next/Previous Track) to manage your music.

6.4 Volume Control

Adjust the volume using the dedicated volume controls on the speaker, which may be integrated with the tuning wheel or separate buttons. You can also control the volume from your connected Bluetooth device.

7. MAINTENANCE

To ensure the longevity and optimal performance of your FOSA speaker, follow these maintenance tips:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For extended storage, charge the battery to approximately 50% every few months to maintain battery health.

8. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker fully. Press and hold the power button firmly.
No sound from speaker.	Volume too low; Incorrect mode selected; Device not connected.	Increase volume. Press 'BT/MODE' to select correct input. Ensure Bluetooth is paired or USB/TF card is inserted correctly.
Bluetooth connection fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Restart both devices.
Poor FM radio reception.	Weak signal; Environmental interference.	Relocate the speaker to an area with better reception. Extend any external antenna if available.
Audio distortion at high volumes.	Volume set too high.	Reduce the volume level.

9. SPECIFICATIONS

Feature	Specification
Channel	1.0 channel
Speaker Unit	40mm (5-inch full-frequency paper basin trumpet)

Feature	Specification
Frequency Range	90Hz - 20KHz
Impedance	4Ω
USB Charging	USB-5V-1000mAh
Loudspeaker System	Full range magnetic + low frequency boost system
Output Power	3W
Sensitivity	85dB
Input Interface	3.5mm AUX, USB, TF Card
Battery Capacity	1200mAh lithium battery
Bluetooth Version	CSR 5.0 with aptX support
Product Dimensions	4.72 x 3.15 x 2.36 inches
Item Weight	11.6 ounces
Color	Rose wood (other colors may be available)

10. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the seller's policies or contact the FOSA customer support team through the retailer where the product was purchased.

© 2023 FOSA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question