

USARMT NH001UD

USARMT Replacement Remote Control User Manual

Models: NH000UD, NH001UD

INTRODUCTION

This manual provides comprehensive instructions for the USARMT NH000UD and NH001UD replacement remote control. This remote is designed to function as a direct replacement for original Emerson and Sylvania TV remote controls, offering immediate usability without complex setup procedures. Please read this manual thoroughly to ensure proper operation and to maximize your viewing experience.

PRODUCT OVERVIEW

The USARMT NH000UD/NH001UD remote control is pre-programmed for compatibility with a wide range of Emerson and Sylvania television models. It features a standard layout for intuitive control of your television's functions.





Image 1: Front view of the USARMT NH000UD/NH001UD replacement remote control. It is a black, rectangular remote with various buttons for TV operation, including power, volume, channel, menu, and number keys.

Button Functions:

- **Power:** Turns the television on or off.
- **SOURCE:** Selects input sources (e.g., HDMI, AV, Component).
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **Mute:** Mutes or unmutes the television audio.
- **CH+ / CH-:** Changes the television channel up or down.
- **SAP:** Activates or deactivates Secondary Audio Program (SAP) for alternative audio tracks.
- **BACK:** Returns to the previous menu or channel.
- **ECO:** Accesses power-saving or eco-mode settings.
- **MENU:** Opens the main on-screen menu for TV settings.

- **Navigation Arrows** (◀ ▶ ▲ ▼): Navigates through on-screen menus and options.
- **OK**: Confirms selections in menus.
- **INFO**: Displays information about the current program or input.
- **Number Keys (0-9)**: Directly enters channel numbers.
- **PREV.CH**: Switches to the previously viewed channel.
- **SLEEP**: Sets a timer for the TV to automatically turn off.
- **FREEZE**: Pauses the current image on screen (functionality may vary by TV model).
- **FORMAT**: Adjusts the screen aspect ratio or display format.

SETUP

Battery Installation:

The USARMT NH000UD/NH001UD remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use. No additional programming or setup is required.

OPERATING INSTRUCTIONS

This replacement remote control is designed for immediate use with compatible Emerson and Sylvania TV models. Simply point the remote control towards your television and press the desired function button.

- **Power On/Off**: Press the red **Power** button once to turn the TV on or off.
- **Channel Selection**: Use the **CH+** or **CH-** buttons to cycle through channels, or use the **Number Keys (0-9)** to directly enter a channel number.
- **Volume Adjustment**: Press **VOL+** to increase volume and **VOL-** to decrease volume.
- **Menu Navigation**: Press the **MENU** button to access the TV's main menu. Use the **Navigation Arrows** to move between options and **OK** to select.
- **Input Source**: Press the **SOURCE** button to cycle through available input sources (e.g., HDMI 1, HDMI 2, AV).

Ensure there are no obstructions between the remote control and the TV's infrared receiver for optimal performance.

COMPATIBLE TV MODELS

This remote control is compatible with a wide range of Emerson and Sylvania television models, including but not limited to the following:

- **Emerson Models**: LC190EM1, LC220EM1, LC260EM1, LC320EM1, LC320EM1F, LC190EM2, LC220EM2, LC260EM2, LC320EM2, LC370EM2, LC401EM2, LC260EM2A, LC320EM2F, LC401EM2F, LC320EM3F, LC401EM3F, RLC320EM2, RLC370EM2, RLC320EM2F, LC320SL1DS2, LC320SL1DS5, LC320SL1TH1, LC320SL1TH2
- **Emerson/Sylvania Models**: CLC320EM2F, CLC401EM2F, RLC220EM1, RLC320EM1, RLC320EM2, RLC320EM2F, RLC370EM2, RLC220SL1, LC320SL1, LC220SL1, LC190SL1

If your TV model is not listed, but is an Emerson or Sylvania brand, the remote may still be compatible. Please refer to your TV's original manual or contact support for further assistance.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

1. Remote Not Responding:

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote's infrared emitter and the TV's receiver.
- Ensure you are within a reasonable range and pointing the remote directly at the TV.

2. Specific Buttons Not Working:

- This remote is pre-programmed. If a specific button does not work, it might be that the function is not supported by your particular TV model, or the button itself is faulty.
- Try replacing batteries even if other buttons work, as low power can affect some functions.

3. Intermittent Operation:

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

If these steps do not resolve the issue, please contact customer support for further assistance.

SPECIFICATIONS

Model Numbers	NH000UD, NH001UD
Brand	USARMT
Compatible Brands	Emerson, Sylvania, Funai, Philips (for certain models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	8 x 2 x 0.5 inches
Item Weight	3.2 ounces

WARRANTY AND SUPPORT

This product comes with a 30-day hassle-free return policy. For any questions, technical support, or warranty claims, please contact the seller directly through the platform where the purchase was made. Please have your order details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question