

- Manuals.plus /
- > Rosseto /
 - > Rosseto SM303 Multi-Level Riser User Manual

Rosseto SM303

Rosseto SM303 Multi-Level Riser User Manual


Model: SM303 | Brand: Rosseto

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Rosseto SM303 Multi-Level Black Matte Riser. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

The Rosseto SM303 is a 30-inch multi-level riser designed for display purposes. It is constructed from high-grade stainless steel with a special protective coating, making it suitable for demanding commercial environments such as hotels and restaurants.

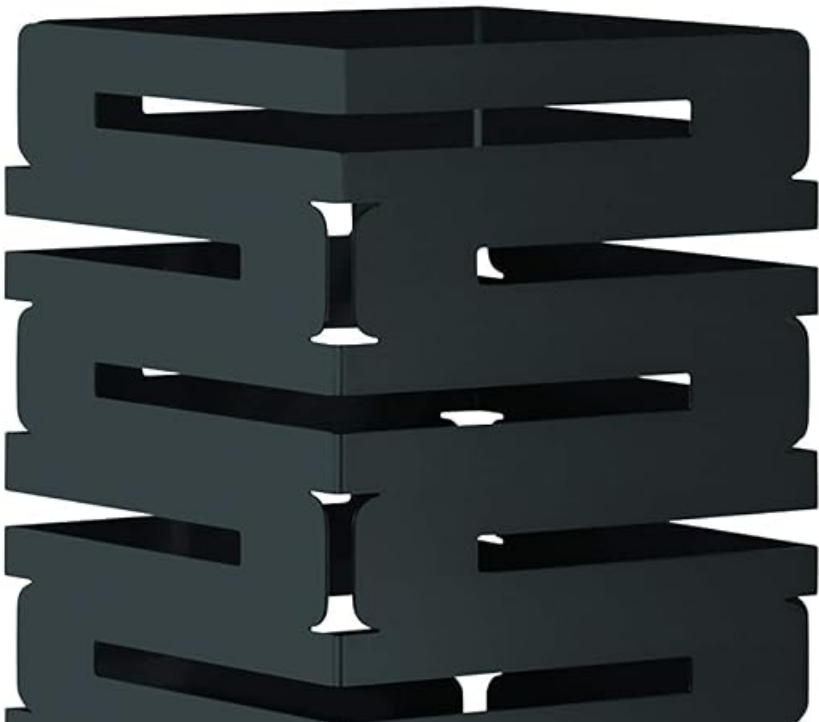

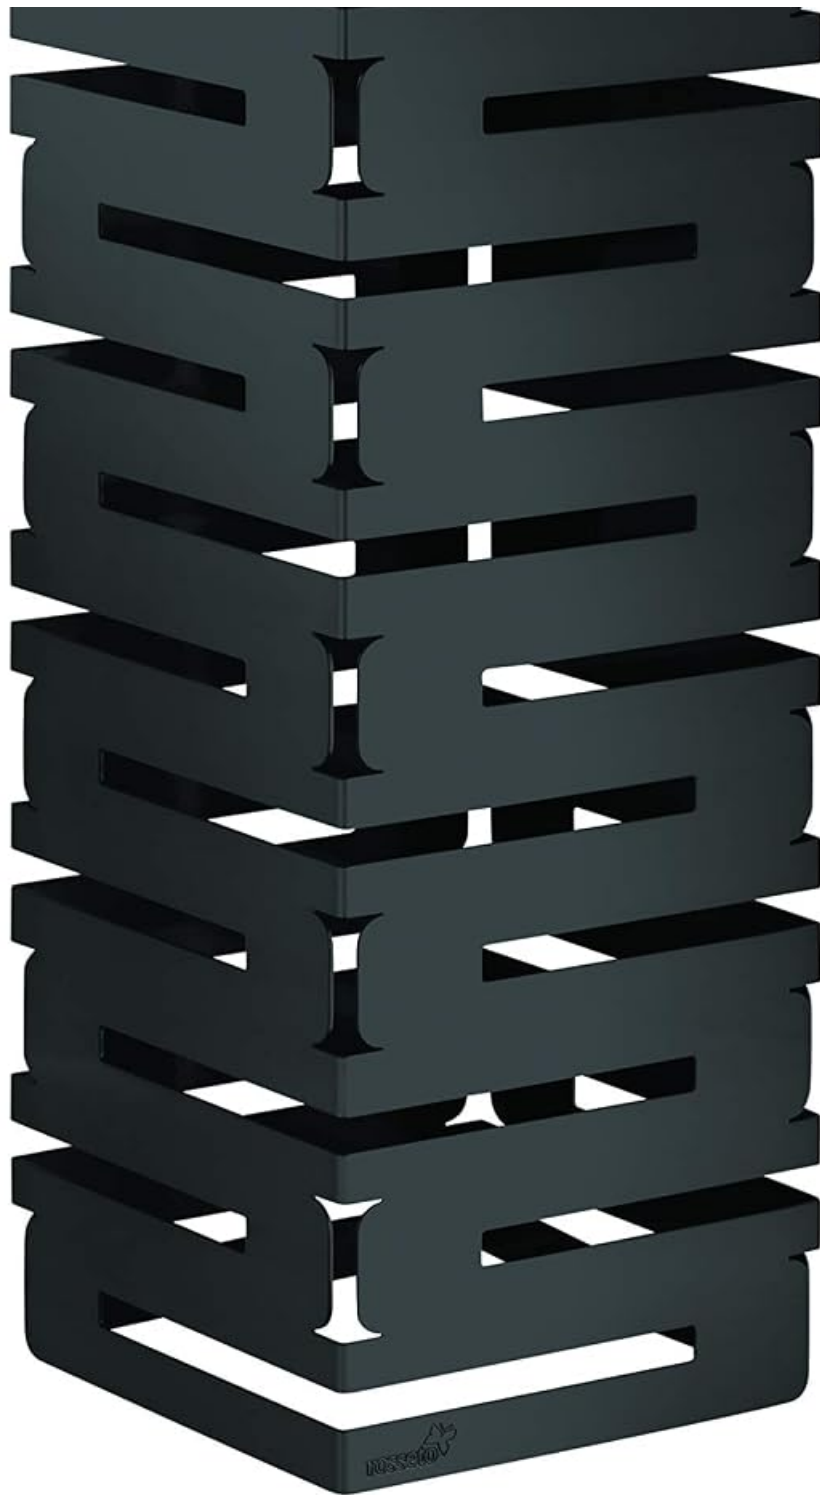


Image: The Rosseto SM303 Multi-Level Black Matte Riser, showcasing its intricate design and matte finish.

Key Features:

- Designed to withstand high-volume use in commercial settings.
- Features an on-trend design that complements various decor styles.
- Presents a clean aesthetic with sharp, crisp lines.

What's in the Box:

- 1 x Rosseto SM303 Multi-Level Riser

SPECIFICATIONS

Product Dimensions	10 x 10 x 31 inches
Product Weight	14 Pounds
Model Number	SM303
Manufacturer	Rosseto - BISS
Material	Stainless Steel with Protective Coating

SETUP

The Rosseto SM303 Multi-Level Riser is designed for immediate use and typically requires no assembly. Follow these steps for initial placement:

- Unpack:** Carefully remove the riser from its packaging. Inspect for any signs of damage during transit.
- Placement:** Choose a stable, flat surface for placement. Ensure the surface can support the weight of the riser and any items placed on it.
- Positioning:** Position the riser according to your display needs. Its multi-level design allows for versatile presentation of various items.

OPERATING INSTRUCTIONS

The SM303 riser is a static display unit. Its operation primarily involves proper loading and arrangement of items.

- Loading:** Place items evenly across the levels of the riser to maintain balance and stability.
- Weight Distribution:** Avoid concentrating heavy items on a single point or level. Distribute weight as evenly as possible.
- Stability Check:** After placing items, gently test the stability of the riser to ensure it is secure and will not tip over.

MAINTENANCE

Regular cleaning and proper care will extend the life and maintain the appearance of your Rosseto SM303 riser.

- Cleaning:** Wipe down the riser with a soft cloth dampened with mild soap and water.
- Drying:** Dry thoroughly with a clean, soft cloth to prevent water spots or streaks.
- Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the protective coating and finish.
- Storage:** When not in use, store the riser in a clean, dry environment to prevent dust accumulation and potential damage.

TROUBLESHOOTING

This section addresses common concerns you might encounter with your riser.

Issue: Riser appears unstable.

- Solution 1:** Ensure the riser is placed on a completely flat and level surface.

- **Solution 2:** Check that items placed on the riser are evenly distributed to avoid imbalance.
- **Solution 3:** Verify that the riser itself is not damaged. If damage is present, discontinue use.

Issue: Surface finish appears dull or stained.

- **Solution 1:** Clean the surface using only mild soap and water, then dry immediately with a soft cloth.
- **Solution 2:** Avoid using abrasive cleaning tools or harsh chemicals, which can damage the matte finish.

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or replacement parts, please contact Rosseto customer service directly. Refer to the original purchase documentation or the manufacturer's official website for contact details.

Manufacturer: Rosseto - BISS

© 2024 Rosseto. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07F1FL94W>

More documents and user manuals: <https://manuals.plus/>