

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AA59-00607A Remote Control User Manual for Samsung Smart LCD LED HDTV

ECONTROLLY RE-AA59-00607A

ECONTROLLY AA59-00607A Remote Control User Manual

For Samsung Smart LCD LED HDTV Models

1. PRODUCT OVERVIEW

This manual provides instructions for the ECONTROLLY AA59-00607A replacement remote control, designed for use with various Samsung Smart LCD LED HDTV models. This remote offers direct functionality without the need for programming.





Figure 1: Front view of the ECONTROLLY AA59-00607A remote control, showing all buttons and layout.



Figure 2: Angled view of the ECONTROLLY AA59-00607A remote control, highlighting its ergonomic design.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

2.2 Initial Use

This remote control does not require any programming or setup. Once new alkaline batteries are correctly installed, the remote is ready for immediate use with compatible Samsung televisions.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Samsung television's infrared sensor. Ensure there are no obstructions between the remote and the TV.

3.1 Basic Functions

- **Power (U)**: Turns the TV on or off.
- **Source**: Selects the input source (e.g., HDMI 1, AV, Component).
- **Number Buttons (0-9)**: Directly select TV channels.
- **Volume (+/-)**: Adjusts the volume level.
- **Mute**: Mutes or unmutes the TV sound.
- **Channel (CH ^/v)**: Changes TV channels up or down.
- **Menu**: Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter)**: Navigate through menus and confirm selections.
- **Return**: Returns to the previous menu or screen.
- **Exit**: Exits the current menu or function.

3.2 Advanced Functions

- **TTX/MIX**: Teletext functions.
- **PRE-CH**: Returns to the previously viewed channel.
- **MEDIA.P**: Accesses media playback functions.
- **HDMI**: Directly switches to an HDMI input.
- **TOOLS**: Accesses quick settings or tools menu.
- **INFO**: Displays information about the current program or input.
- **Color Buttons (A, B, C, D)**: Used for specific functions within certain TV applications or menus, as indicated on screen.
- **P.MODE (Picture Mode)**: Cycles through picture modes.
- **P.SIZE (Picture Size)**: Adjusts the screen aspect ratio.
- **SRS**: Activates or deactivates SRS sound enhancement.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback.

3.3 Compatible Models

This remote control is compatible with various Samsung Smart LCD LED HDTV models, including but not limited to:

- UE19ES4000, UE22ES5000, UE22ES5000W, UE26EH4000W
- UE32EH4000, UE32EH4000K, UE32EH4000W, UE32EH4003, UE32EH4003W
- UE32EH5200, UE37EH5000K, UE39EH5003W, UE40EH500

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

4.3 Storage

Store the remote control in a dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote control is compatible with your specific Samsung TV model (refer to Section 3.3).
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the non-functional buttons, to remove any dirt or debris.
 - If only a few buttons are unresponsive after checking batteries and cleaning, the remote may be damaged and require replacement.
- **No programming required:** This remote control is designed to work immediately after battery installation. If you are prompted for programming, ensure your TV model is listed as compatible.

6. SPECIFICATIONS

- **Model Number:** RE-AA59-00607A
- **Brand:** ECONTROLLY
- **Compatible Devices:** Television (Samsung Smart LCD LED HDTV)
- **Power Source:** 2 x AAA Batteries (Alkaline recommended)
- **Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 1 ounce (approximately, without batteries)
- **Color:** Black
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of

purchase or contact the seller directly. As a replacement product, warranty terms may vary.

© 2023 ECONTROLLY. All rights reserved.