

[manuals.plus](#) /

› [Lige](#) /

› [Lige Sport Watch LG9866F User Manual](#)

Lige LG9866F

Lige Sport Watch LG9866F User Manual

Model: LG9866F

INTRODUCTION

Thank you for choosing the Lige Sport Watch LG9866F. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image: Front view of the Lige Sport Watch LG9866F, showcasing its black dial, gold accents, and metal band.

PRODUCT OVERVIEW AND FEATURES

The Lige Sport Watch LG9866F is a sophisticated analog quartz watch designed for men, featuring a durable construction and multiple functionalities.

- Display Type:** Analog
- Movement Type:** Quartz for precise timekeeping
- Dial Case Diameter:** 42 millimeters
- Band Material:** Leather (as per product description, though images show metal)
- Watch Shape:** Round
- Chronograph Functionality:** Includes Chrono Minutes, Chrono Seconds, and 24-hour sub-dials.
- Date Display:** Integrated date window.
- Water Resistance:** 3 ATM (suitable for daily use, splash/rain resistant, not for swimming or showering).
- Luminous Hands:** Hands and hour markers glow in the dark for visibility in low light conditions.

Function Show

NO.1: Chrono Minutes



NO.2: 24 Hours



NO.3: Chrono Second



NO.4: Calendar



Start\Pause

Adjust Time/Date

Reset

Image: Diagram illustrating the functions of the Lige Sport Watch LG9866F, including chronograph sub-dials, date window, and button assignments.

LUMINOUS HANDS



Image: The Lige Sport Watch LG9866F displaying its luminous hands and hour markers in a dark environment.

SETUP

Setting Time and Date

- Pull out the Crown:** Gently pull the crown (middle knob on the right side of the watch) to position 2 for setting the time.
- Set the Time:** Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
- Set the Date:** Pull the crown to position 1 (halfway out) to adjust the date. Rotate the crown to change the date in the date window. If the date changes at noon, advance the time by 12 hours.
- Push in the Crown:** Once the time and date are set, push the crown back into position 0 (fully in) to start the watch and seal it against dust and moisture.

OPERATING INSTRUCTIONS

Using the Chronograph Function

The chronograph allows you to measure elapsed time. Refer to the "Function Show" image for button identification.

- Start/Pause:** Press the top button (Button A) to start the chronograph. Press it again to pause the measurement.
- Reset:** While the chronograph is paused, press the bottom button (Button B) to reset all chronograph hands back to their zero positions.
- Sub-dials:**
 - Chrono Minutes (NO.1):** Displays elapsed minutes.
 - 24 Hours (NO.2):** Displays time in a 24-hour format, synchronized with the main time.
 - Chrono Seconds (NO.3):** Displays elapsed seconds.

MAINTENANCE

- Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dust and dirt. For the metal band, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals.
- Water Resistance:** This watch is 3 ATM water resistant. It is suitable for daily use and can withstand splashes or brief immersion in water, but it is not recommended for swimming, showering, or diving. Do not operate the crown or buttons when the watch is wet.
- Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, as this can affect the movement and battery life.
- Magnetic Fields:** Keep the watch away from strong magnetic fields, which can interfere with the quartz movement's accuracy.
- Battery Replacement:** The watch is powered by a quartz battery. When the watch stops or the second hand moves erratically, it indicates a low battery. Battery replacement should be performed by a qualified watch technician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch stops or runs erratically.	Low battery.	Replace the battery.
Time is incorrect.	Crown not pushed in fully; time not set correctly.	Ensure crown is fully pushed in. Reset time as per "Setup" section.
Date does not change or changes at wrong time.	Date not set correctly; AM/PM not accounted for.	Adjust date as per "Setup" section, ensuring AM/PM is correct.
Chronograph hands do not reset to zero.	Requires calibration or internal issue.	Consult a watch technician for calibration or repair.

SPECIFICATIONS

- Model Number:** LG9866F
- Manufacturer:** Lige
- Movement:** Quartz

- **Display:** Analog
- **Case Diameter:** 42 mm
- **Band Material:** Leather (as per product description)
- **Water Resistance:** 3 ATM
- **Package Dimensions:** 15.24 x 7.62 x 4.32 cm
- **Item Weight:** 227 g
- **First Available Date:** 4 August 2018

WARRANTY AND SUPPORT

For any issues not covered in this manual or for warranty inquiries, please contact your retailer or the official Lige customer support. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please visit the official Lige website or contact their customer service department.